

# Xmatic Compact

## Instruction Manual

**Original Instructions**



**CE**

Doc. no.: 16887025-02\_A\_en  
Date of release: 2024.04.25

---

**Copyright**

The contents of this manual are the property of Struers ApS. Reproduction of any part of this manual without the written permission of Struers ApS is not allowed.

All rights reserved. © Struers ApS.

---

# Table of Contents

<b>1 About this manual</b> .....	<b>7</b>
1.1 Accessories and consumables .....	7
<b>2 Safety</b> .....	<b>7</b>
2.1 Intended use .....	7
2.2 Safety functions - (SF) .....	8
2.3 Xmatic Compact safety precautions .....	10
2.3.1 Read carefully before use .....	10
2.4 Safety messages .....	11
2.5 Safety messages in this manual .....	12
<b>3 Get started - introduction</b> .....	<b>15</b>
3.1 Device description .....	15
3.2 Overview of the machine .....	17
3.3 Overview of the display .....	21
<b>4 Installation</b> .....	<b>24</b>
4.1 Unpack the machine .....	24
4.2 Lift the machine .....	25
4.3 Check the packing list .....	28
4.4 At the final location .....	29
4.5 Power supply .....	30
4.6 Noise .....	32
4.7 The recirculation unit - (option) .....	33
4.7.1 Fill the recirculation tank .....	34
4.7.2 Connect the recirculation unit to the machine .....	35
4.7.3 Place the filter bag in the recirculation unit .....	36
4.8 Compressed air supply .....	36
4.9 Connect to the water inlet and outlet .....	37
4.10 Connect to an exhaust system .....	39
4.11 Adjust the water flow rate .....	40
4.12 Install a beacon (option) .....	41
4.13 Network connection .....	41
<b>5 Transport and storage</b> .....	<b>42</b>
5.1 Storage .....	42
5.2 Transport .....	43

---

<b>6 Start-up - the first time</b> .....	<b>44</b>
6.1 Log in as an Administrator .....	44
6.2 Select language and measurement system .....	45
6.3 Place the MD surfaces in the MD elevator .....	45
6.4 Place the bottles in the bottle rack module .....	46
6.4.1 Alcohol and soap .....	47
6.4.2 Alcohol separator bottle (option) .....	48
<b>7 Operate the device</b> .....	<b>49</b>
7.1 Clamp and level the specimens .....	49
7.2 Access the work zone .....	49
7.3 The specimen holder .....	50
7.3.1 Place and remove the specimen holder .....	50
7.3.2 Detect the number of specimens .....	51
7.4 Methods .....	53
7.4.1 Struers methods .....	53
7.4.2 Custom methods .....	59
7.5 The preparation process .....	63
7.5.1 Prepare the specimen holder for the Xmatic Compact with conveyor .....	63
7.5.2 Prepare the specimen holder for the Xmatic Compact without conveyor .....	63
7.5.3 Step selection .....	64
7.5.4 Indication of missing consumables .....	65
7.5.5 Start the preparation process .....	66
7.5.6 Inspect the specimens .....	67
7.5.7 Open the MD-elevator .....	68
7.5.8 Pause the ongoing process .....	69
7.6 Beacon (option) .....	70
7.7 History - log file reporting .....	71
<b>8 Configuration</b> .....	<b>73</b>
8.1 Preparation .....	74
8.1.1 Configure the MD grinding surface .....	74
8.2 Consumables .....	75
8.3 Custom consumables .....	78
8.4 Consumables Lifetime .....	83
8.5 Cleaning Templates .....	85
8.5.1 Configure a new cleaning template from a copy .....	85
8.5.2 Add a new cleaning template .....	87
8.5.3 Pre-cleaning steps .....	88
8.6 User settings .....	89
8.7 Machine settings for Xmatic Compact with conveyor .....	89

8.7.1 Eject empty tray .....	90
8.7.2 Number of specimens .....	91
8.8 System settings .....	92
<b>9 Maintenance and service - Xmatic Compact .....</b>	<b>93</b>
9.1 General cleaning .....	93
9.2 When necessary .....	94
9.2.1 Air filter .....	94
9.2.2 Clean the touch screen .....	94
9.2.3 The bottles and bottle rack .....	95
9.2.4 Clean the tubes .....	95
9.2.5 Replace and clean the aluminum oxide stick and the dresser tip .....	100
9.2.6 Clean the MD arm .....	101
9.2.7 The bowl liner .....	102
9.2.8 Maintenance of the MD-Disc .....	104
9.2.9 Clean the MD elevator mirrors .....	106
9.2.10 MD surface .....	106
9.3 Weekly .....	107
9.3.1 The work zone .....	107
9.3.2 The specimen mover head and rails .....	108
9.3.3 The main safety cover .....	109
9.3.4 Ultrasonic cleaning station - (option) .....	109
9.3.5 High pressure cleaning station .....	111
9.3.6 Empty the alcohol separator bottle (option) .....	111
9.4 Monthly .....	113
9.4.1 Recirculation unit - Optional .....	113
9.5 Annually .....	114
9.5.1 Main safety cover .....	114
9.5.2 Test the safety devices .....	115
9.6 Service and repair .....	116
9.7 Disposal .....	117
9.7.1 Environmental considerations .....	117
<b>10 Spare parts .....</b>	<b>117</b>
<b>11 Troubleshooting .....</b>	<b>118</b>
11.1 Access the work zone in case of power failure .....	120
<b>12 Technical data .....</b>	<b>122</b>
12.1 Technical data sheet - Xmatic Compact with vertical conveyor .....	122
12.2 Technical data sheet - Xmatic Compact without vertical conveyor .....	127
12.3 Volatile memory .....	132
12.4 Terms and definitions - volatility .....	134

---

12.5 Safety Related Parts of the Control System (SRP/CS) .....	134
12.6 Diagrams .....	136
12.7 Legal and regulatory information .....	140
<b>13 Manufacturer .....</b>	<b>140</b>
<b>Declaration of Conformity .....</b>	<b>141</b>

# 1 About this manual

**CAUTION**

Struers equipment must only be used in connection with and as described in the Instruction Manual supplied with the equipment.

**Note**

Read the Instruction Manual carefully before use.

**Note**

If you want to view specific information in detail, see the online version of this manual.

## 1.1 Accessories and consumables

**Accessories**

For information about the available range, see [the Xmatic accessories overview on the Struers website](http://www.struers.com) (<http://www.struers.com>).

**Consumables**

The machine is designed to be used only with Struers consumables specifically designed for this purpose and this type of machine.

Other products may contain aggressive solvents, which dissolve e.g. rubber seals. The warranty may not cover damaged machine parts (e.g. seals and tubes), where the damage can be directly related to the use of consumables not supplied by Struers.

For information about the available range, see: [The Struers Website](http://www.struers.com) (<http://www.struers.com>).

# 2 Safety

## 2.1 Intended use

Xmatic Compact is intended for professional automatic materialographic grinding, polishing and cleaning of materials for further materialographic preparation. The machine is only to be operated by skilled/trained personnel. The machine is designed to be used with Struers consumables specially designed for this purpose and this type of machine.

The machine is for use in a professional working environment (e.g. a materialographic laboratory).

**Do not use the machine for the following** Preparation of materials other than materials suitable for materialographic studies. The machine must not be used for any type of explosive and/or flammable material, or materials which are not stable during machining, heating or pressure.

### **Models**

Xmatic Compact with high pressure cleaning

Xmatic Compact with high pressure cleaning and ultra-sonic cleaning

Xmatic Compact with high pressure cleaning and vertical conveyor

Xmatic Compact with high pressure cleaning, ultra-sonic cleaning and vertical conveyor

Optional: Recirculation unit for MD grinding/polishing station.

## **2.2 Safety functions - (SF)**


The machine is equipped with the following safety devices:

- Emergency stops - SF-1  
Stops all hazardous movements
- Limited speed function, mover head - SF-4  
Stops the motor if the rotational speed is exceeded
- Main safety cover interlock, hazardous movements - SF-5  
Prevents any movement in the work zone when the main safety cover is open
- Main safety cover interlock, water and ethanol - SF-5A  
Prevents water and ethanol from being dosed when the main safety cover is open
- Main safety cover interlock with locking device - SF-6  
Prevents access to any moving part in case of after-run or loss of power
- MD elevator door locking device - SF-7  
Prevents the elevator from moving when the door is open
- MD elevator door locking device - SF-8  
Prevents access to the MD elevator in case of after-run or loss of power
- Vertical conveyor doors interlock - SF-9  
Prevents movements in the vertical conveyor when the door is open
- Recirculation unit doors interlock, MD station - SF-10  
Prevents the pumps from operating when the door is open
- Alcohol exhaust timer - SF-12  
Evacuates alcohol fumes from work zone area




## Emergency stops

### With conveyor

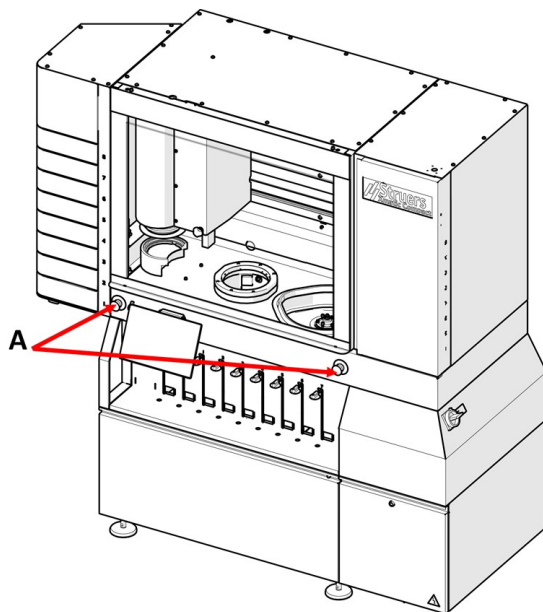

### Without conveyor

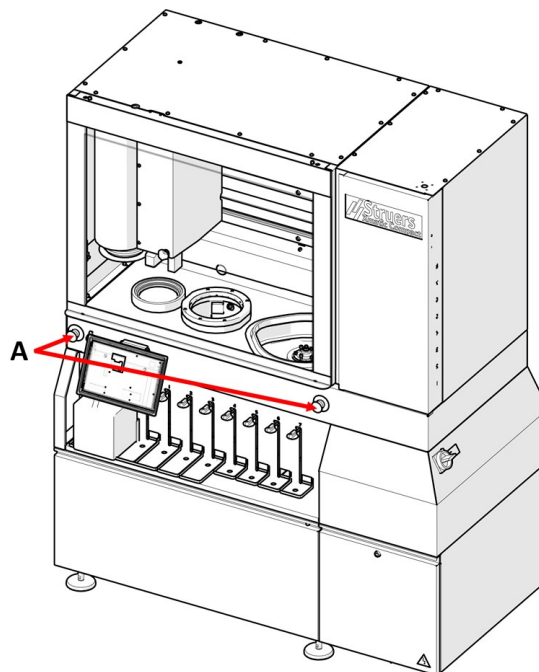

**A** Emergency stops


### Access the preparation area during preparation

Once the machine has completed the preparation, it can take up to 3 minutes before you can open the main safety cover.

If you use alcohol, fumes must be removed from the main chamber via the exhaust function.

### Electrical compartment - residual voltage

	<b>WARNING</b>	
		 <b>WARNING</b> <b>Shock hazard.</b> Residual voltage exists when power is removed. Do not open cabinet for 15 minutes after removing power.

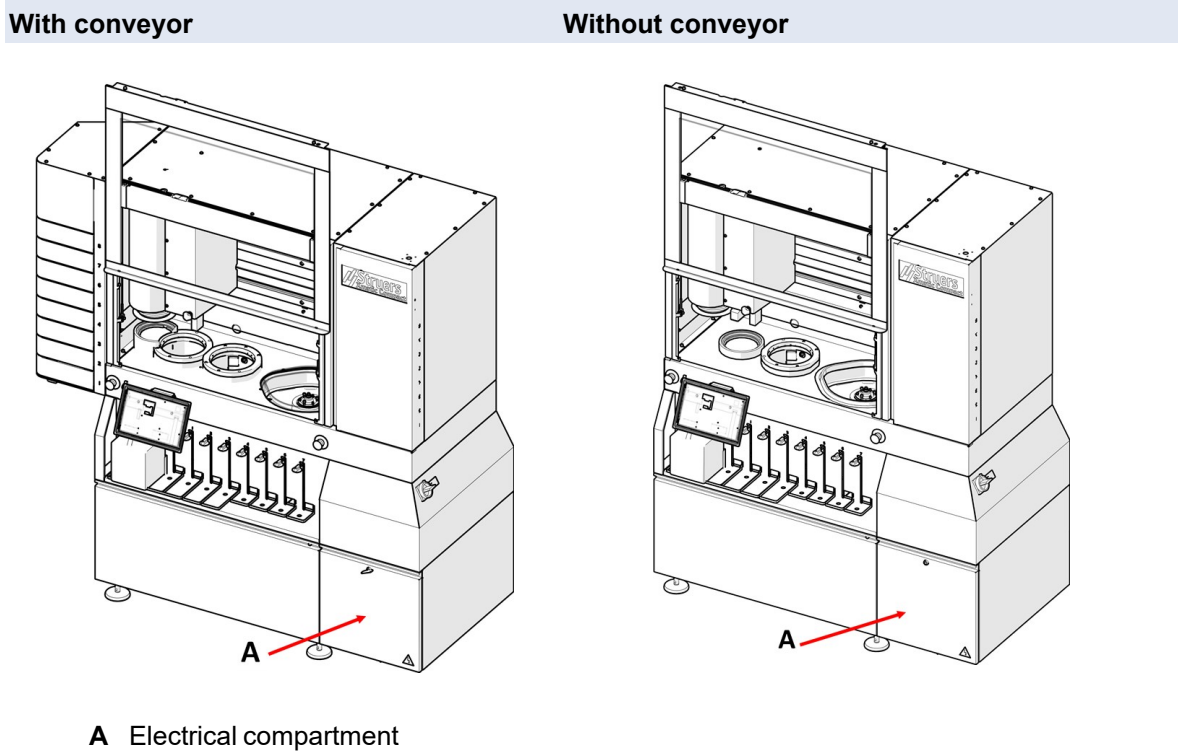

## 2.3 Xmatic Compact safety precautions

### 2.3.1 Read carefully before use

#### Specific safety precautions - residual risks

1. Ignoring this information and mishandling of the equipment can lead to severe bodily injuries and material damage.
2. Make sure that the actual electrical power supply voltage corresponds to the voltage stated on the type plate of the machine. The machine must be earthed (grounded).
3. Switch off the machine, disconnect the electrical power cable before you dismantle the machine or install additional components.
4. Connect the machine to a cold water tap. Make sure that the water connections are leak-proof and that the water outlet is working. Cut off the water supply if the machine is not going to be used for a long period of time.
5. Make sure that the emergency stop is in working order.
6. When using specimen holders, make sure that all specimens are securely clamped and properly balanced before you start the preparation process.
7. Wear suitable gloves to protect fingers from abrasives and warm/sharp specimens.
8. The machine is designed to be used only with Struers consumables specifically designed for this purpose and this type of machine.

9. You must connect the machine to an exhaust system. We recommend the use of a system with monitoring.
10. Shock hazard. Residual voltage exists when power is removed. Do not open cabinet for 15 minutes after removing power.

### General safety precautions

1. The machine must be installed in compliance with local safety regulations. All functions on the machine and any connected equipment must be in working order.
2. The operator must read the safety precautions and Instruction Manual, as well as relevant sections of the manuals for any connected equipment and accessories.  
The operator must read the Instruction Manual and, where applicable, the Safety Data Sheets for the applied consumables.
3. Struers equipment must only be used in connection with and as described in the Instruction Manual supplied with the equipment.
4. Dismantling of any part of the equipment, during service or repair, should always be performed by a qualified technician (electromechanical, electronic, mechanical, pneumatic, etc.).
5. If you observe malfunctions or hear unusual noises, switch off the machine and call technical service.
6. If the equipment is subjected to misuse, incorrect installation, alteration, neglect, accident or incorrect repair, Struers will accept no responsibility for damage to the user or the equipment.

## 2.4 Safety messages

Struers uses the following signs to indicate potential hazards.



### **ELECTRICAL HAZARD**

This sign indicates an electrical hazard which, if not avoided, will result in death or serious injury.



### **DANGER**

This sign indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.



### **WARNING**

This sign indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.



### **CAUTION**

This sign indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.



**CRUSHING HAZARD**

This sign indicates a crushing hazard which, if not avoided, could result in minor, moderate or serious injury.



**HEAT HAZARD**

This sign indicates a heat hazard which, if not avoided, can result in minor, moderate or serious injury.



**Emergency stop**

Emergency stop

**General messages**



**Note**

This sign indicates that there is a risk of damage to property, or a need to proceed with special care.



**Hint**

This sign indicates that additional information and hints are available.

## 2.5 Safety messages in this manual



**WARNING**

If there are visible signs of deterioration or damage to the main safety cover, it must be replaced immediately. Contact Struers Service.



**WARNING**

Safety critical components must be replaced after a maximum lifetime of 20 years. Contact Struers Service.



**WARNING**

Do not use the machine with defective safety devices. Contact Struers Service.



**WARNING**

In case of fire, alert bystanders, the fire brigade and cut power. Use a powder fire extinguisher. Do not use water.



**WARNING**

		<b>WARNING</b>
	<b>Shock hazard.</b> Residual voltage exists when power is removed. Do not open cabinet for 15 minutes after removing power.	

**WARNING**

Always wear protective gloves and safety goggles while you empty the alcohol bottle.

**WARNING**

The machine and its parts have been designed to operate 16 hours daily/220 days annually. If used as indicated, the safety critical components must be replaced after a maximum lifetime of 20 years.

If you use the machine for longer periods of time than indicated, the safety critical components must be replaced sooner.

Contact Struers Service.

**ELECTRICAL HAZARD**

Disconnect the electrical power supply before installing electrical equipment.

**ELECTRICAL HAZARD**

The machine must be earthed (grounded).

**ELECTRICAL HAZARD**

Make sure that the actual electrical power supply voltage corresponds to the voltage stated on the type plate of the machine.

Incorrect voltage can damage the electrical circuit.

**ELECTRICAL HAZARD**

The equipment is protected by a safety insulation transformer.

Make sure that the adequate Ik min level is present.

Contact a qualified electrician to verify the solution.

Always follow local regulations.

**ELECTRICAL HAZARD**

The pump of the recirculation cooling unit must be earthed (grounded).

Make sure that the electrical power supply voltage corresponds to the voltage stated on the type plate of the pump.

Incorrect voltage can damage the electrical circuit.

**ELECTRICAL HAZARD**

Disconnecting the unit from the electrical power supply must only be done by a qualified technician.

**CRUSHING HAZARD**

Take care of your fingers when handling the machine.

Wear safety shoes when handling heavy machinery.

**CRUSHING HAZARD**

Always wear safety shoes when handling specimen holders, as they can be heavy.



**CAUTION**

Struers equipment must only be used in connection with and as described in the Instruction Manual supplied with the equipment.



**CAUTION**

Do not use Xmatic Compact if it is damaged.



**CAUTION**

If power is interrupted during operation, the main safety cover and the MD elevator door will remain locked until power returns.



**CAUTION**

The safety devices must be tested at least once a year.



**CAUTION**

Testing should always be performed by a qualified technician (electromechanical, electronic, mechanical, pneumatic, etc.).



**CAUTION**

Prolonged exposure to loud noises may cause permanent damage to a person's hearing.  
Use hearing protection if the exposure to noise exceeds the levels set by local regulations.



**CAUTION**

Do not use the machine with non-compatible accessories or consumables.



**CAUTION**

Wear suitable gloves to protect fingers from abrasives and warm/sharp specimens.



**CAUTION**

Make sure that the machine is level.



**CAUTION**

The machine must not operate when it is resting on its wheels.



**CAUTION**

Avoid skin contact with the coolant additive.

**CAUTION**

The recirculation tank is very heavy when it is full.

**CAUTION**

Place the recirculation unit in its final position, or make sure that you can easily push it into position before filling the tank.

**CAUTION**

The pressure of the cooling fluid supplied to the machine must be max. 2 bar.

**CAUTION**

You must connect the machine to an exhaust system. We recommend the use of a system with monitoring.

**CAUTION**

In case of power failure, do not use excessive force when you turn the triangular key to access the work zone. The lock could be damaged.

## 3 Get started - introduction

### 3.1 Device description

Xmatic Compact is an automatic machine for materialographic grinding, polishing and cleaning.

The operator selects the preparation parameters, the grinding/polishing surfaces, and suspension/lubricant to be used for the method. There are standard preparation and cleaning methods on Xmatic Compact, and customized methods can be added.

The operator starts the process by opening the main safety cover and places a specimen holder in the pick-up station for specimen holders. The operator can place 1 specimen holder at a time.

On the Xmatic Compact with vertical conveyor the operator starts the process by placing a specimen holder in a drawer on the vertical conveyor. The operator can place up to 8 specimen holders in the vertical conveyor.

When a specimen holder is placed in the machine or the vertical conveyor, the machine automatically detects the specimen holder and indicates it on the graphical user interface (GUI). The number of specimens in the specimen holder can automatically be identified by the machine to determine the total force needed for the method.

The operator selects between different preparation methods for each individual specimen holder. The method contains all information needed for the preparation (grinding/polishing steps, dosing levels, cleaning steps).

The operator presses "start" to initiate the process based on the methods selected for each specimen holder. If an Xmatic Compact with vertical conveyor is used, the machine delivers the

specimen holder to the pick-up station from where the mover head picks it up. If an Xmatic Compact without vertical conveyor is used, the operator places the specimen holder at the pick-up station. Depending on the selected method, the mover head brings the specimen holder through each of the process steps.

A typical method includes a series of grinding and or polishing steps are carried out on the MD grinding/polishing station. In the MD station, the machine can automatically exchange the MD surfaces and position the doser arm over the MD surface.

During a step on the MD station the machine automatically doses the selected consumables or water. Between each step on the MD station the specimen holder is typically cleaned and dried.

After the last process step, the mover head delivers the specimen holder back to the pick-up station from where the vertical conveyor brings it back to the drawer. The drawer opens automatically to indicate that the specimens in the specimen holder are ready for inspection. On an Xmatic Compact without vertical conveyor, the operator opens the main safety cover and takes out the specimen holder.

The Xmatic Compact with vertical conveyor is able to automatically process all the specimen holders in the vertical conveyor without operator intervention.

The Xmatic Compact recognizes all Struers consumables present in the machine. This allows the machine to prompt the operator about missing or low consumable levels for the selected methods.

The main safety cover of Xmatic Compact locks when the operator starts the machine, and it remains locked until all hazardous movements are stopped.

On the Xmatic Compact with vertical conveyor the main safety cover remains locked. The operator can manually unlock the main safety cover when all hazardous movements has come to a stop.

It is not possible for the machine to run a process while the main safety cover is open.

#### **Cleaning**

Cleaning is done via high-pressure cleaning and/or ultrasonic cleaning depending on the selected cleaning method. These types of cleaning are carried out in two separates chambers. Alcohol can be applied during cleaning and drying of water-sensitive materials, and it is a part of the high-pressure cleaning process. Concentrated soap can also be applied during the high-pressure cleaning process.

#### **MD elevator**

MD surfaces will automatically be exchanged depending on the selected method. Up to 8 different grinding/polishing surfaces can be placed in the MD elevator.

The operator can access the MD elevator whenever the machine is idle. If a process is running, it should be paused in order to access the MD elevator.

#### **Bottle rack**

Several suspensions and lubricant including oxide polishing suspension can be chosen depending on the method. The bottle rack can fit up to 7 bottles of consumables and 1 for alcohol and 1 for concentrated soap. The consumable bottles are connected to the machine via a connector dedicated for each individual bottle position.

The operator can change a suspension/lubricant bottle while the machine is preparing a specimen holder. However, this is not the case if the machine is using the suspension/lubricant in question.


If a bottle is removed and a new is inserted, the GUI will ask if it is necessary to automatically flush, and the tube can be inserted in the flush function before it is attached to the new bottle.

The machine is equipped with 2 emergency stops. If one of the emergency stops is activated, all hazardous moving parts are stopped.




## 3.2 Overview of the machine

Front view, Xmatic Compact with conveyor

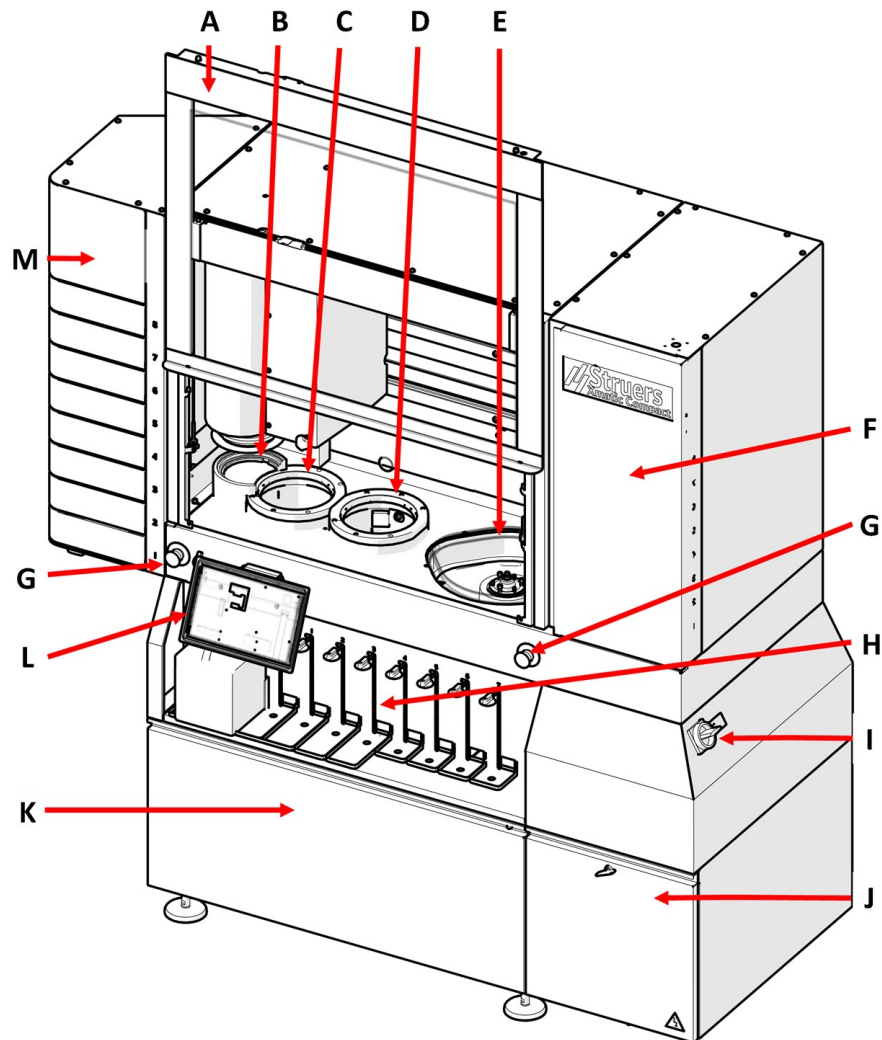


- |                                               |                                         |
|-----------------------------------------------|-----------------------------------------|
| <b>A</b> Main safety cover                    | <b>H</b> Bottle rack                    |
| <b>B</b> Pick-up point                        | <b>I</b> Main switch                    |
| <b>C</b> Ultrasonic cleaning station (option) | <b>J</b> Electrical compartment         |
| <b>D</b> High pressure cleaning station       | <b>K</b> Recirculation unit compartment |
| <b>E</b> MD grinding and polishing            | <b>L</b> Display                        |
| <b>F</b> MD-elevator                          | <b>M</b> Vertical conveyor              |
| <b>G</b> Emergency stop                       |                                         |

Front view, Xmatic Compact without conveyor

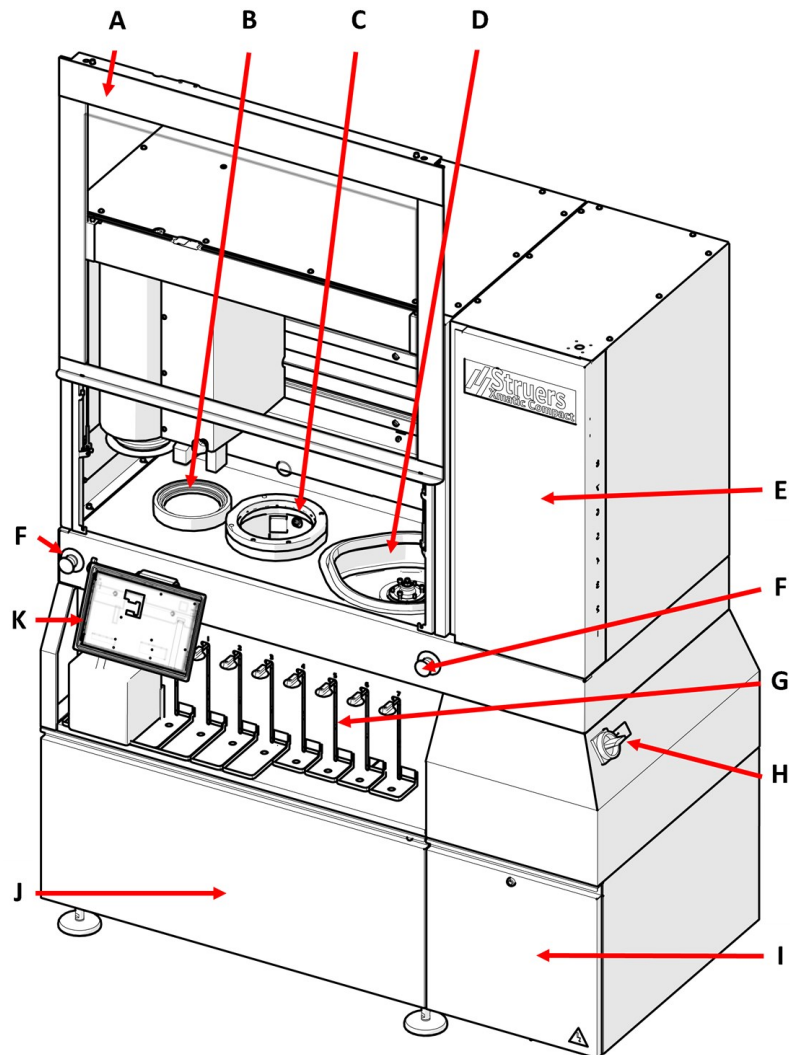


- |                                         |                                         |
|-----------------------------------------|-----------------------------------------|
| <b>A</b> Main safety cover              | <b>G</b> Bottle rack                    |
| <b>B</b> Pick-up point                  | <b>H</b> Main switch                    |
| <b>C</b> High pressure cleaning station | <b>I</b> Electrical compartment         |
| <b>D</b> MD grinding and polishing      | <b>J</b> Recirculation unit compartment |
| <b>E</b> MD-elevator                    | <b>K</b> Display                        |
| <b>F</b> Emergency stop                 |                                         |

Side view, right side

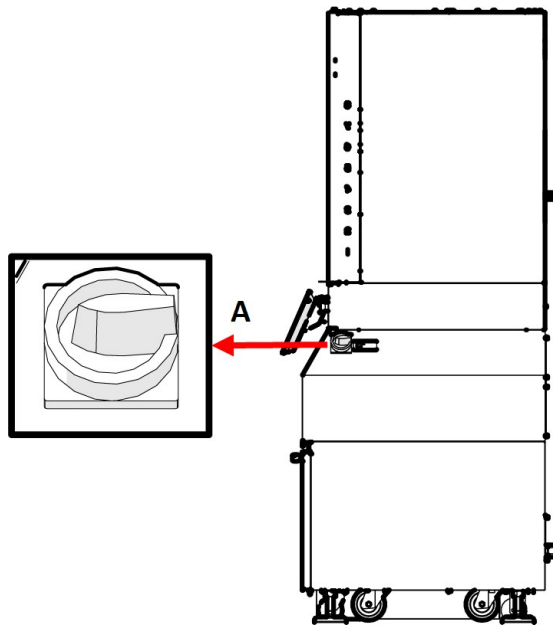

A Main switch


**Side view, left side**

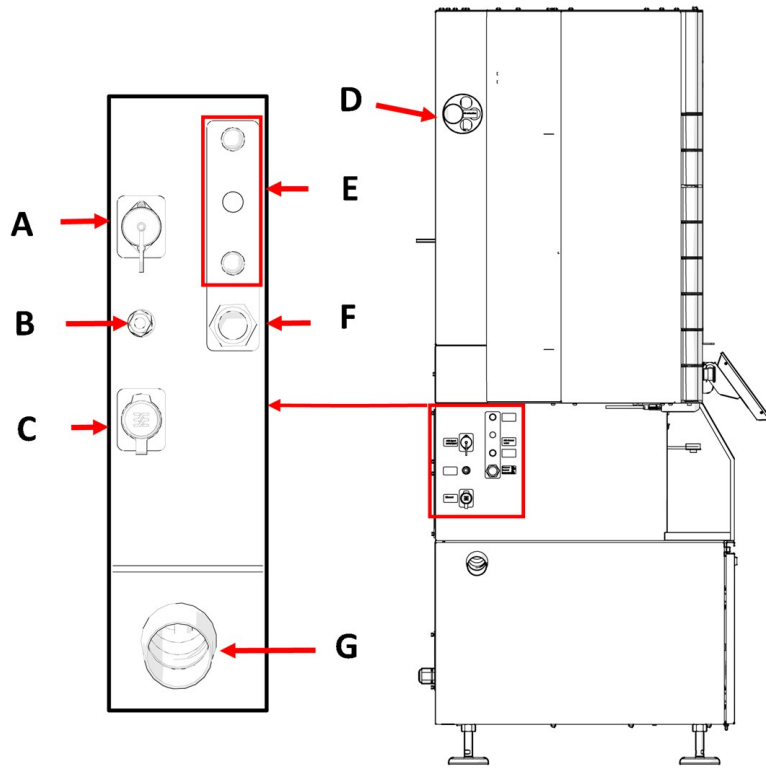

- A External control signal
- B Compressed air
- C Ethernet connection
- D Exhaust

- E Water flow regulators and water supply
- F Water inlet
- G Water outlet

**Rear view - Power supply**

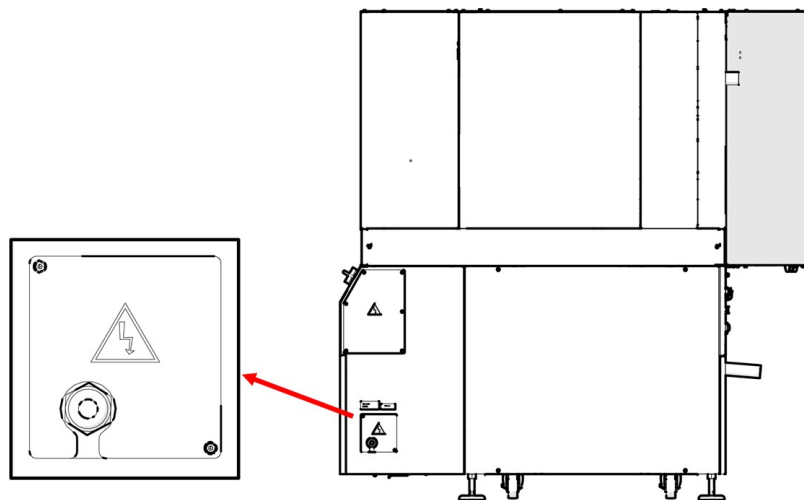


### 3.3 Overview of the display

The display is a touch screen, where you tap on buttons and specific areas to access a screen or activate a function.

All programming and operation is carried out on the touch screen.

The software is launched when you switch on the machine.

#### Overall overview

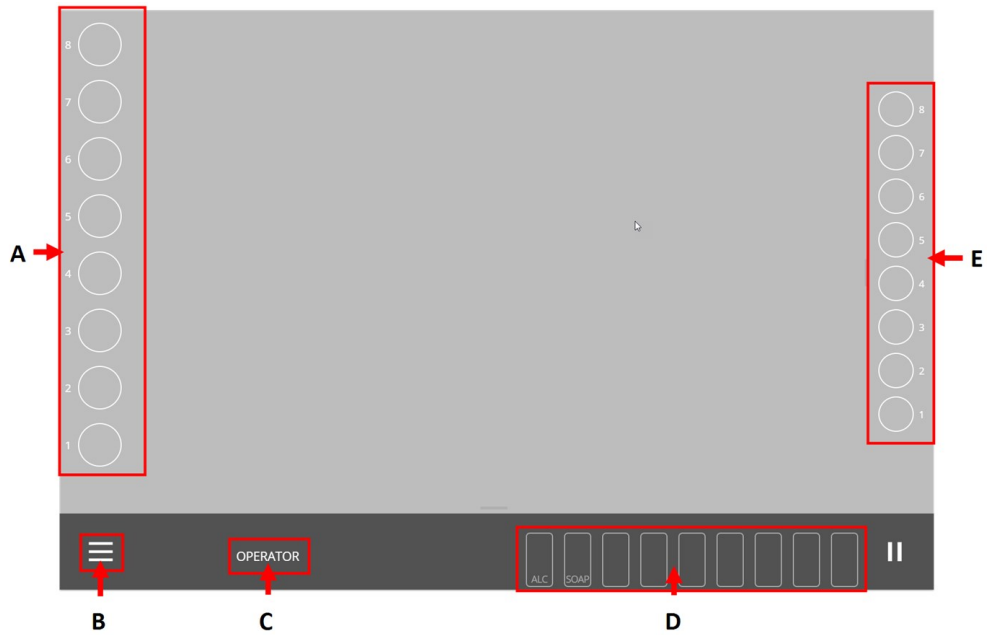

**A** Specimen holders ribbon

**B** Main menu

**C** User mode

**D** Consumables ribbon


**E** MD surface ribbon



**Note**


The display on an Xmatic Compact without conveyor does not show the specimen holder ribbon. (A)

Detailed overview - Xmatic Compact with Vertical conveyor

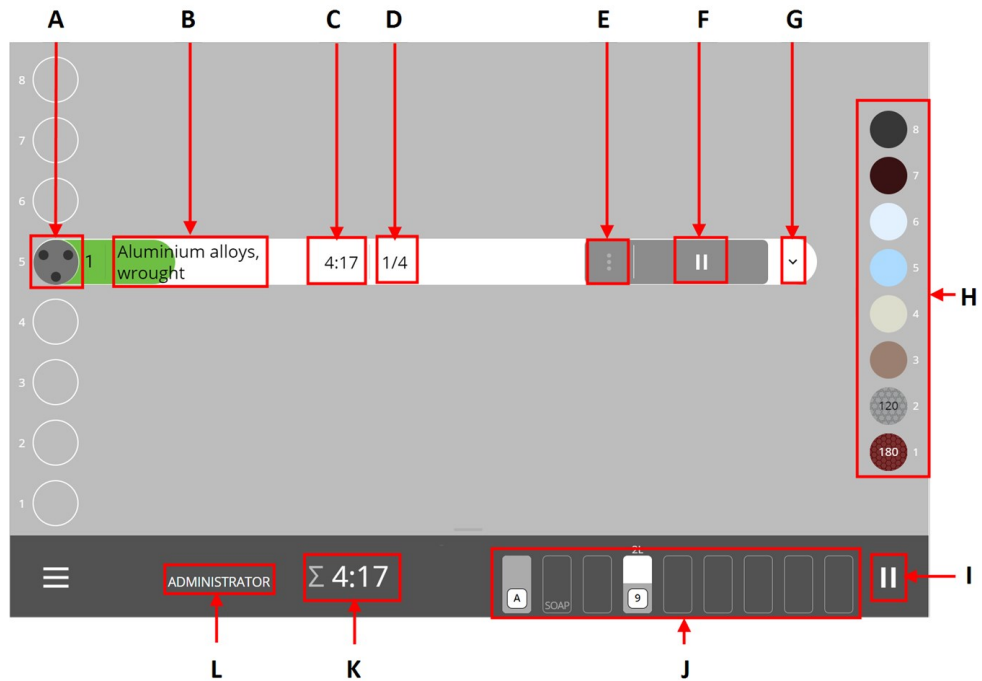

- A Specimen holder
- B Method name
- C Step time (the remaining time it takes to run the step)
- D Number of steps (in the method)
- E 3 dots (to enter **Step selection** and **Edit method**)
- F **Run** (start or pause the method/process)
- G Drop-down (to see the steps for the selected method)
- H MD surface ribbon
- I **Pause** (put the ongoing process on hold)
- J Consumables ribbon
- K Total process time
- L User mode (the type of user logged into the machine)

## Detailed overview - Xmatic Compact without conveyor

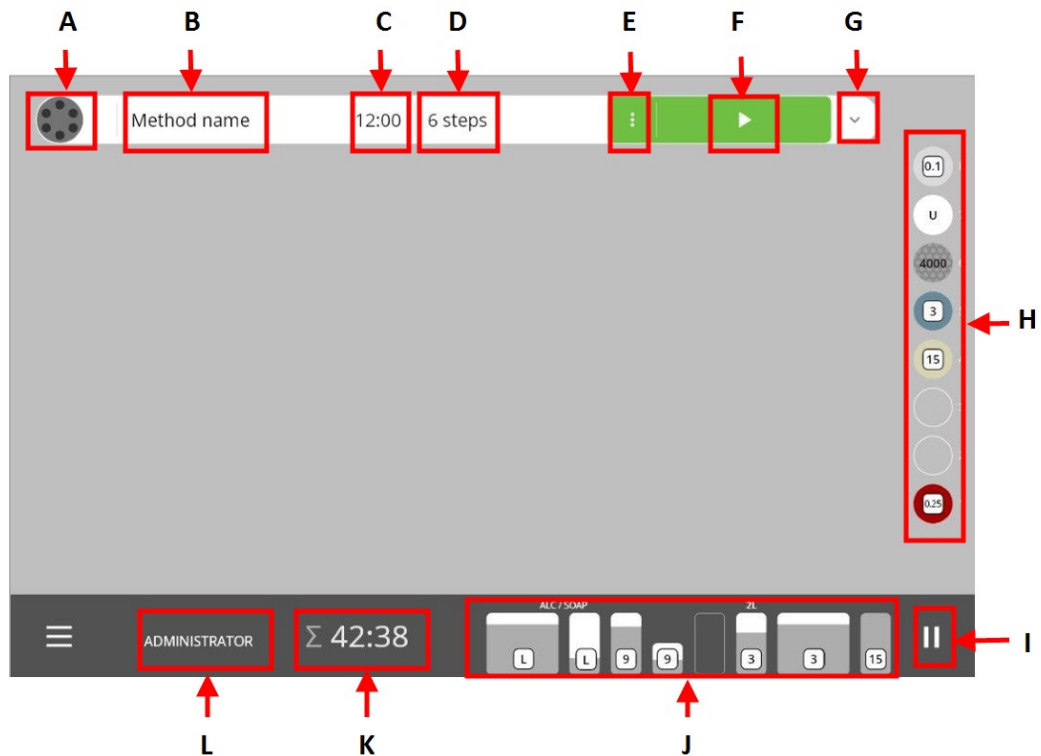

- A Specimen holder
- B Method name
- C Step time (the remaining time it takes to run the step)
- D Number of steps (in the method)
- E 3 dots (to enter **Step selection** and **Edit method**)
- F **Run** (start or pause the method/process)
- G Drop-down (to see the steps for the selected method)
- H MD surface ribbon
- I **Pause** (put the ongoing process on hold)
- J Consumables ribbon
- K Total process time
- L User mode (the type of user logged into the machine)

**Note**

All screen shots in the rest of this manual are of Xmatic Compact with the conveyor and therefore shows the specimen holder ribbon.



**Note**

A green **Run** button indicates that all the consumables needed for the selected method are in place.

A red **Run** button indicates that some of the consumables you need to run the method are not in place. Add the necessary consumables before proceeding.

2		Aluminium alloys, cast	~ 8:48	4 steps				
1		Ferrous 180 - 350 HV	~ 19:59	8 steps				

## 4 Installation

### 4.1 Unpack the machine



**Note**

We recommend that you keep all original packaging and fittings for future use.


#### Remove the packing box

- Open and remove the sides and the top of the packing box.

#### Remove the transport brackets

- Unscrew the transport brackets that secure the machine to the pallet.



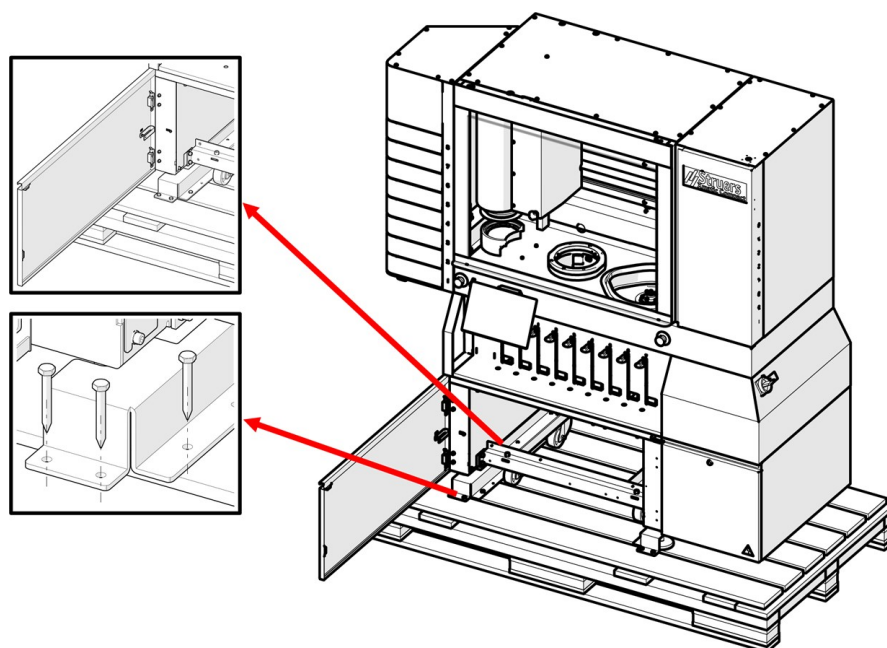

## 4.2 Lift the machine




### CRUSHING HAZARD

Take care of your fingers when handling the machine.  
Wear safety shoes when handling heavy machinery.

### Weight


Machine with conveyor	730 kg (1609 lbs)
Machine including packaging	915 kg (2017 lbs)
Machine without conveyor	690 kg (1521 lbs)
Machine including packaging	875 kg (1929 lbs)

### Center of gravity

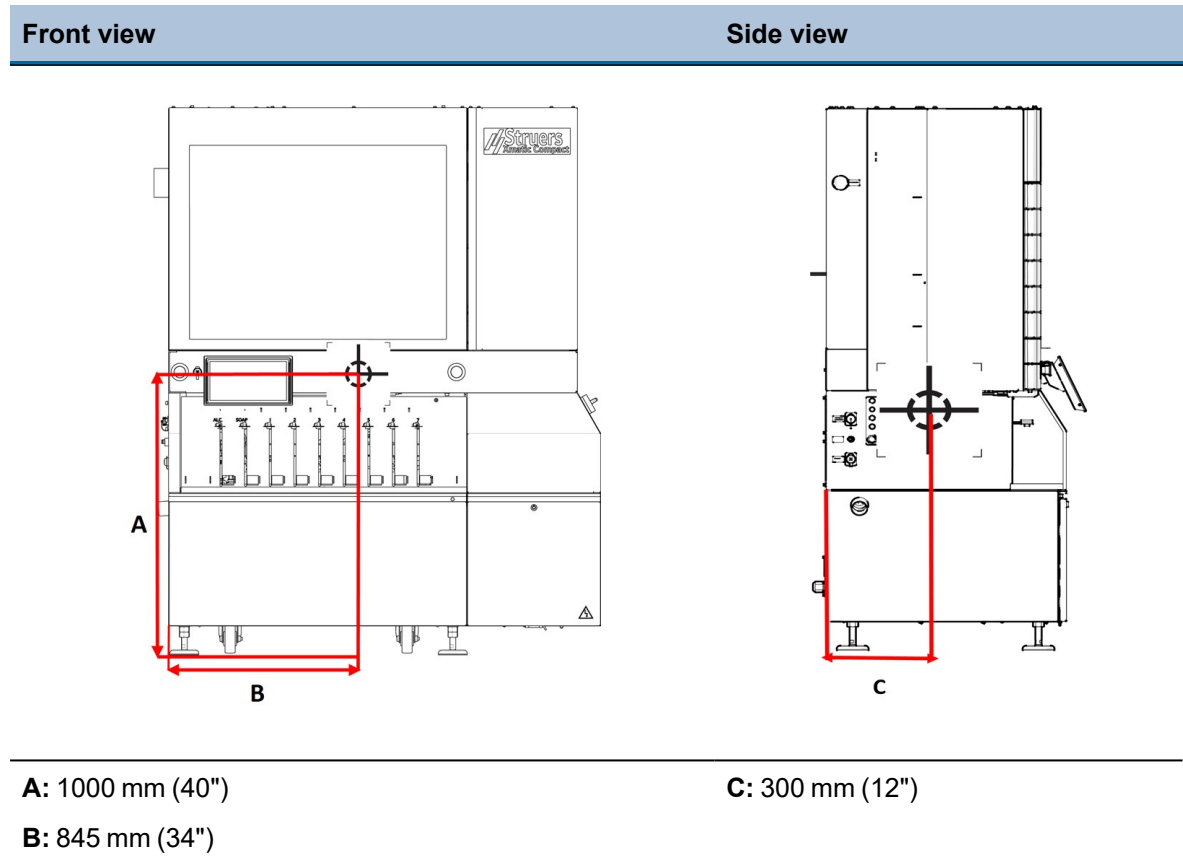

Front view with vertical conveyor

Side view with vertical conveyor

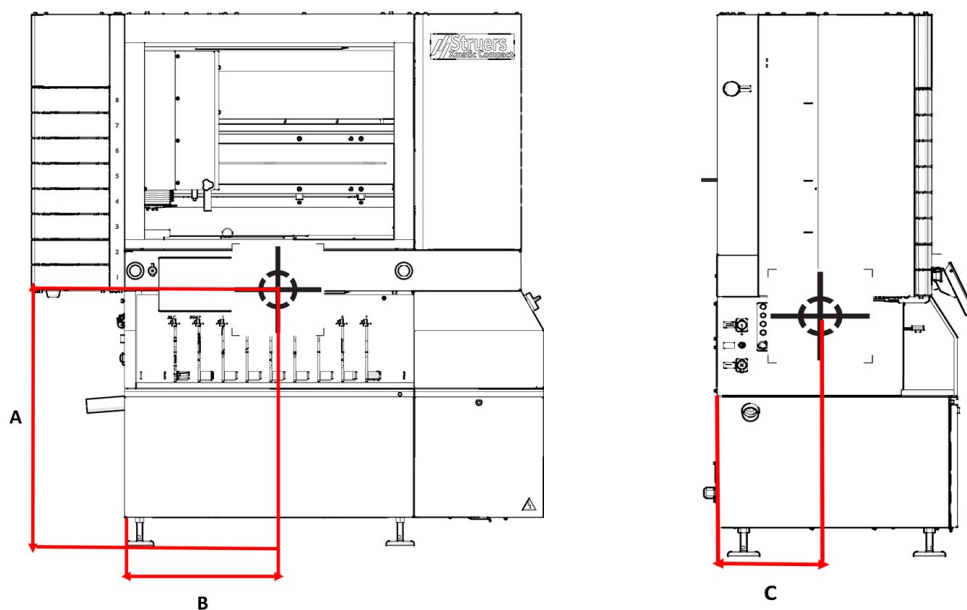


**A:** 1000 mm (40")

**C:** 300 mm (12")


**B:** 1200 mm (48")


#### Lift the machine from the pallet with a forklift

1. Loosen the adjustable feet. Make sure that the feet are positioned higher than the wheels.
2. Loosen and remove the transport brackets.

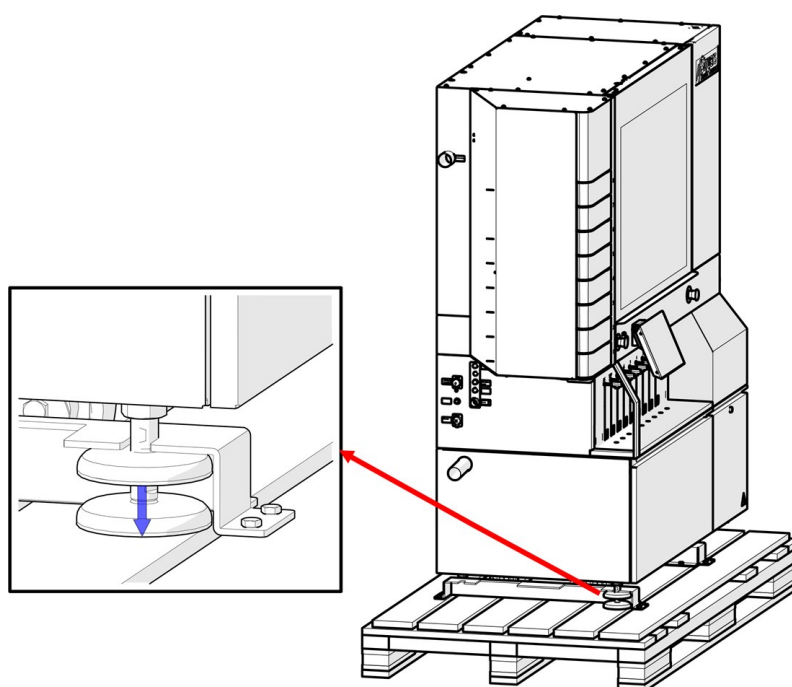

3. Place the forks so that the center of gravity is placed between the forks. Lift the machine from the front.
4. Lift the machine off the pallet.

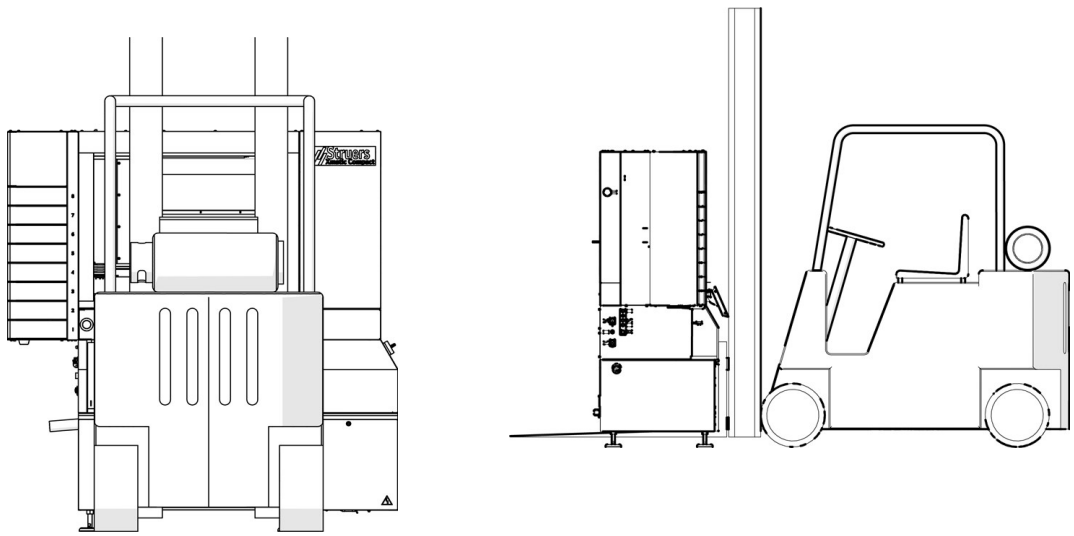



**Note**  
Place the machine on a plane and horizontal floor.

### 4.3 Check the packing list

Optional parts can be included in the packing box.

The packing box contains the following items:

Pcs.	Description
1	Xmatic Compact with vertical conveyor, or Xmatic Compact
1	Bottle, square with QR-label, 4 l
4	Bottle placement guides, 1 l
4	Bottle placement guides, 2 l
2	Bottle placement guides, 4 l
1	Triangular key M5, L-200 mm
1	Nozzle cleaning set
1	Key Southco E3-26-819-15
1	Water inlet hose, 3/4 connection
1	Worm hose clamp, 40-60/9.0-C7W2
1	Hose Danflex K-126, diameter: 51 mm (2"), Length: 2 m (6.5')
1	Elbow, 87" 186113 050
1	Cylinder for Uniforce (levelling device)

## 4.4 At the final location

### Push the machine into position



#### CAUTION

The machine must not operate when it is resting on its wheels.




#### CAUTION

Make sure that the machine is level.


1. If you cannot place the machine directly in its location, turn the adjustable feet upwards to stand the machine on its wheels.
2. Move the machine to its final position.
3. Lower the machine so that the feet touch the floor.
4. Turn the adjustable feet until the machine rests on the feet, and make sure that the machine is level.
5. Remove the transportation crossbar and store it for future use. See also: [Remove the transportation crossbar ▶ 29](#). The wheels of the machine cannot swivel when the crossbar is mounted.
6. Remove the transport screws on the counter weight and store for future use. See also: [Remove the counterweight screws on the rear side of the machine ▶ 30](#).

### Remove the transportation crossbar

1. Remove the wheels and the transportation crossbar supplied with the machine.
2. Store the crossbar for future use.

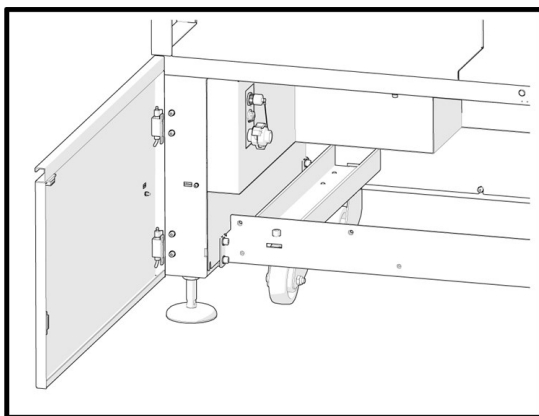

Machine with crossbar

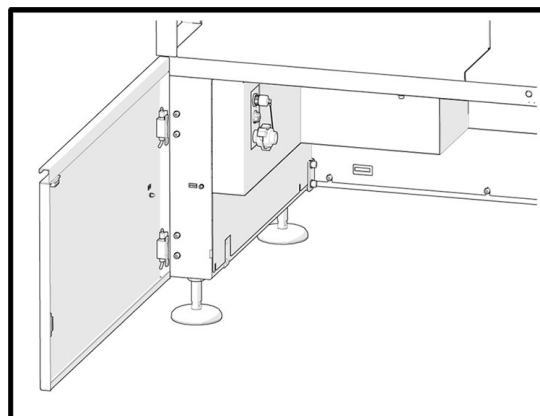


Machine without crossbar

**Remove the counterweight screws on the rear side of the machine**

Once the machine is placed in it's final location:

- Use a 5 mm Allen key to remove the counterweight screws on the rear side of the machine.

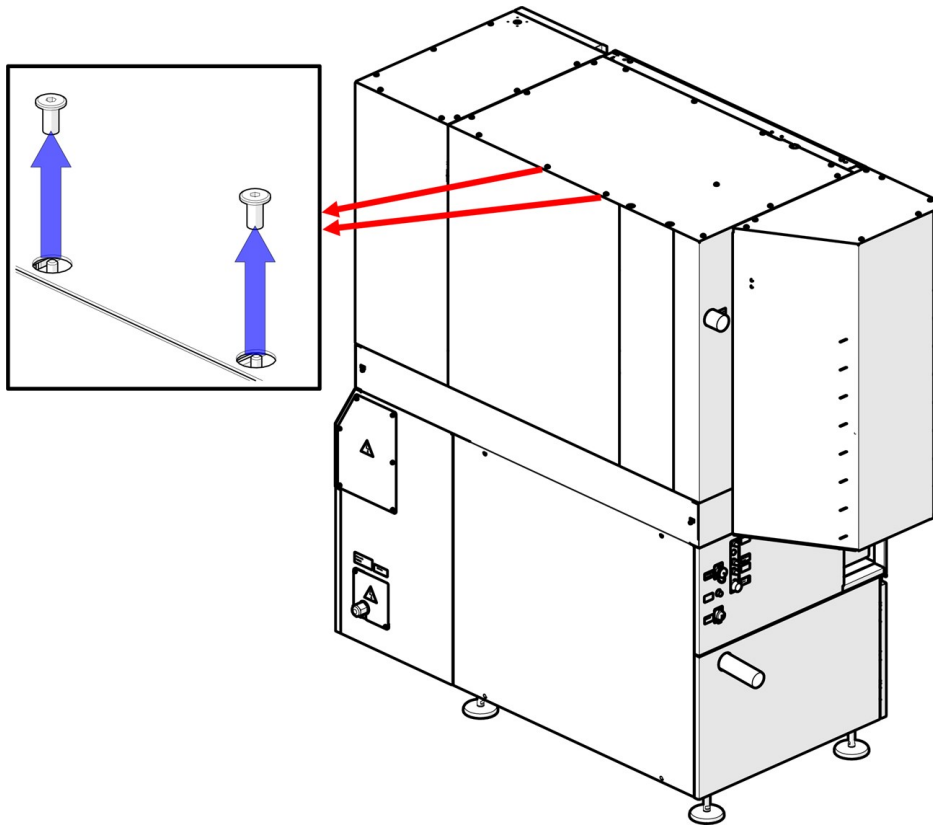

## 4.5 Power supply



**ELECTRICAL HAZARD**

The machine must be earthed (grounded).  
Make sure that the actual electrical power supply voltage corresponds to the voltage stated on the type plate of the machine.  
Incorrect voltage can damage the electrical circuit.



**ELECTRICAL HAZARD**

The equipment is protected by a safety insulation transformer.  
Make sure that the adequate Ik min level is present.  
Contact a qualified electrician to verify the solution.  
Always follow local regulations.



**ELECTRICAL HAZARD**

Disconnect the electrical power supply before installing electrical equipment.  
Make sure that the actual electrical power supply voltage corresponds to the voltage stated on the type plate of the machine.  
Incorrect voltage can damage the electrical circuit.

**WARNING**

In case of fire, alert bystanders, the fire brigade and cut power. Use a powder fire extinguisher. Do not use water.

Always contact a qualified electrician to verify which option is suitable for the local installation setup.

The machine is delivered without a power supply cable.

**Internal fuse**

The machine is internally fused with **CC15A** in the input stage. The fuse is for short circuit protection only.

**Electrical data**

See [Technical data sheet - Xmatic Compact with vertical conveyor ▶ 122](#) or [Technical data sheet - Xmatic Compact without vertical conveyor ▶ 127](#).

**Install the electrical power supply**


To install the electrical power supply, the following is needed:

- Electrical power supply cable according to local regulations

Connect the cable to the electrical connection box:

1. Open the the connection box.
2. Connect as shown in the table and the illustration below.

L1	Phase
L2	Phase
L3	Phase
N	Not internally connected
PE	Earth (ground)

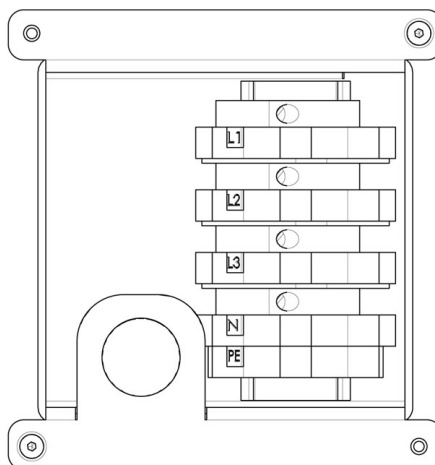**Note**

The connection terminals allow for a maximum cable size of 10 mm<sup>2</sup>/AWG 6.




**Note**

Always contact a qualified electrician to verify which option is suitable for the local installation setup.

**Equipotential bonding**

Two connection points are provided for equipotential bonding of connected equipment.

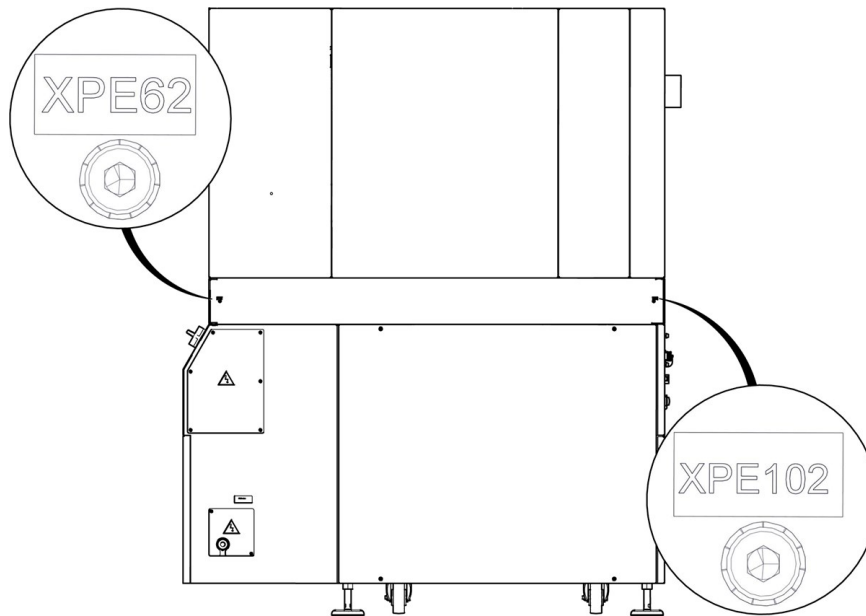

**Note**

**XPE62, and XPE102:** Equipotential bonding according to EN60204, paragraph 8.1.

**External short circuit protection**

The machine must always be protected by external fuses.

The machine is equipped with an isolation transformer in the power input.

See [Technical data sheet - Xmatic Compact with vertical conveyor ▶ 122](#) or [Technical data sheet - Xmatic Compact without vertical conveyor ▶ 127](#).

**Residual Current Circuit Breaker (RCCB)**

The machine has no more than 6mA residual current.

RCCB type A can be used.

## 4.6 Noise

For information on the sound pressure level value, see this section: [Technical data ▶ 122](#)



**CAUTION**

Prolonged exposure to loud noises may cause permanent damage to a person's hearing.  
Use hearing protection if the exposure to noise exceeds the levels set by local regulations.

## 4.7 The recirculation unit - (option)

If necessary, the machine can be equipped with a recirculation unit for the MD grinding/polishing station.

**ELECTRICAL HAZARD**

The pump of the recirculation cooling unit must be earthed (grounded).  
Make sure that the electrical power supply voltage corresponds to the voltage stated on the type plate of the pump.  
Incorrect voltage can damage the electrical circuit.

**CAUTION**

The pressure of the cooling fluid supplied to the machine must be max. 2 bar.

**Note**

See also the Instruction Manual for the recirculation unit.

The Struers recirculation unit includes:

- a recirculation pump
- a recirculation tank
- a level sensor
- a filter bag for MD-grinding/polishing station
- a GEKA coupling for connection to the machine hose
- a shift valve

**Consumables**

- Add a Struers anti-corrosion additive to the coolant.
- The machine is designed to be used only with Struers consumables specifically designed for this purpose and this type of machine.

Other products may contain aggressive solvents, which dissolve e.g. rubber seals. The warranty may not cover damaged machine parts (e.g. seals and tubes), where the damage can be directly related to the use of consumables not supplied by Struers.

### 4.7.1 Fill the recirculation tank



**CAUTION**

The recirculation unit is very heavy when it is full.  
Place the recirculation unit in its final position, or make sure that you can easily push it into position before filling the tank.

1. Place a clean plastic liner in the tank.
2. Make sure that the liner lies flat on the base of the tank so that it does not block the pump.
3. The wheels of the unit must be in line with the sides of the compartment so that you can move the unit into position without having to wiggle it from side to side.



**Note**


To prevent corrosion, you must use a Struers additive in the coolant. For more information, see the additive container.  
Remember to top up with Struers additive each time you fill up the tank with water.



**Note**

Do not overfill the tank.  
Avoid spilling when you move the tank.

### 4.7.2 Connect the recirculation unit to the machine

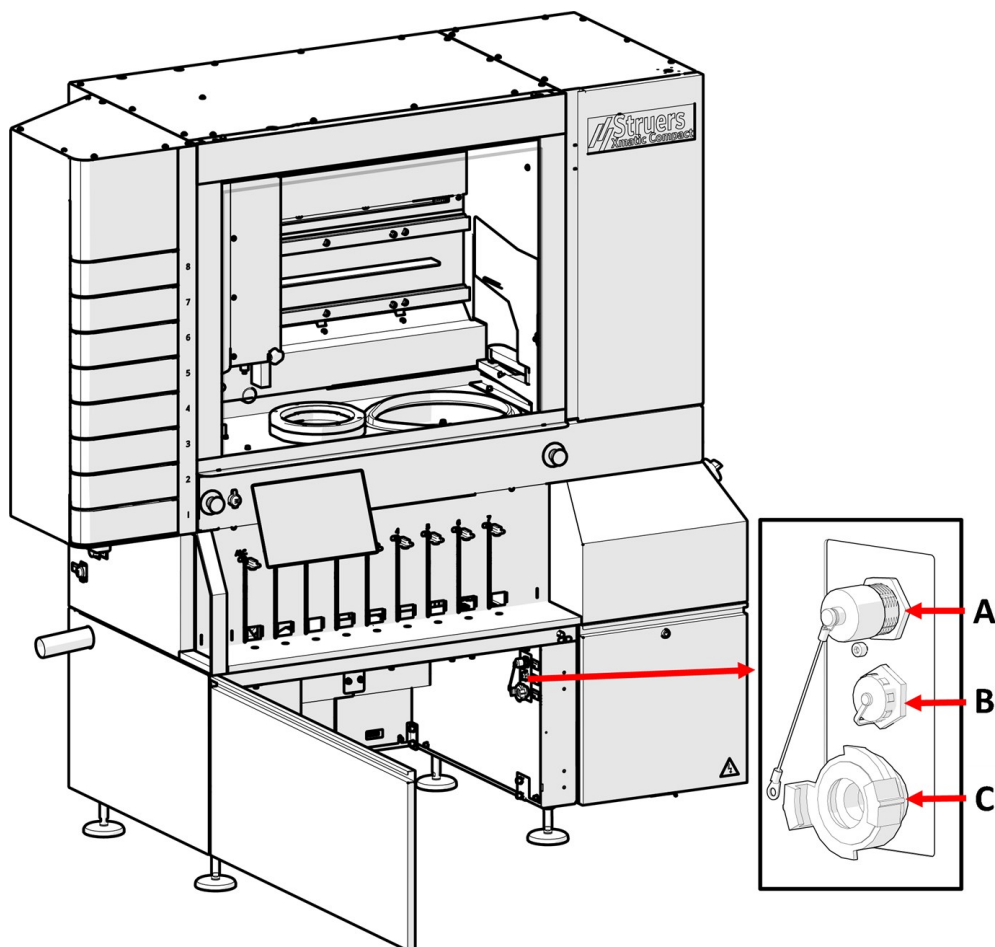


**A** Power connector for recirculation unit

**C** Quick coupling for water connection

**B** Power connector for level sensor

1. Insert the water outlet hose from the machine into the large hole of the filter bag system . If needed, shorten the hose.
2. Connect the water inlet hose to the quick coupling on the recirculation pump (C).
3. Connect the cable from the recirculation pump to the electrical power socket of the recirculation unit inside the compartment (A).
4. Connect the level sensor (B).
5. Make sure that the direction of the flow is as stated with an arrow on the pump. If the direction is incorrect, switch two of the phases:
  - EU cable: switch two of the phases.
  - UL cable: switch phases L1 and L2.
6. Push the unit into place in the compartment under the machine.

### 4.7.3 Place the filter bag in the recirculation unit

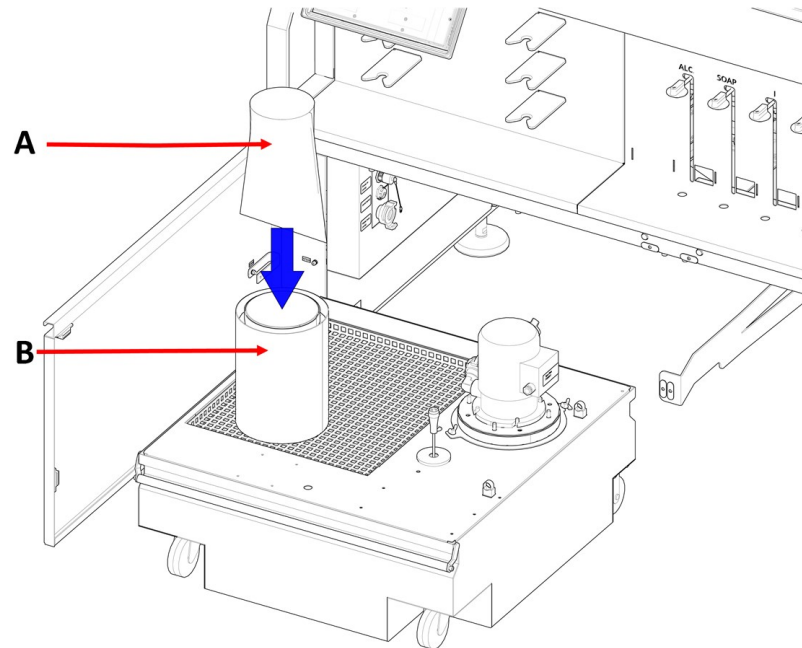

---

**A** Filter bag


**B** Filter bag system

---

- On the MD grinding/polishing station, use a filter bag which is applicable for your recirculation unit. See [the Xmatic accessories overview on the Struers website](http://www.struers.com) (<http://www.struers.com>).

## 4.8 Compressed air supply

For specifications on pressure and air consumption, see the section [Technical data sheet - Xmatic Compact with vertical conveyor ▶ 122](#) or [Technical data sheet - Xmatic Compact without vertical conveyor ▶ 127](#).

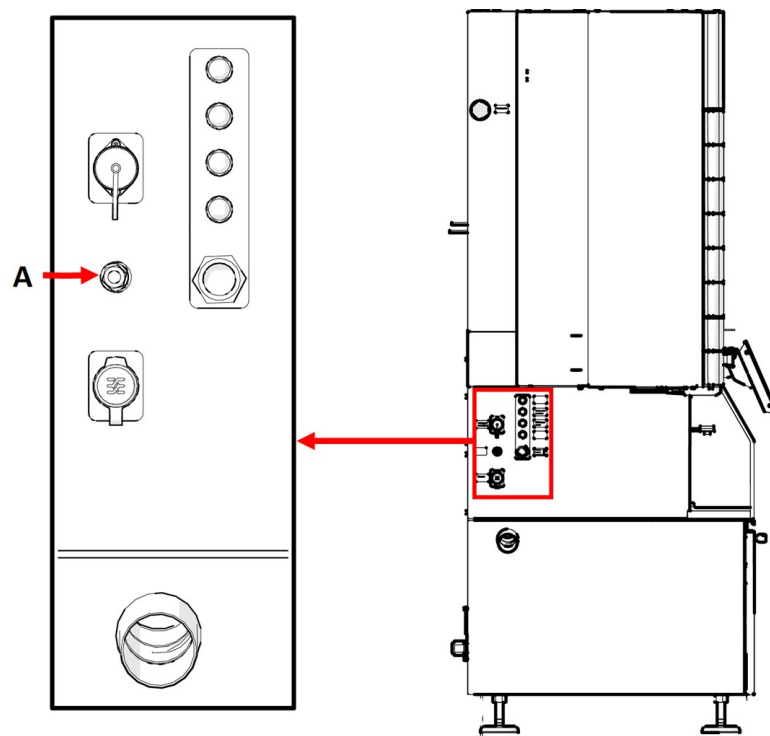

---

A Compressed air supply

---

#### Procedure

1. Connect the 8 mm (5/16") air hose to the compressed air inlet on the machine.
2. Connect the air hose to the compressed air supply.


## 4.9 Connect to the water inlet and outlet

#### Water inlet



#### Note

New water pipe installations:  
Let the water run for a few minutes to flush any debris from the pipe before you connect the machine to the water supply.

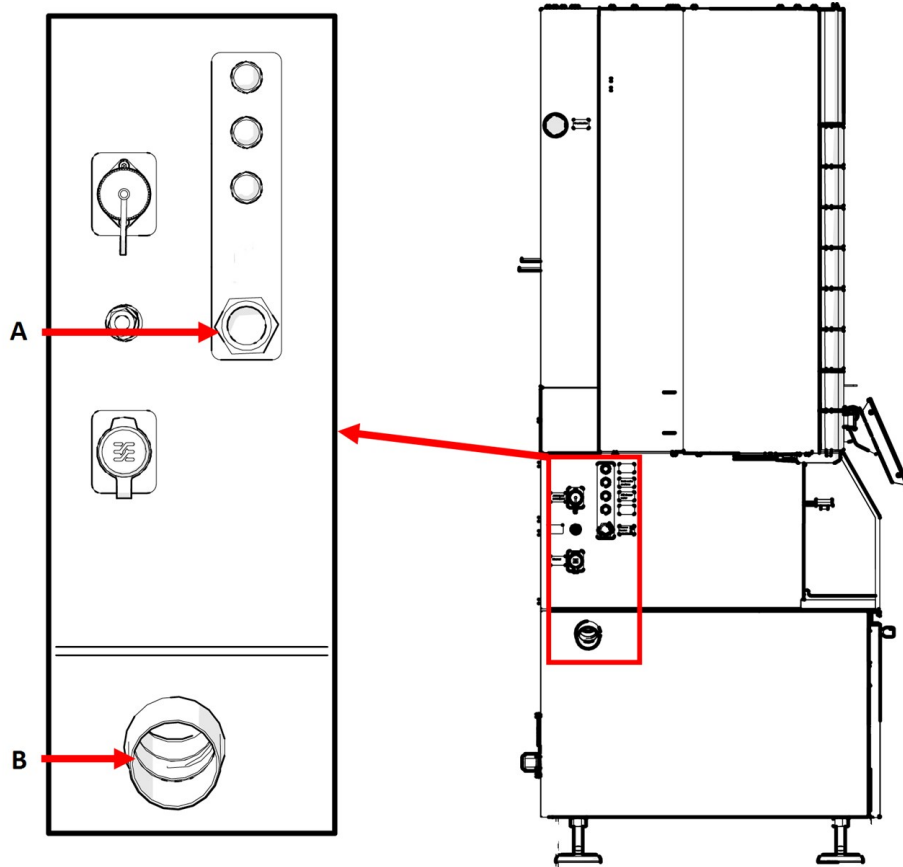

- A Water inlet
- B Water outlet

**Procedure**

1. Connect one end of the hose to the machine. Make sure that the inlet filter is placed correctly.
2. Connect the opposite end of the hose to the water supply.

The machine is supplied with a standard hose to connect the machine to the water supply.

Water supply - Specifications	
<b>Water pressure</b>	2-4 bar (29-58 psi)
<b>Water flow</b>	Min. 10 l/min. (2.6 gpm)
<b>Connections</b>	Diameter: 3/4" GEKA coupling to recirculation unit.
<b>Tube connection</b>	Reinforced PVC hose

## Waste-water outlet

### Procedure

- Connect a standard HT water outlet pipe or hose (diameter: 50 mm (2")) to the water outlet on the left side of the machine.



#### Note

The distance to the drain must not exceed 6 mm (0.236"), and there must be at least 8% slope.

## 4.10 Connect to an exhaust system




#### CAUTION

You must connect the machine to an exhaust system. We recommend the use of a system with monitoring.

### Specifications

Minimum capacity: 250 m<sup>3</sup>/h (8829 ft<sup>3</sup>/h) at 100 mm (4") diameter.

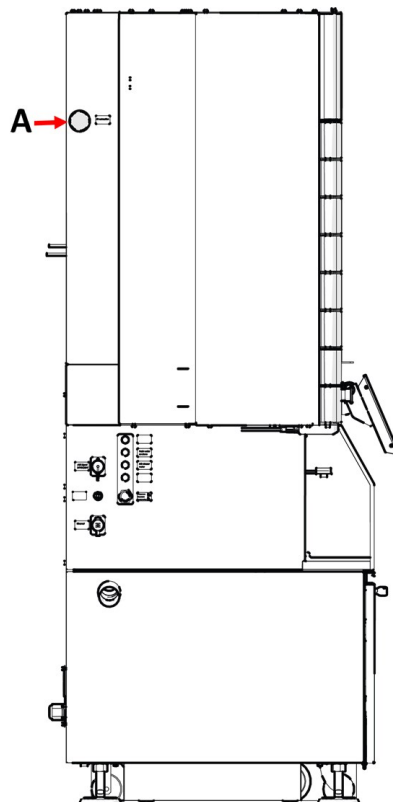


---

**A** Exhaust

---

### Procedure

1. Connect a 100 mm (4") pipe to the exhaust outlet on the machine.


2. Connect the other end of the pipe to the exhaust system.

## 4.11 Adjust the water flow rate

You can enable or disable the disc cooling and flushing in the software.

If needed, adjust the flow rate of disc cooling.


### Water flow regulators

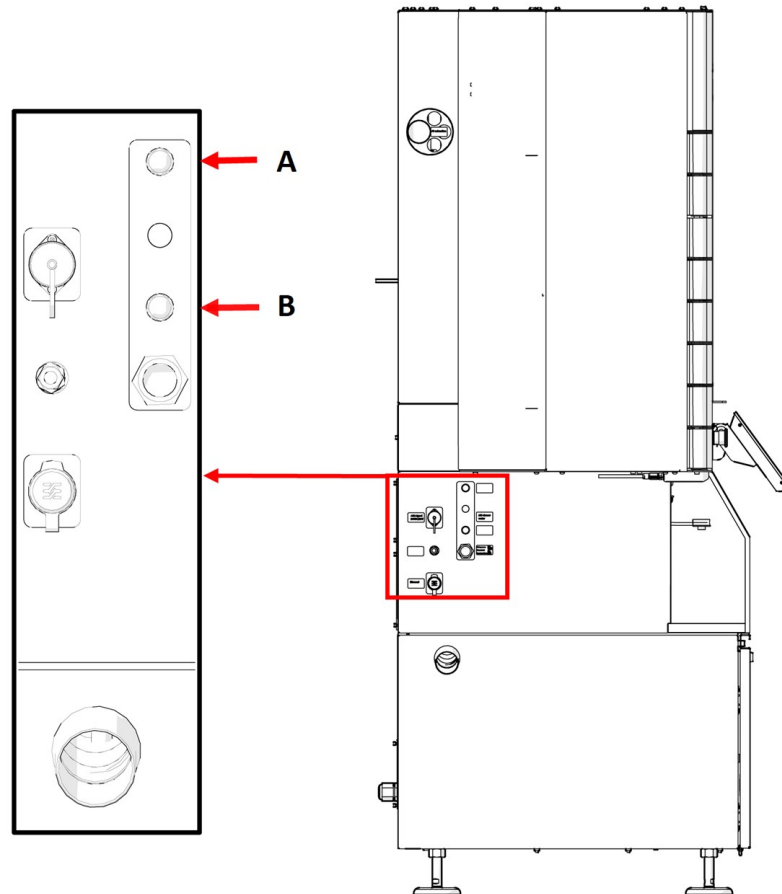

- 
- A OP flush water
  - B MD disc cooling water
-



## 4.12 Install a beacon (option)

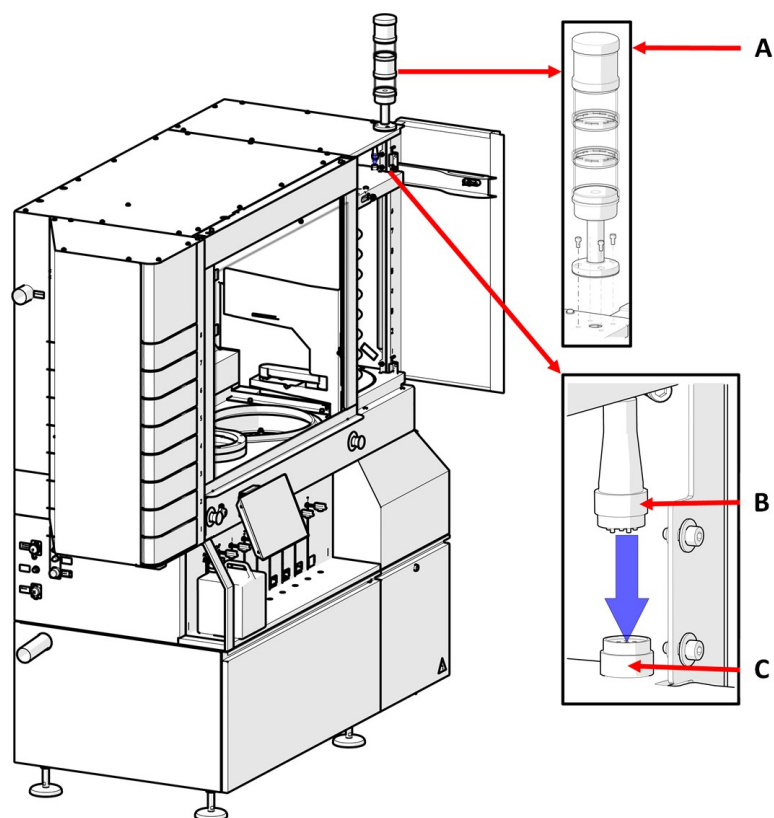

- A Beacon
- B 6-pin connector
- C Socket

### Procedure

1. Open the MD-elevator door.
2. Mount the beacon using the socket screws supplied with the beacon.
3. Connect the 6-pin connector to the socket.

The light signals are described in [Beacon \(option\)](#) ► 70.



#### Hint

For more information about this unit, see the specific Instruction Manual or User Guide.

## 4.13 Network connection

Xmatic Compact cannot use wireless networks (Wi-Fi/Bluetooth).

The machine is equipped with an RJ45 connector which should only be used for remote service.

Inside the machine, the RJ45 connector is connected to a Teltonika RUTX08 router (Linux operating system) which manages the firewall and a VPN client.

All ingoing connections through LAN on any ports will be rejected by the firewall.

The following ports are recommended to keep open for outgoing connections:

Port	Type	Description
53	TCP/UDP	DNS lookup
123	TCP/UDP	NTP (time server)
15009	TCP	Teltonika RMS
15010	TCP	Teltonika RMS
20022	TCP	Remote SSH through RMS
20100	TCP	Remote SFTP through RMS
30000 - 39999	UDP	Teltonika VPN server (single random port is used)

**Remote service through VPN**

To get remote service through a VPN server, the machine must have access to the Internet.

The router is pre-configured, and a certificate is pre-installed by Struers. With an Internet connection, the machine has access to the Teltonika VPN server (OpenVPN-based).

Remote service should be used for software updates and troubleshooting.

Struers can provide you with a MAC address for the specific router installed in the machine.

The encrypted VPN connection can give the technician from Struers Service remote access to the user interface and the database on the machine.

## 5 Transport and storage

If, at any time after the installation, you have to move the unit or place it in storage, there is a number of guidelines we recommend that you follow.

- Package the unit securely before transportation. Insufficient packaging could cause damage to the unit and will void the warranty. Contact Struers Service.
- We recommend that you use the original packaging and fittings.

### 5.1 Storage

- Disconnect the unit from the electrical power supply.
- Disconnect the unit from the water supply.
- Disconnect the unit from the compressed air supply.
- Disconnect the unit from the drain.

- Remove any accessories.
- Clean and dry the unit before storage.
- Place the machine and accessories in their original packaging.

## 5.2 Transport

To transport the machine safely, follow these instructions.

1. Make sure that the following items are available:
  - Transport brackets (x 2)
  - Transport crossbar (x 1)
  - Bar with wheels (x 2)
  - The original pallet



### Note

We recommend that you keep all original packaging and fittings for future use.

2. If needed, disconnect the following:
  - Power supply
  - Compressed air supply
  - Water supply
  - Recirculation unit. See the manual supplied with the specific equipment.
  - Disconnect the monitor. This must be done by StruersService.
  - Accessories



### ELECTRICAL HAZARD

Disconnecting the unit from the electrical power supply must only be done by a qualified technician.

3. Clean and dry the unit.

### Requirements

- Make sure that the floor of the working area and the transportation corridor are designed to carry the following weight:

#### Weight

Machine	730 kg (1609 lbs)
---------	-------------------

- Make sure that the following facilities are available:
  - Power supply
  - Water supply
  - Compressed air supply

- Water drain

### Moving the machine

To move the machine, use a fork-lift truck and a crossbar.



#### Note

The machine must be installed by Struers technicians or by an authorized service technician trained by Struers for this specific task.

### Procedure

1. Open the recirculation module doors .
2. Make sure that the transportation crossbar and wheels supplied with the machine are secured in position before you start lifting.
3. Loosen the brackets on the transportation crossbar to allow movement.
4. Adjust the brackets.
5. On the front of the machine, press and hold the crossbar against the bottom of the wheels.
6. Slide the brackets of the transport crossbar over the edges of the wheels and tighten the bolts.
7. Position the forklift as close to the center line of gravity as possible. See also: [Lift the machine](#)  
▶25

## 6 Start-up - the first time




#### CAUTION

Struers equipment must only be used in connection with and as described in the Instruction Manual supplied with the equipment.

### 6.1 Log in as an Administrator

If you have administrator rights, you can log in as an administrator and configure a variety of settings defined in [Configuration](#) ▶73.

1. Next to the **Main menu** button, tap **Operator** to unfold the menu and reveal the **Administrator** option.

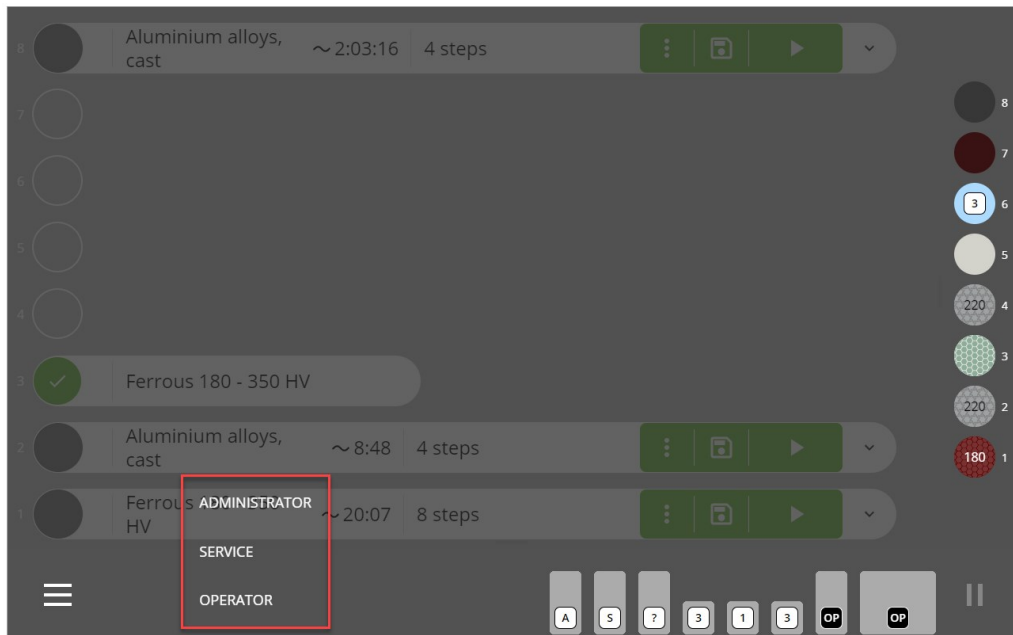

2. Tap **Administrator** and log in with the administrator password.

**Note**

The administrator password is '1234' per default. See how to change the password in section [User settings ▶ 89](#).

## 6.2 Select language and measurement system

To change the default language from English to another language, or the default setting from the metric to the imperial system, see the section [System settings ▶ 92](#).

## 6.3 Place the MD surfaces in the MD elevator

**CAUTION**

Do not use the machine with non-compatible accessories or consumables.

**Note**

The machine is configured to be used with either 250 mm or 300 mm MD surfaces. You cannot use a mix of the 2 diameters.

The MD surfaces are placed on shelves in the MD elevator. This has several shelves that contain individual MD grinding or polishing surfaces to be used for the different steps in a method.


If you are using Struers surfaces, the machine automatically detects the type of surface placed on each shelf.

After using an MD polishing surface once, the machine will indicate the size of the abrasive used with the specific MD polishing surface.

**Insert the MD surface**


1. Open the MD elevator door (A).

2. Place the surface on the desired shelf as shown in the illustration (B).
3. Make sure that the surface is placed inside the small indentations on the shelf (C).
4. Close the MD elevator door to start the surface detection.

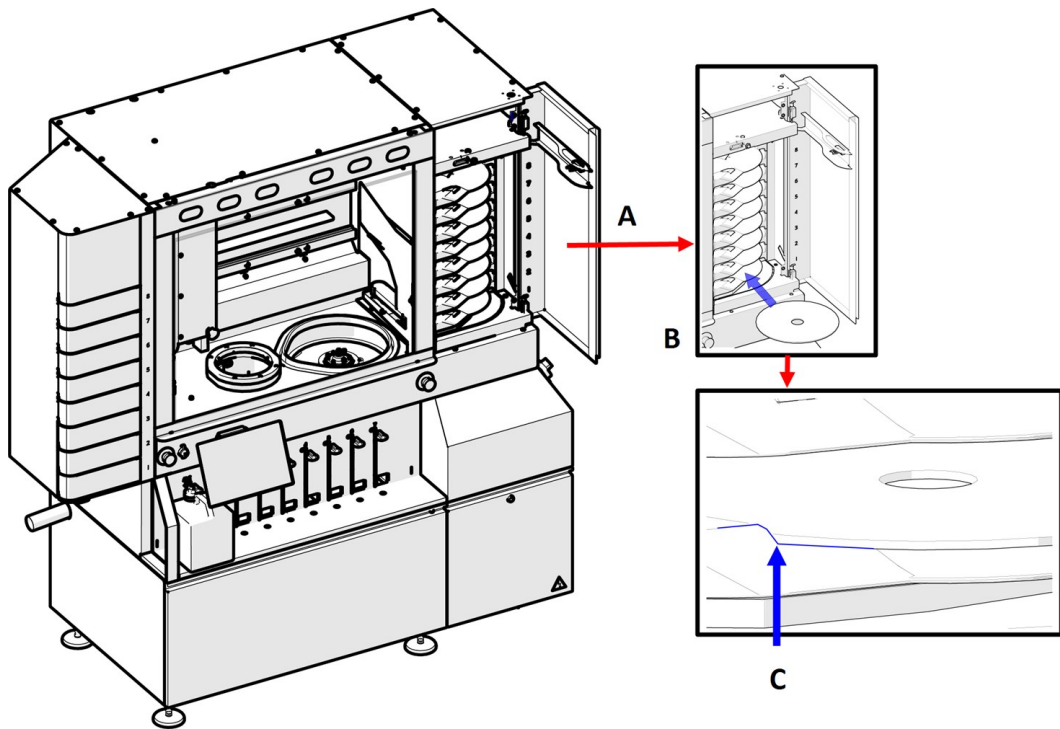

## 6.4 Place the bottles in the bottle rack module

The machine has 9 positions in the bottle rack:

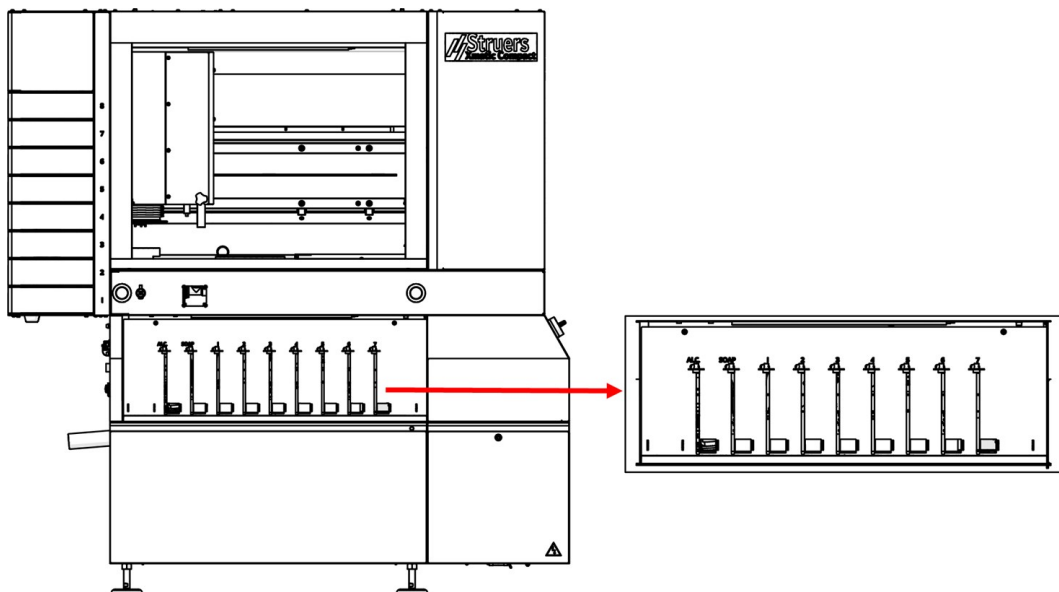


Bottle position	Contents
1-2	Alcohol/Soap only
3-9	Suspension, lubricant or oxide polishing

Use only Struers consumables. The machine is designed to be used only with Struers consumables specifically designed for this purpose and this type of machine.

The machine will automatically detect the type of Struers consumable and liquid levels of the bottles.

### Procedure

1. Place the bottle guides on the bottle rack.
2. Place the bottles in the bottle guides with the Data Matrix code facing the machine.
3. Connect the Easy Connectors to the bottles. Make sure they are pushed into place.

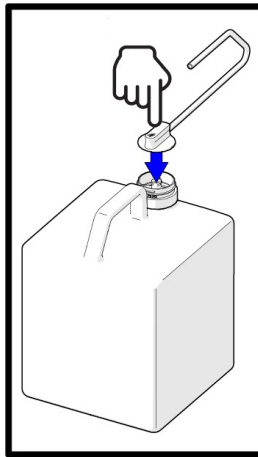

4. Check the consumables ribbon to make sure that the machine has detected the installed consumables.

#### 6.4.1 Alcohol and soap



#### CAUTION

You must connect the machine to an exhaust system. We recommend the use of a system with monitoring.



#### CAUTION

Do not use the machine with non-compatible accessories or consumables.



#### Note

Positions 1 and 2 are for Alcohol/Soap only.

#### Monitor the soap and alcohol levels

The machine automatically monitors the soap and alcohol levels.

**Place the alcohol bottle**

- Fill the empty 4 l bottle supplied with the machine with alcohol, and place it on the bottle rack.

**Place the soap bottle**


- Place a concentrated soap bottle on the bottle rack.

**6.4.2 Alcohol separator bottle (option)**

If you wish to collect alcohol used during the cleaning methods, connect an alcohol separator bottle to your cleaning station.

**Procedure**

1. Place the bottle in the bottle bracket.
2. Slide the bottle bracket up, over the nozzle, and into the designated hole in the ceiling of the recirculation unit compartment.

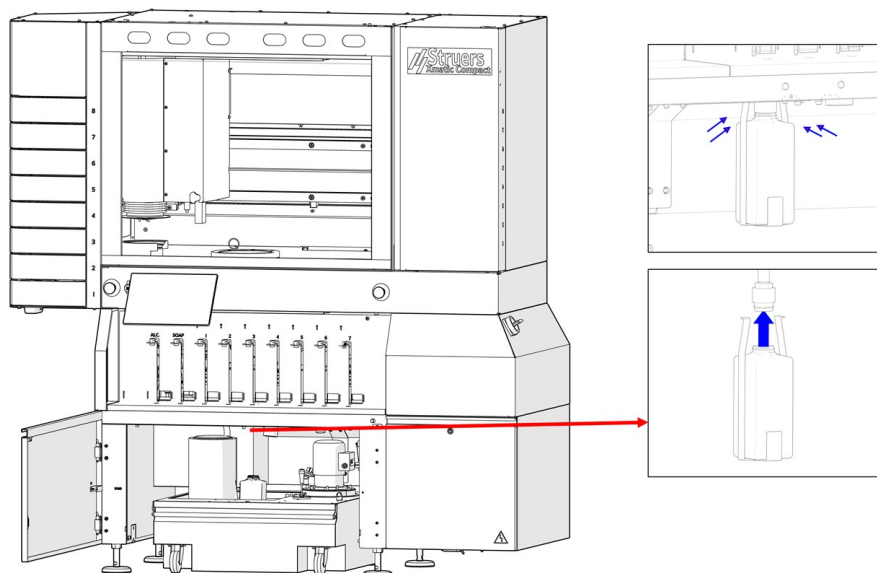

3. Push the hooked ends inwards to enable the hooks to enter the hole.
4. Let go of the bottle bracket, and let it hang on the hooks.



# 7 Operate the device



## CAUTION

If power is interrupted during operation, the main safety cover and the MD elevator door will remain locked until power returns. See: [Access the work zone in case of power failure ▶ 120](#).



## CAUTION

Do not use the machine with non-compatible accessories or consumables.

## 7.1 Clamp and level the specimens

Make sure that the specimens are firmly clamped in the specimen holder, and that they are level. To do this, we recommend that you use Struers Uniforce. See the Instruction Manual for this unit.


## 7.2 Access the work zone

If you have an Xmatic Compact with vertical conveyor, you must unlock the main safety cover to access the work zone.

If you have an Xmatic Compact without conveyor, the main safety cover will automatically unlock after the process has stopped.

### Procedure

1. Tap the **Main menu**.
2. Select **Unlock main safety cover** to access the work zone.

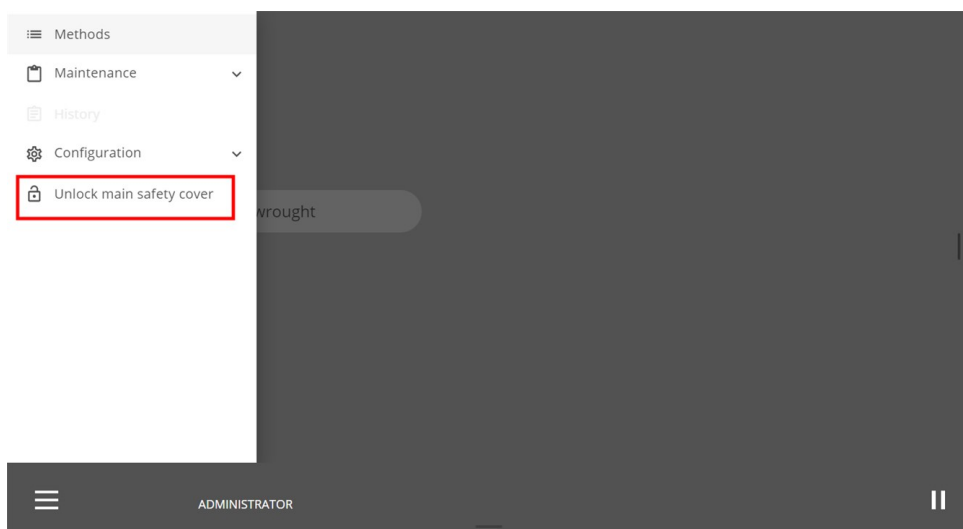

## 7.3 The specimen holder

### 7.3.1 Place and remove the specimen holder



#### CRUSHING HAZARD

Take care of your fingers when handling the machine.  
Always wear safety shoes when handling specimen holders, as they can be heavy.



#### CAUTION

Wear suitable gloves to protect fingers from abrasives and warm/sharp specimens.



#### Note

With a 300 mm (11.8") MD-Disc size, you can use the 160 mm (6.3") specimen holders.  
With a 250 mm (9.8") MD-Disc size, you can use the 140 mm (5.5") specimen holders.

#### Xmatic Compact without the vertical conveyor

- Open the main safety cover to remove the specimen holder from the pick-up point.

#### Xmatic Compact with the vertical conveyor

The vertical conveyor drawers have three different positions. Each position indicates a certain state on the machine:

- **Open:** The drawer is ready to be used.
- **Partially open:** The specimen holder is ready for inspection, or the drawer is empty.
- **Closed:** The machine is processing the specimen holder you placed in this position or the holder is in queue.



#### Note


With the vertical conveyor: If you have placed several specimen holders in the conveyor, the specimen holders are queued based on the order in which you have pressed **Run** for each of the specimen holders. To modify the queue, tap **Eject**, and press **Run** for each specimen holder in the order you want them to be processed.

#### Place the specimen holder in the vertical conveyor

1. If a specimen holder is in a closed drawer, tap its icon/button on the main screen, and tap the **Eject** button.



2. If the drawer is open or partially open, pull it open.
3. Place the specimen holder as shown in the illustration, and close the drawer.

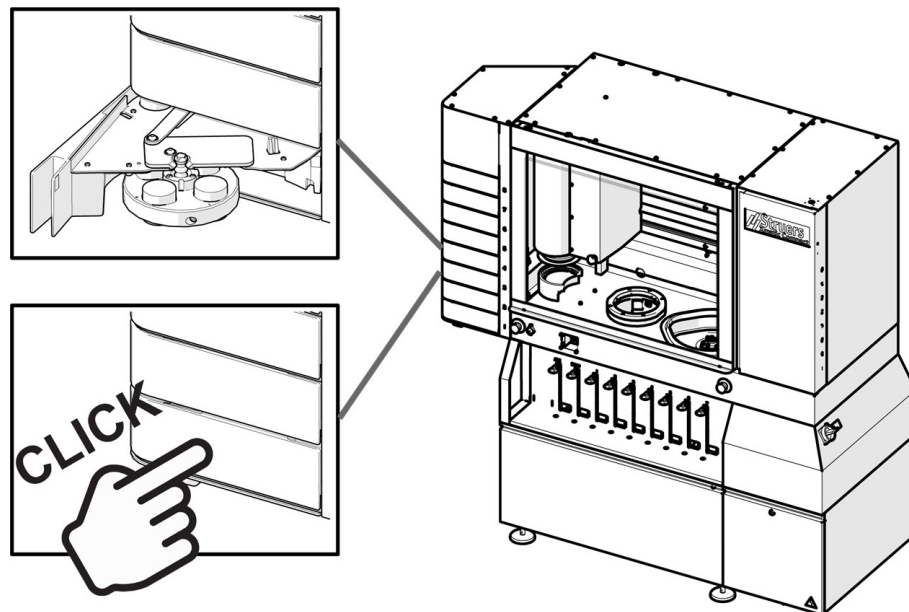

4. The machine automatically detects the specimen holder.

#### Remove the specimen holder from the vertical conveyor

When a specimen holder has been processed, the machine automatically opens the drawer to the partially open position.

Open the drawer and remove the specimen holder.

If the specimen holder has not been processed yet, the drawer remains closed. To open it, tap the specimen holder button, and select the **Eject** button.



Open the drawer and remove the specimen holder.

### 7.3.2 Detect the number of specimens

In **Configuration**, you can choose if you want the number of specimens in the specimen holder to be automatically or manually detected (For Xmatic Compact with conveyor, see [Machine settings for Xmatic Compact with conveyor ▶ 89](#)).

**Note**  
For the Xmatic Compact without conveyor, the number of specimens in the specimen holder can only be detected manually.

**Automatic option (operation)**

1. Choose a method.
2. Tap the **Run** button. The camera takes a picture of the specimen holder and counts how many specimens are in the specimen holder.
3. The force is adjusted automatically dependent on the number of specimens.

The button displaying the specimen will be all gray with no dots, and you do not see how many specimens are in the specimen holder.




**Manual option (operation)**

1. Click on the specific specimen holder button.



2. Find the button that displays the number of specimens you have in the holder.

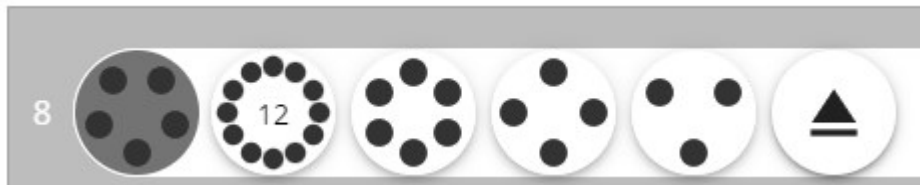

3. Select the button with the correct number of specimens.



4. The force is being calculated according to the number of specimens.


## 7.4 Methods

### 7.4.1 Struers methods

When there is a specimen holder in the machine, you can access the Struers methods in the **Method library** (see how to access in [Overview of the display ▶21](#) under "Detailed view").


#### Select a Struers method

1. Place a specimen holder in the desired position.  
As default, the machine shows the last-used method.
2. Tap the method name on the screen.

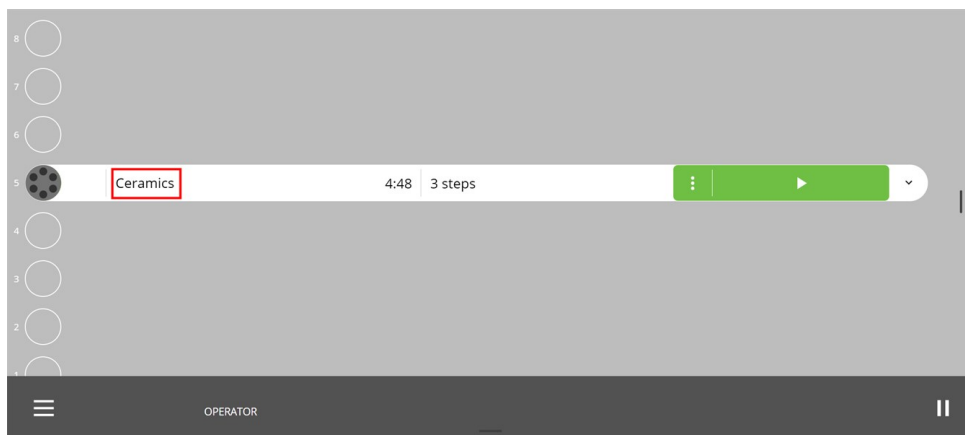


The **Methods** screen opens.

3. Tap the **Library** tab

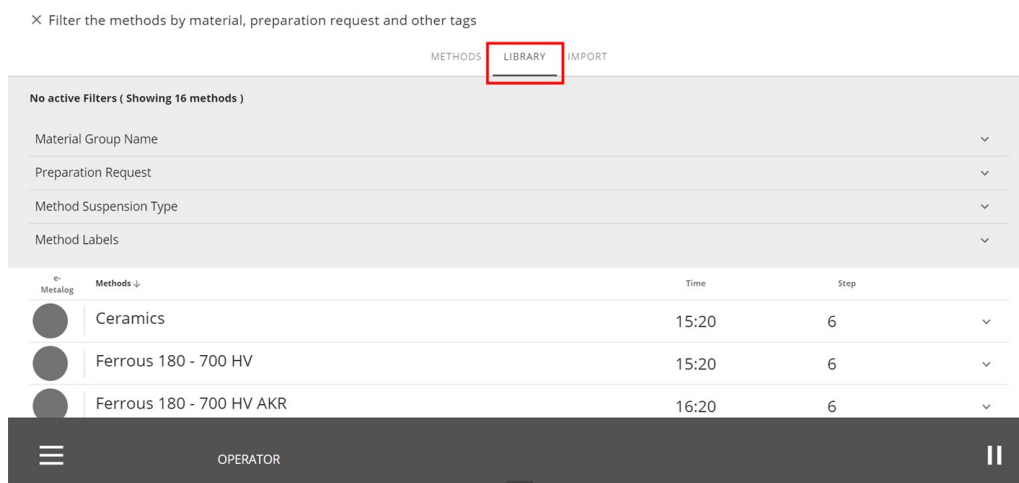

4. Select the desired method, or use the filter tools to locate the desired method.

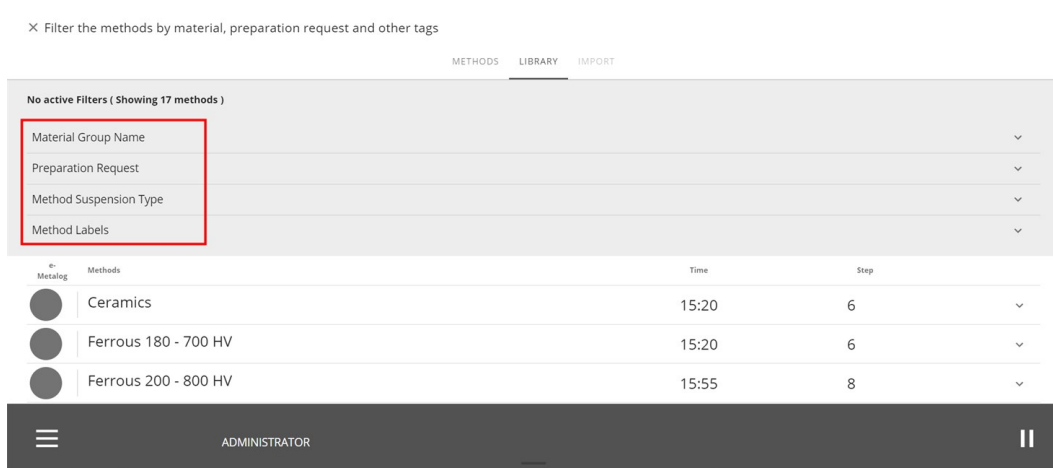


### Apply filters

You can apply filters to the Struers **Method library** to find the best method for the task you need to perform.

You can apply filters using the following criteria:

- **Material Group Name**
- **Preparation Request**
- **Method Suspension Type**
- **Method Labels**

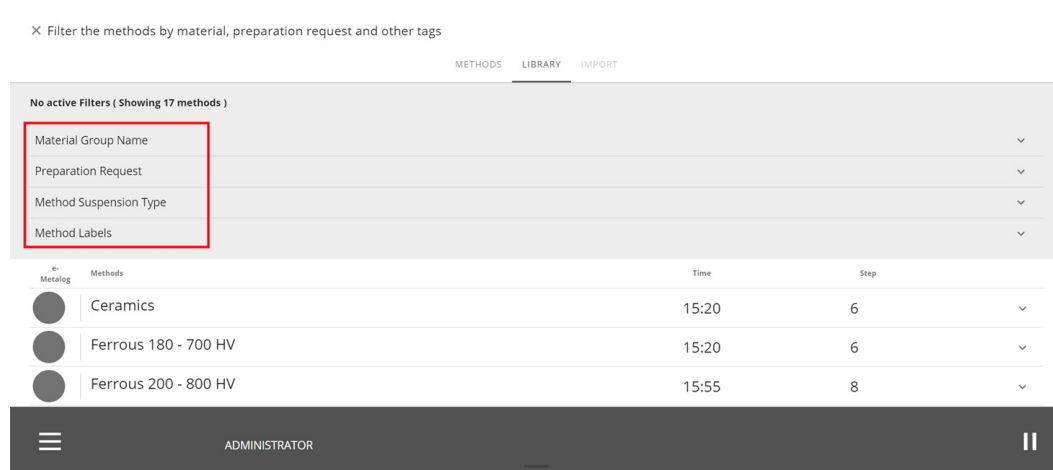


### Method parameters

When you use a Struers method, you have default parameters. You can adjust these in each step but you cannot save them.


To be able to reuse a step with changed parameters, you must create a custom method in a different name (see [Custom methods](#) ► 59).

## Adjust the method parameters


1. Tap the drop-down arrow for the method to open the step list.

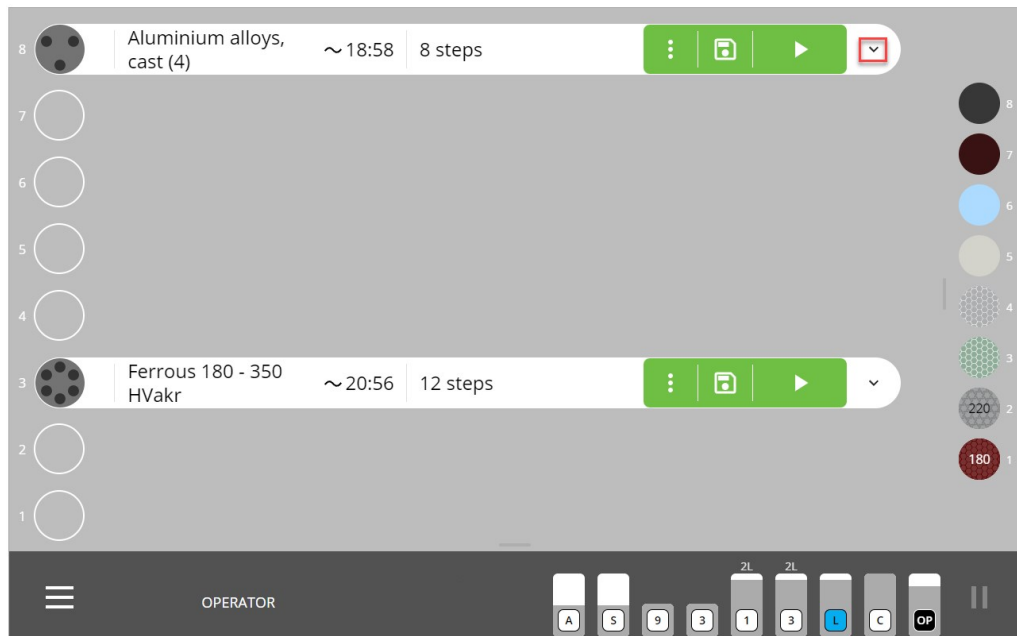

2. Tap the drop-down arrow for the step to open the parameters.

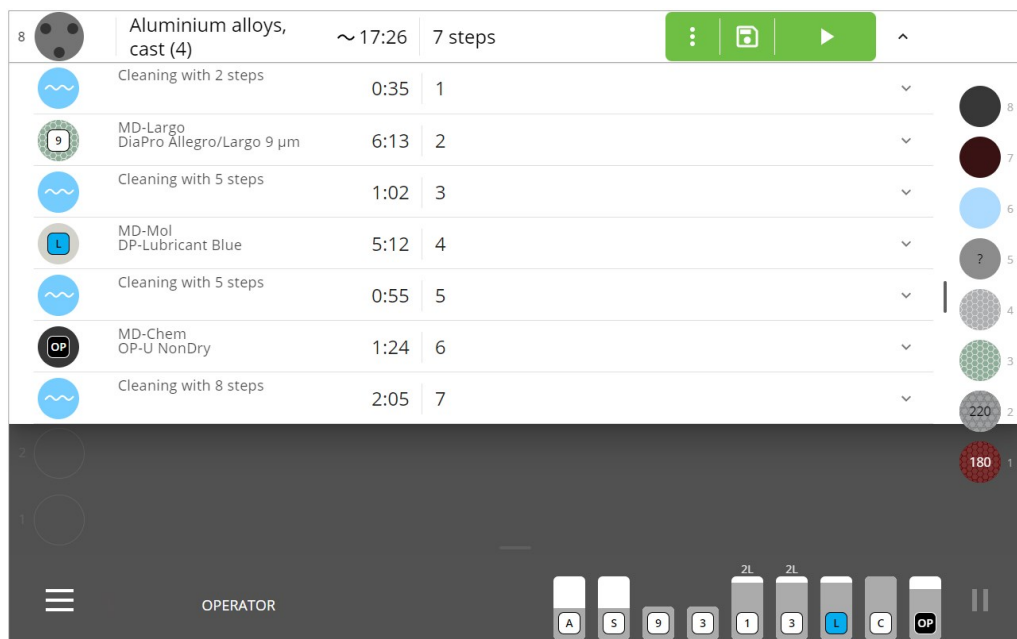

3. Choose the parameters you wish to change.

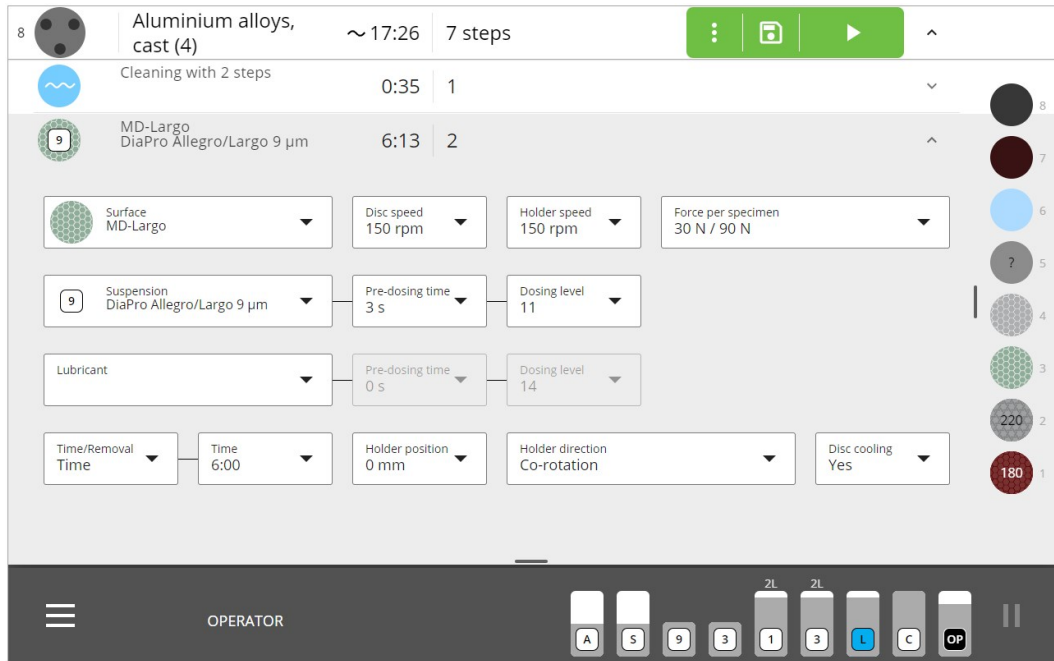

Parameters vary from step to step but may include:


Parameters for preparation steps	Definition
Disc speed	How fast the disc rotates.
Holder speed	How fast the specimen holder rotates.
Force	Force per specimen is the force applied on each specimen during the process.
Predosing time	The dosing time prior to the preparation process.
Dosing level	The dose during the process (see recommended dosing levels in <a href="#">Dosing level ▶ 57</a> ).
Time/removal	Defines if the step is based on time or the amount of material to be removed
Holder position	Defines the position of the specimen holder on the MD-Disc. See more in <a href="#">Specimen holder position ▶ 56</a> below.
Holder direction	Defines if the specimen holder should run in the same or opposite direction as the MD-Disc.
Disc cooling	Defines if water should cool the MD-Disc during the process. See more in <a href="#">Disc cooling ▶ 58</a> .

**Specimen holder position**

The specimen holder can be positioned on the MD-Disc at a position from -7 to +25.

At position 0, the holder is parallel with the MD-Disc. At position +10, the holder is 10 mm offset from the edge of the MD-Disc.



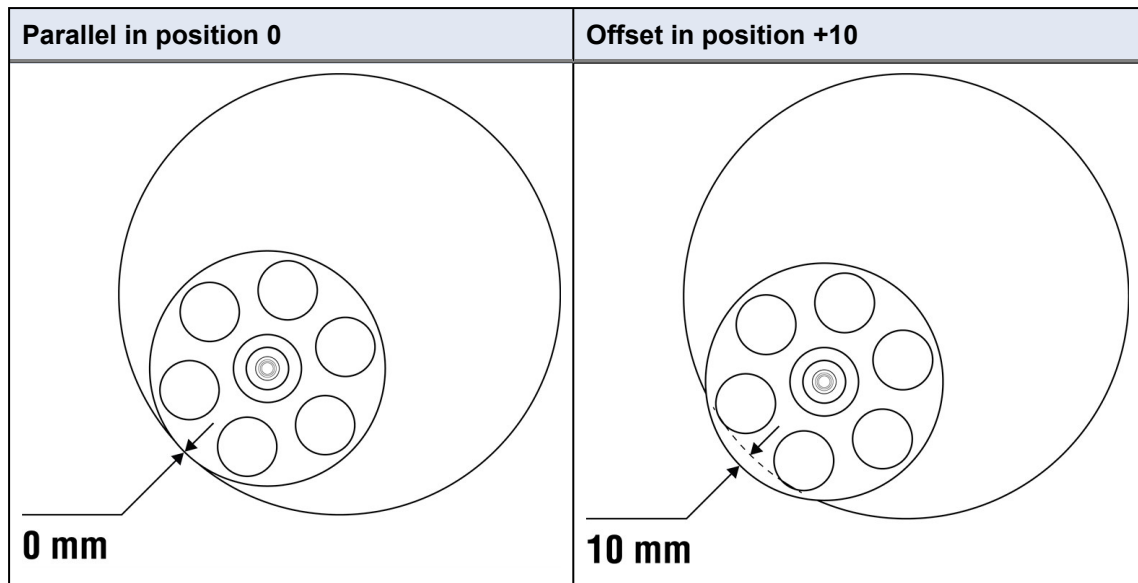

### Dosing level

All Struers methods automatically adjust the dosing level according to the disc size used on the machine. This means that the dosing level on a 250 mm MD-Disc is lower for the same method than it is on a 300 mm MD-Disc.

**Dosing level for a 300-mm MD-Disc**

Dosing level	ml/min
1	0.09
2	0.11
3	0.13
4	0.15
5	0.18
6	0.21
7	0.25
8	0.29
9	0.34
10	0.40
11	0.46
12	0.55
13	0.64
14	0.75
15	0.88
16	1.03
17	1.21
18	1.43
19	1.67
20	1.96
21	2.30
22	2.70

Dosing level	ml/min
23	3.17
24	3.72
25	4.37
26	5.13
27	6.02
28	7.06
29	8.28
30	9.72
31	11.41
32	13.39
33	15.71
34	18.44
35	21.63
36	25.39
37	29.79
38	34.96
39	41.03
40	48.15
41	56.50
42	66.31
43	77.81

**Disc cooling**


You can activate the optional cooling of the MD-Disc during a specific step.

**Hint**


When you use the discs cooling function, the MD bowl is also flushed and easier to keep clean.

**Procedure**

1. Tap the 3 dots to the left of the **Run** button.

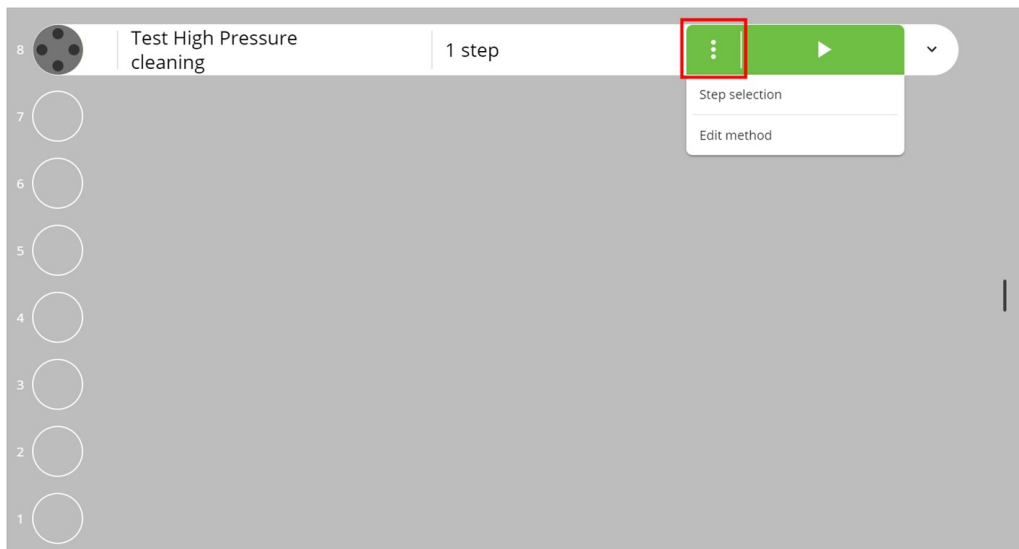

2. Tap **Edit method**.
3. Tap the step for which you want to change the **Disc cooling** setting.

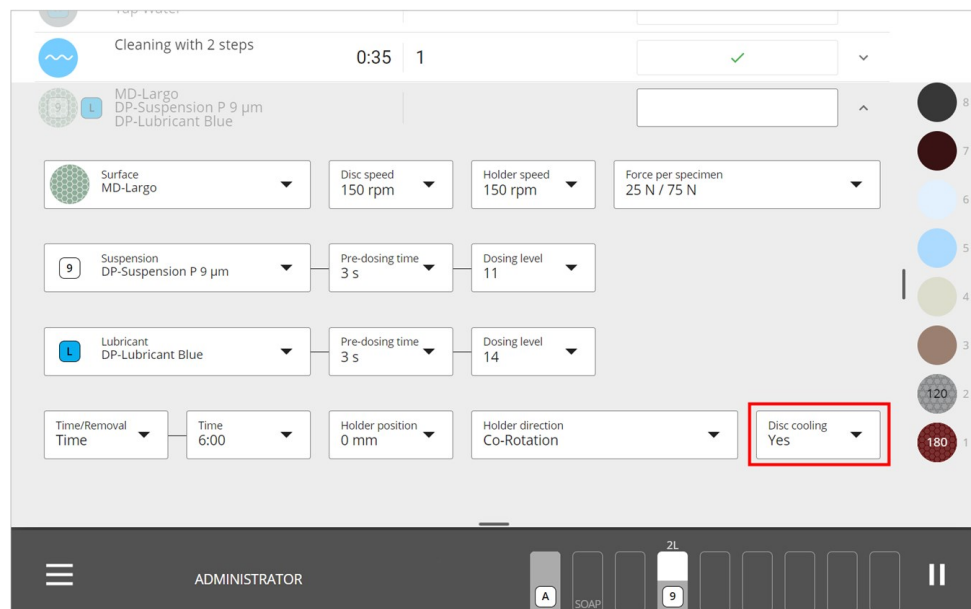


4. Select the desired setting.

## 7.4.2 Custom methods

### Create custom methods

You can create your own custom method if you copy a Struers method, add or modify steps, and then save in a different name. All methods that you change are saved in the **Method library** (see how to access in [Overview of the display ▶ 21](#) under "Detailed view").

You also find custom methods in the **Methods** tab:

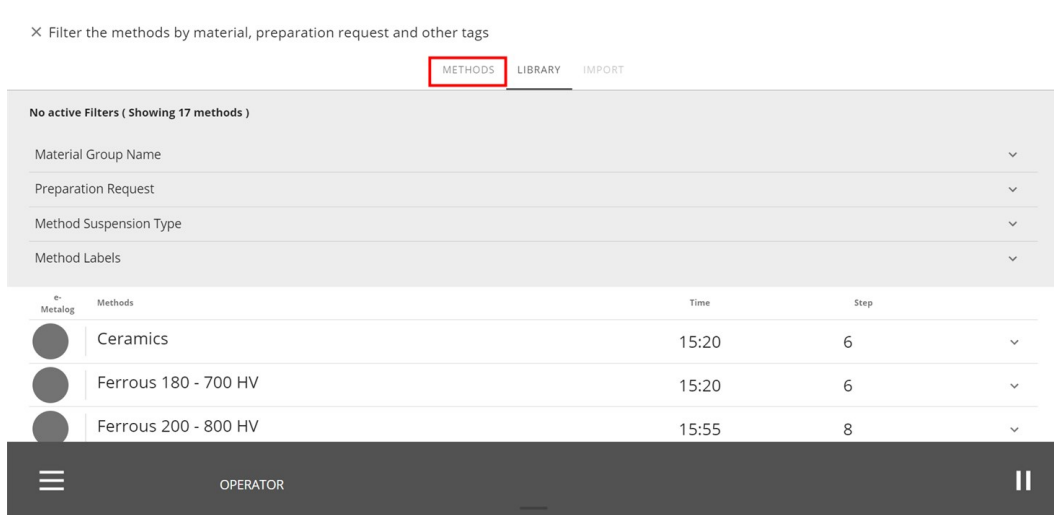


### Edit a custom method


You can edit a custom method before starting the preparation process, and while the preparation process is running. You can either do this via the **Method library** when there is a specimen holder in the machine, or via the **Main menu**.

#### Edit a method via the Method library


1. Log in to the machine as an **Administrator**.
2. Place a specimen holder in the desired position.  
The machine shows the latest applied method as default.
3. Tap the 3 dots to access the **Edit method** menu.

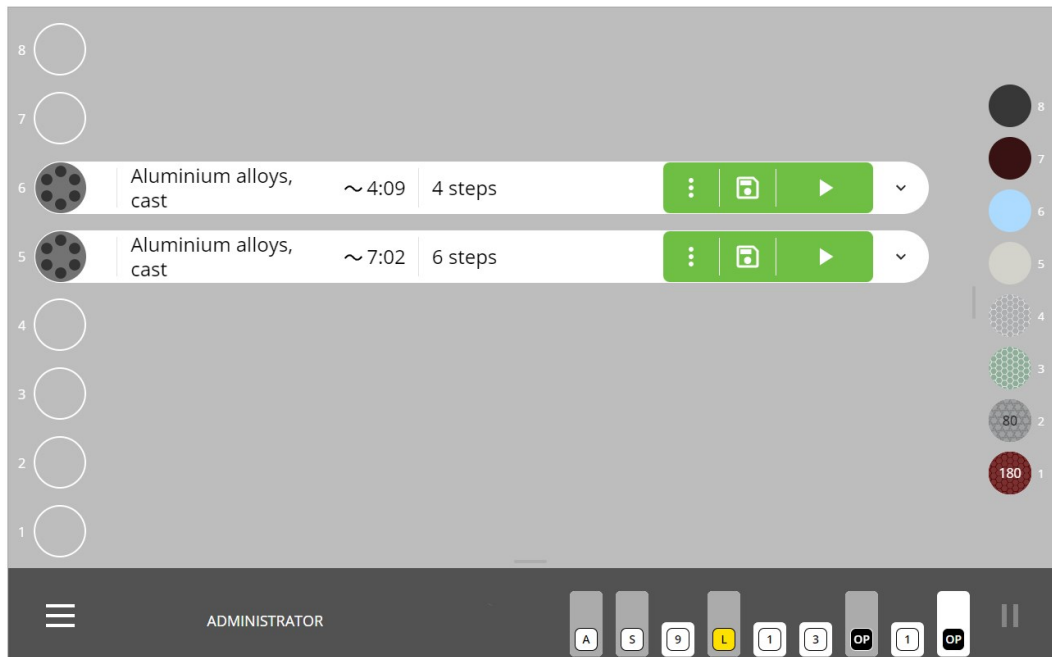

4. Select the step you want to edit.

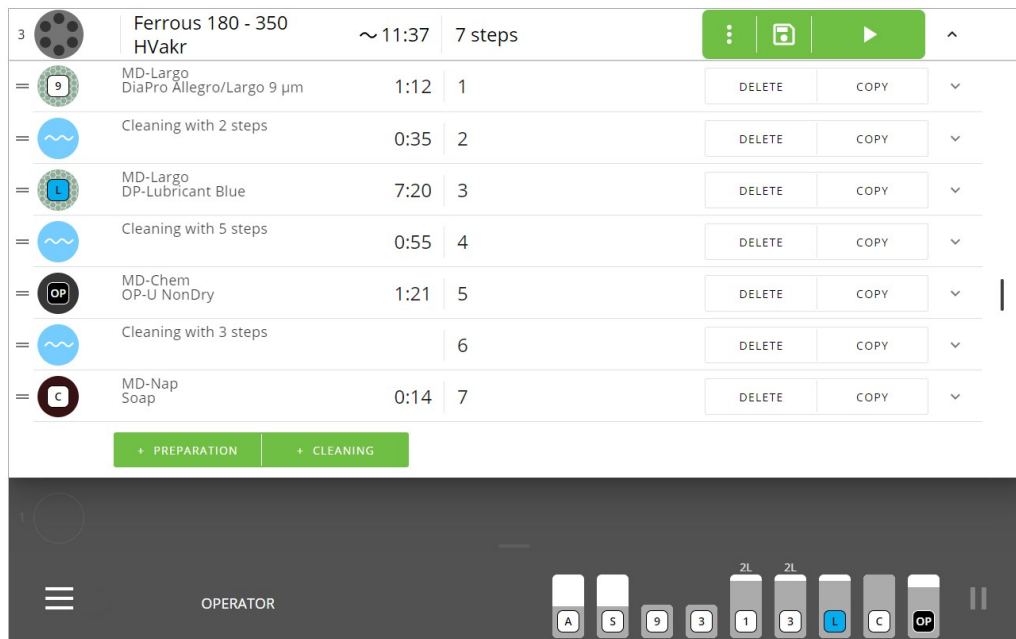


5. You can **Delete** or **Copy** steps, and you can add **Preparation** and **Cleaning** steps as desired.
6. When you finish editing, you can save your changes.

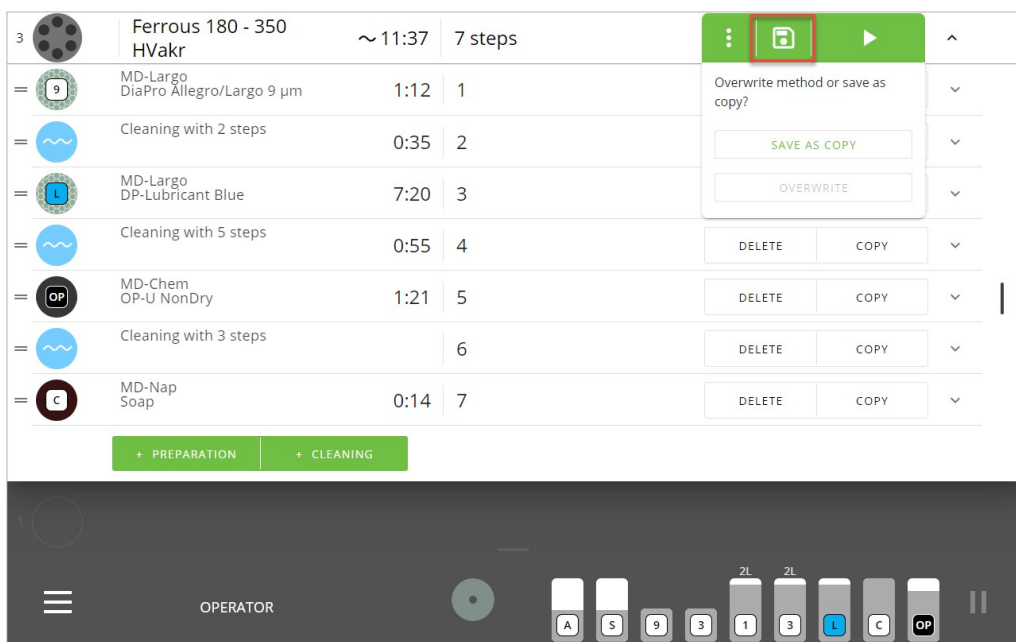


#### Edit a method via the Main menu

1. Log in to the machine as an **Administrator**.
2. Tap the **Main menu**.
3. Tap **Methods**.


## 7 Operate the device

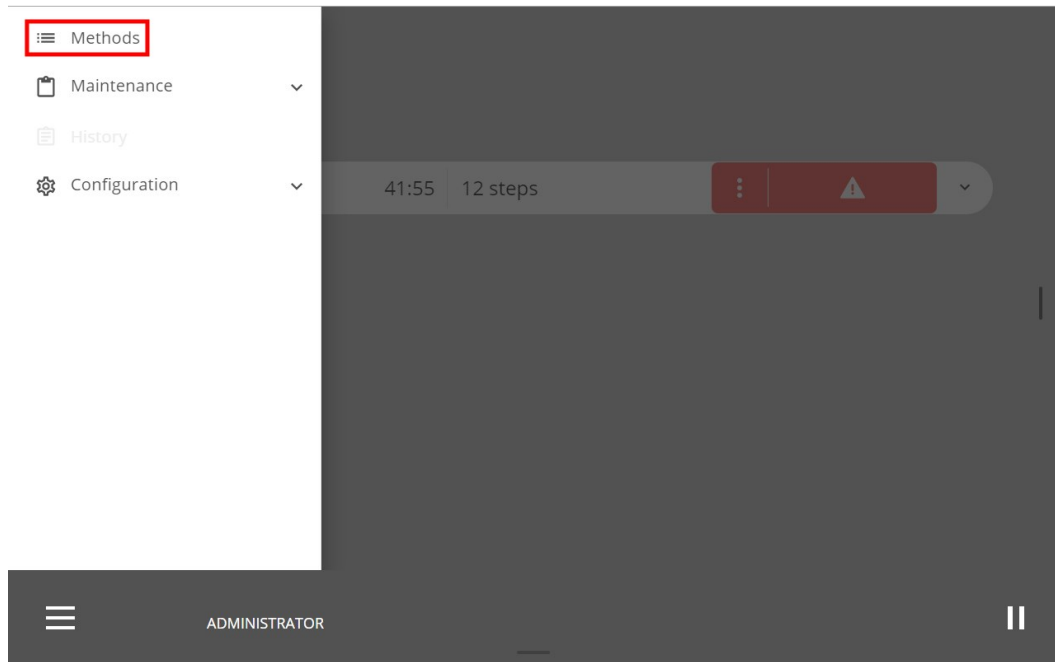

4. Tap **Methods** to open the user-defined **Method library**, or tap **Library** if you want to open the Struers **Method library**.

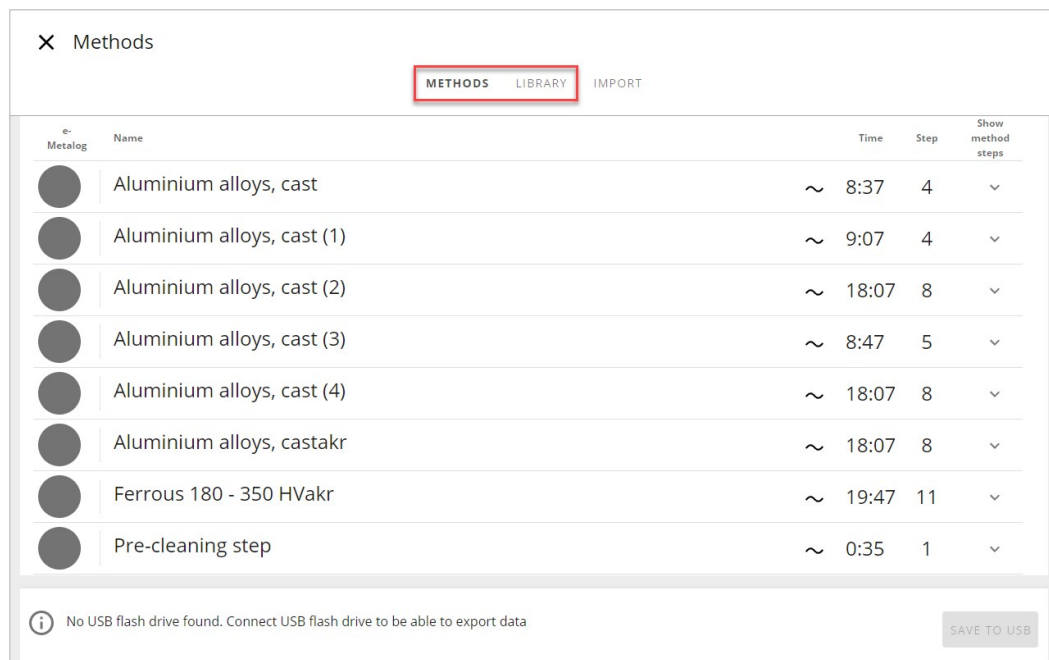

5. Select the method you want to edit.
6. You can **Delete** or **Copy** steps, and you can add **Preparation** and **Cleaning** steps as desired.
7. When you finish editing, you can save your changes.

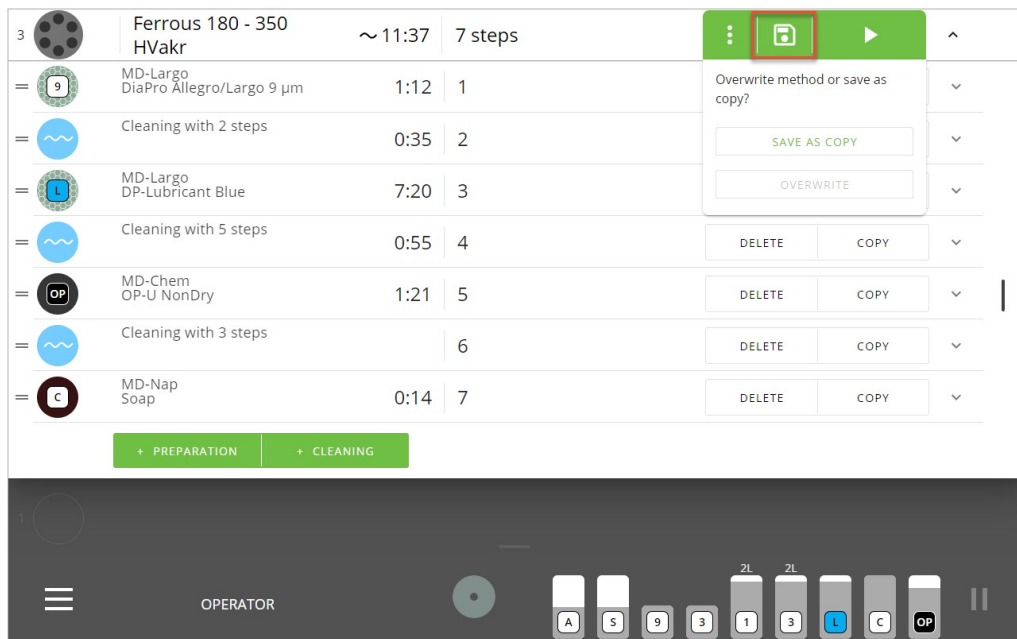

## 7.5 The preparation process

### 7.5.1 Prepare the specimen holder for the Xmatic Compact with conveyor

1. Place your specimens in the specimen holder.
2. Place your specimen holder in the conveyor. See [Place and remove the specimen holder ▶ 50](#).
3. Manually select the number of specimens you have in the holder, or tap the **Run** button to start automatic detection, dependent on your settings in [Machine settings for Xmatic Compact with conveyor ▶ 89](#).
4. Select a method for each specimen holder you have inserted. See [Methods ▶ 53](#)
5. The force is adjusted either automatically or manually at your option. See [Machine settings for Xmatic Compact with conveyor ▶ 89](#).



#### Note

With the vertical conveyor: If you have placed several specimen holders in the conveyor, the specimen holders are queued based on the order in which you have pressed **Run** for each of the specimen holders. To modify the queue, tap **Eject**, and press **Run** for each specimen holder in the order you want them to be processed.

### 7.5.2 Prepare the specimen holder for the Xmatic Compact without conveyor

You must manually select the number of specimens you place in the specimen holder.

1. Open the main safety cover.
2. Insert the specimen holder into the pick-up station.
3. Close the main safety cover.
4. Select the method.

## 7 Operate the device

---

5. Select the number of specimens in the holder.
6. Tap the **Run** button, and the preparation runs.
7. After the preparation, the main safety cover opens.
8. Take the specimen holder out, and insert a new one.



### Note


Without the vertical conveyor: You must run one specimen holder at a time.

### 7.5.3 Step selection

If necessary, you can select steps in your standard or custom methods in a preparation process.


#### Procedure

1. Tap the 3 dots on the method line to access the **Step selection** menu.

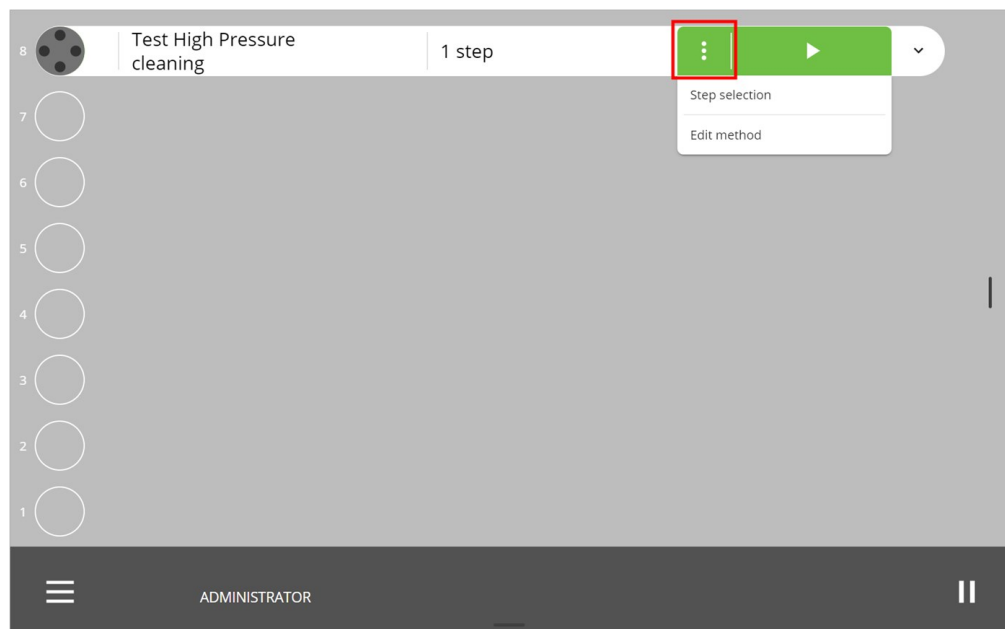

2. Tap **Step selection**.
3. Tap the fields to the right of the step name to add or skip a step. A green check mark indicates that the step is included in the preparation process.



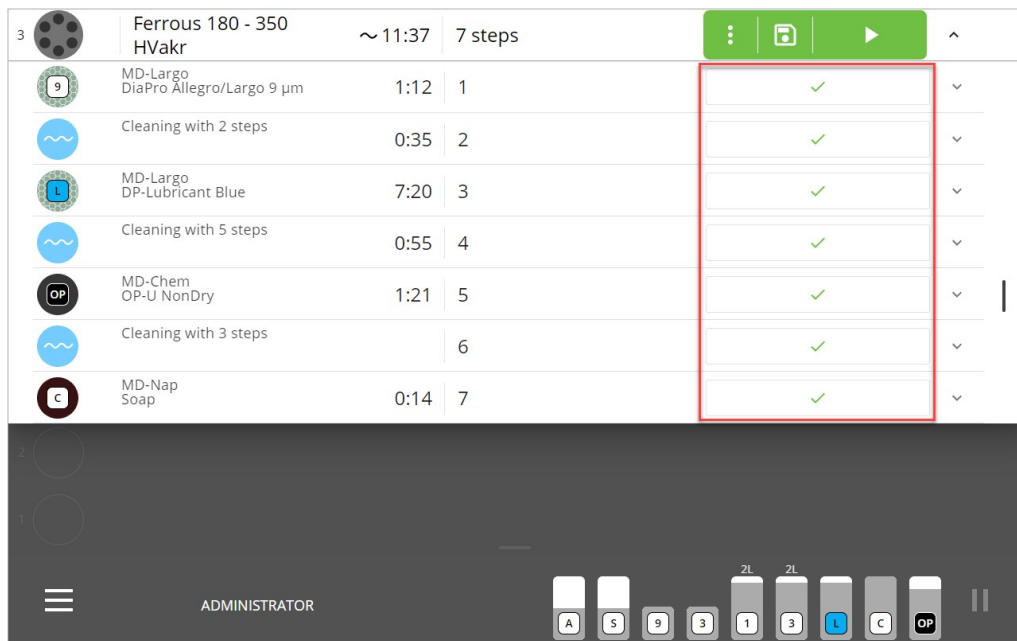


4. Tap the **Run** button, and the method will run with the selected steps.

#### 7.5.4 Indication of missing consumables

If the necessary consumables are not present in the machine, a yellow triangle is shown to prompt you to place the missing consumables in the bottle rack.


The **Run** button is also red to indicate that you cannot run the process.

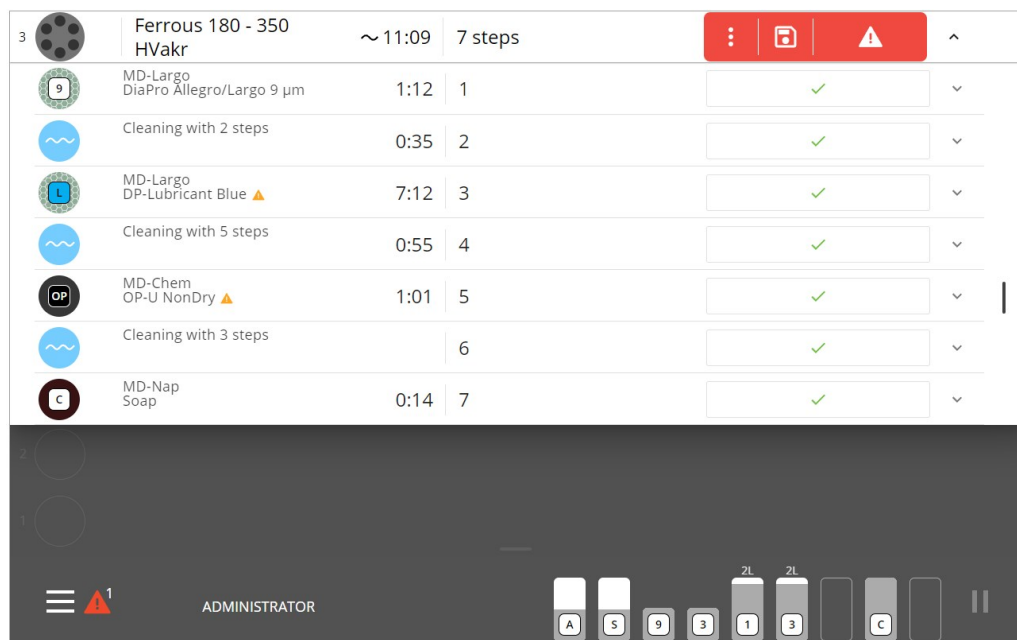

#### Procedure

1. Place the missing consumables, and the **Run** tap will turn green.
2. Tap **Run**.



### 7.5.5 Start the preparation process



**CAUTION**

Wear suitable gloves to protect fingers from abrasives and warm/sharp specimens.

Before you start the preparation process, you can see a list of the different preparation steps in the selected method by tapping the drop-down button.

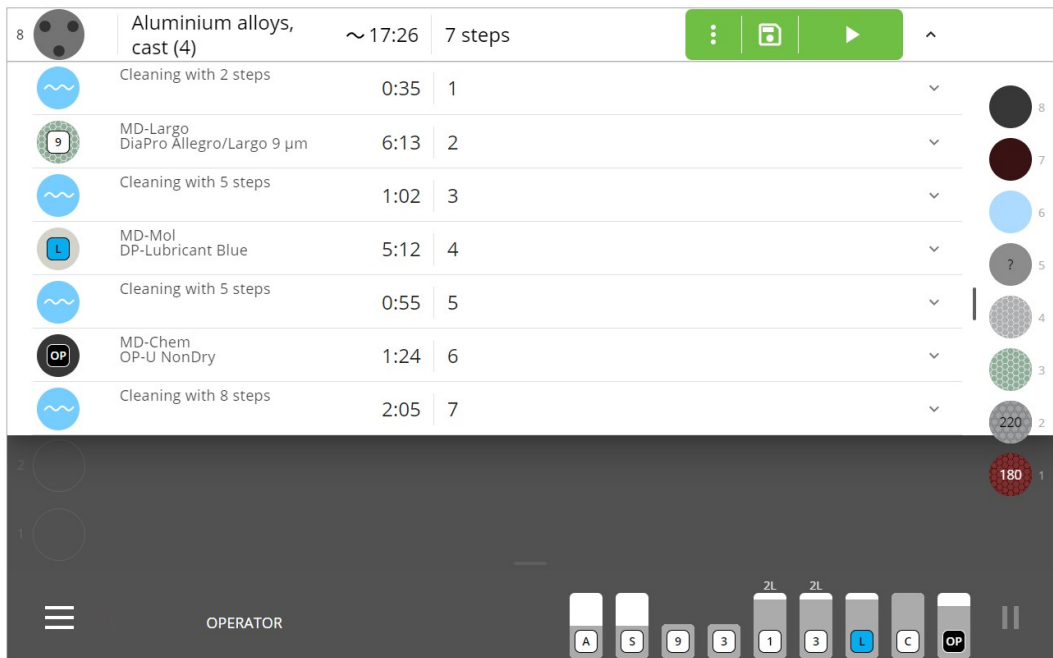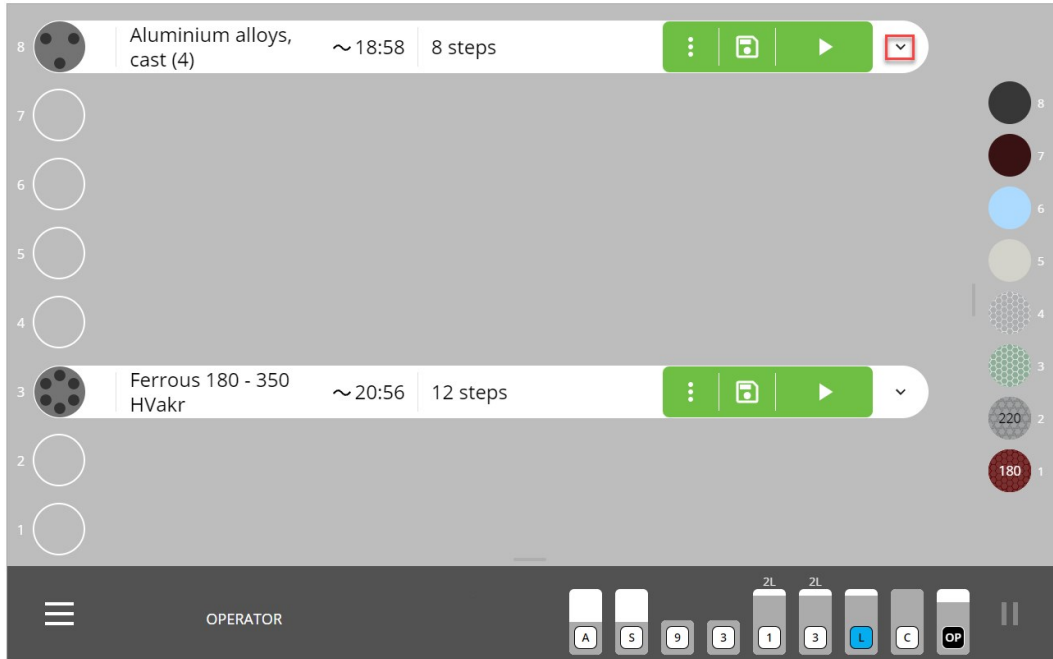

While the method runs, you can see the progress of the preparation as the time counts down to 00:00 next to the method name.

### Procedure

1. Log in to the machine as an **Administrator** or **Operator**.
2. In the **Methods**, select the desired method.
3. Make sure that all the necessary consumables and MD surfaces are available on the machine. The **Run** button must be green.



4. Tap **Run**.

The machine stops automatically when the process is completed.



#### Note


With the vertical conveyor: If you have placed several specimen holders in the conveyor, the specimen holders are queued based on the order in which you have pressed **Run** for each of the specimen holders. To modify the queue, tap **Eject**, and press **Run** for each specimen holder in the order you want them to be processed.

### 7.5.6 Inspect the specimens


You can at any time inspect a specimens holder and the specimens while the preparation process is running.

#### Procedure

1. On the preparation process bar, tap the **Pause** button.

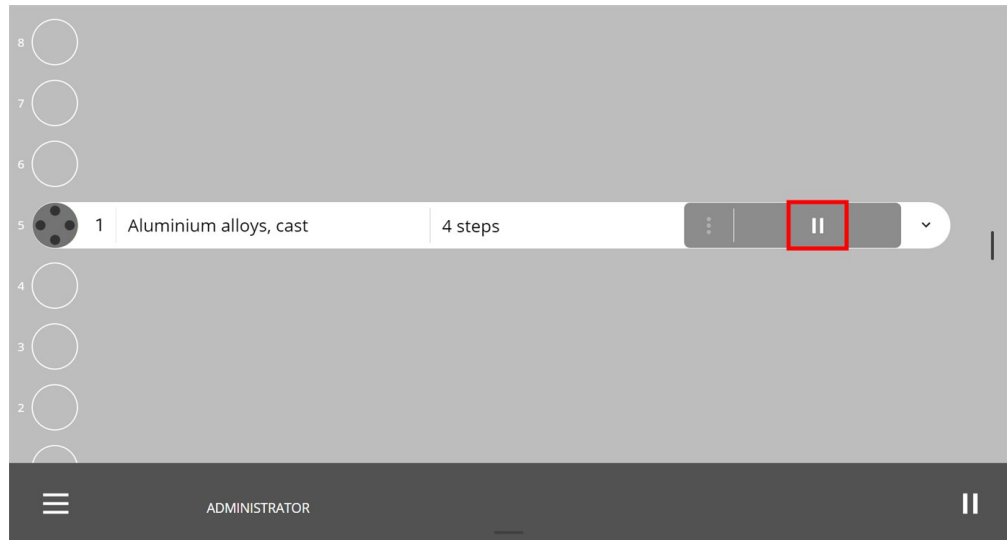

2. Tap the **Eye** button on the process bar.

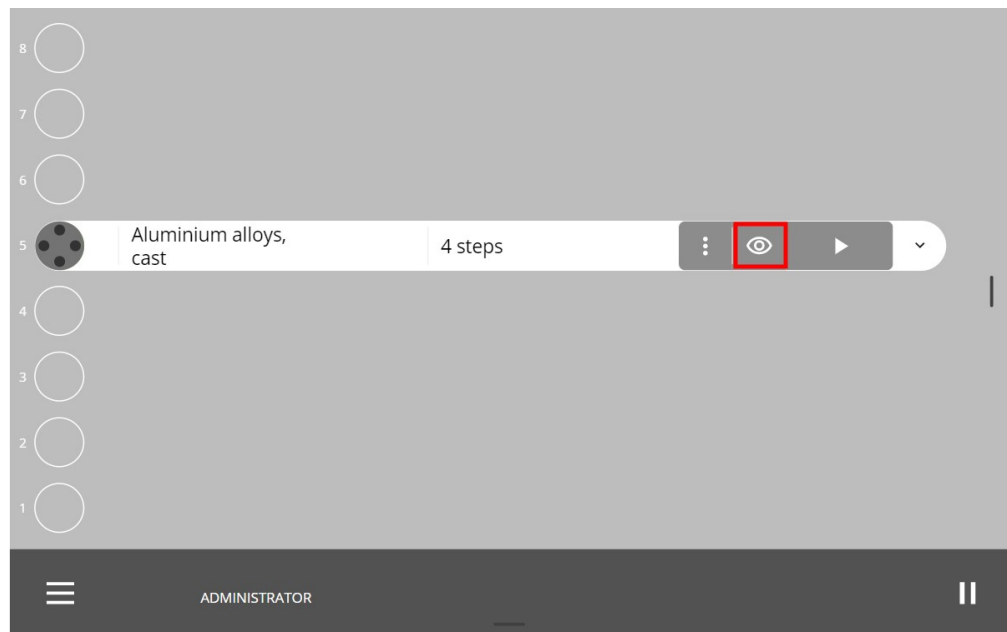

3. The machine returns the specimen holder to its drawer in the vertical conveyor, or to the pick up point if you do not have a vertical conveyor, and you can now inspect it.

### After inspection


1. Insert the specimen holder again.
2. Tap **Run**, and the machine will continue from where you paused it.  
Alternatively, tap the 3 dots and select **Start over**.

### 7.5.7 Open the MD-elevator

You can change or refill MD surfaces while the machine is running.

### Open the MD-elevator door during the process

1. Tap the **Main menu**.
2. Select **Unlock MD safety cover**.

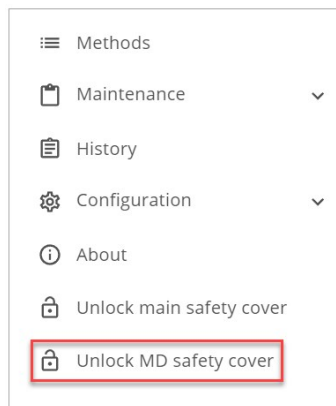

### Exceptions


You cannot open the MD elevator door:

- while the machine is reading the MD surfaces
- when the machine is either delivering or retrieving an MD surface
- when the machine is in fact processing on the MD station.

### 7.5.8 Pause the ongoing process

During the preparation, you may discover that you need to pause the process. You can then pause the ongoing process on the display.


1. Tab on the **Pause** icon.

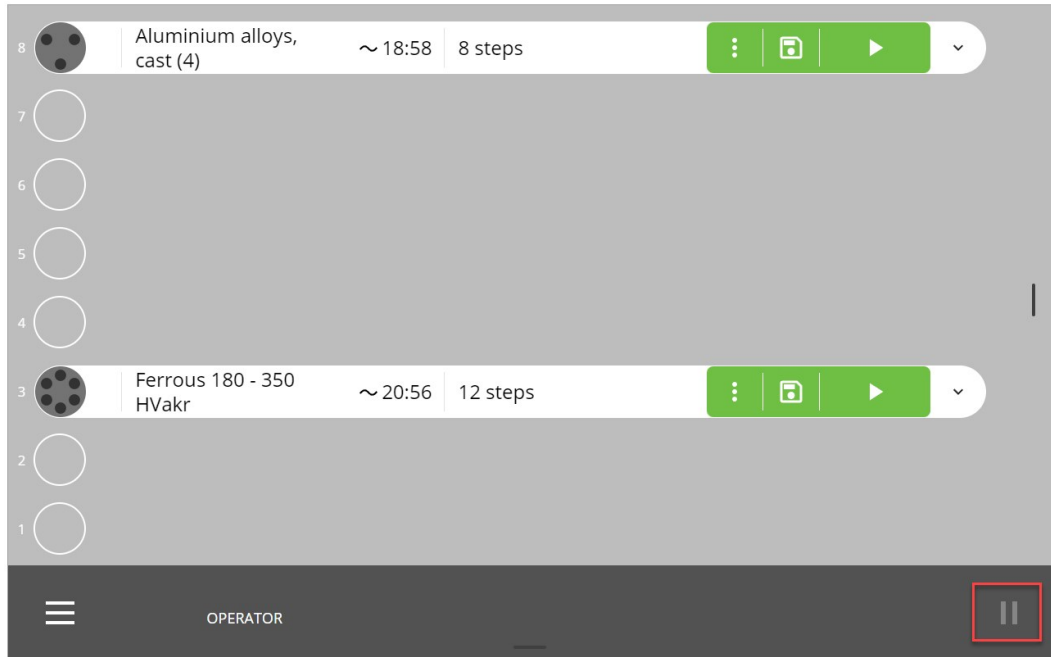

2. Complete the action you wish to perform.
3. Tab the **Pause** icon again to resume the preparation.

### 7.6 Beacon (option)

The machine can be equipped with a beacon that indicates the operational state of the machine.

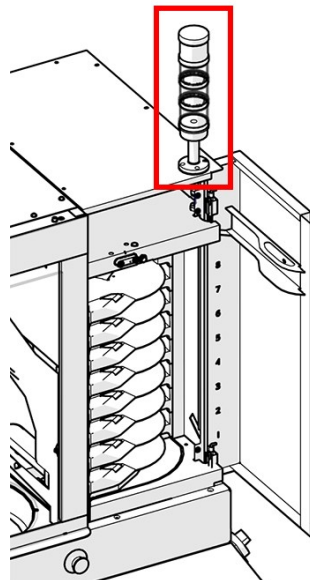

Per default, there are 3 light positions:

Top position	Red light	Machine error
	Constant light	Active error
	No light	No error
Middle position	Yellow light	Warning
	Constant light	Active warning
	No light	No warning
Bottom position	Green light	State
	Flashing light	The machine is paused
	Constant light	The machine is in work
	No light	The machine is idle




#### Hint

For more information about this unit, see the specific Instruction Manual or User Guide.

## 7.7 History - log file reporting


### Procedure

1. Log in as an **Administrator** (described in [Log in as an Administrator ►44](#)).
2. In the **Main menu**, select **History**.

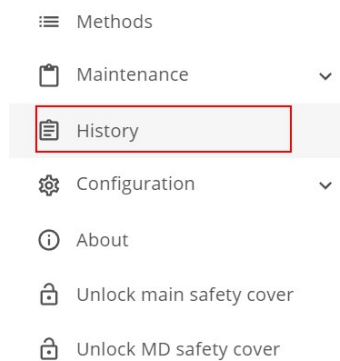

## 7 Operate the device

3. Click in the **Date range** area.

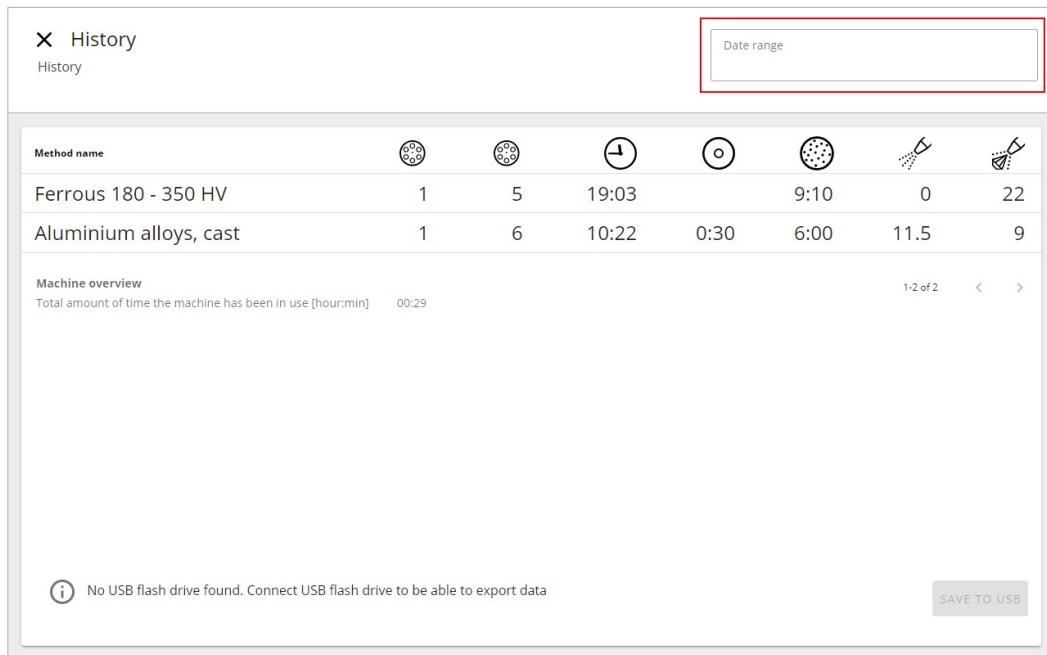


The screenshot shows the 'History' interface with a table of machine usage. A red box highlights the 'Date range' input field in the top right corner.

Method name							
Ferrous 180 - 350 HV	1	5	19:03		9:10	0	22
Aluminium alloys, cast	1	6	10:22	0:30	6:00	11.5	9

**Machine overview**  
Total amount of time the machine has been in use [hour:min] 00:29 1-2 of 2 < >

No USB flash drive found. Connect USB flash drive to be able to export data SAVE TO USB

4. Select the time range you are interested in.

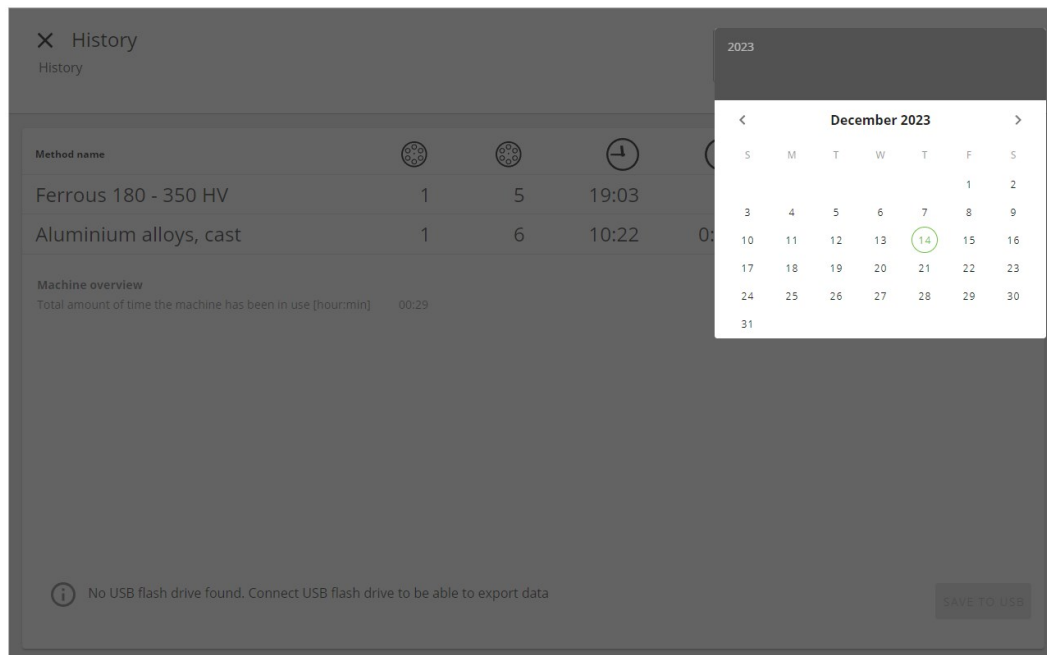

The screenshot shows the 'History' interface with a calendar overlay. The date December 14, 2023, is selected and highlighted in green.


Method name							
Ferrous 180 - 350 HV	1	5	19:03		9:10	0	22
Aluminium alloys, cast	1	6	10:22	0:30	6:00	11.5	9

**Machine overview**  
Total amount of time the machine has been in use [hour:min] 00:29

No USB flash drive found. Connect USB flash drive to be able to export data SAVE TO USB



- See the data for the selected period on the display.

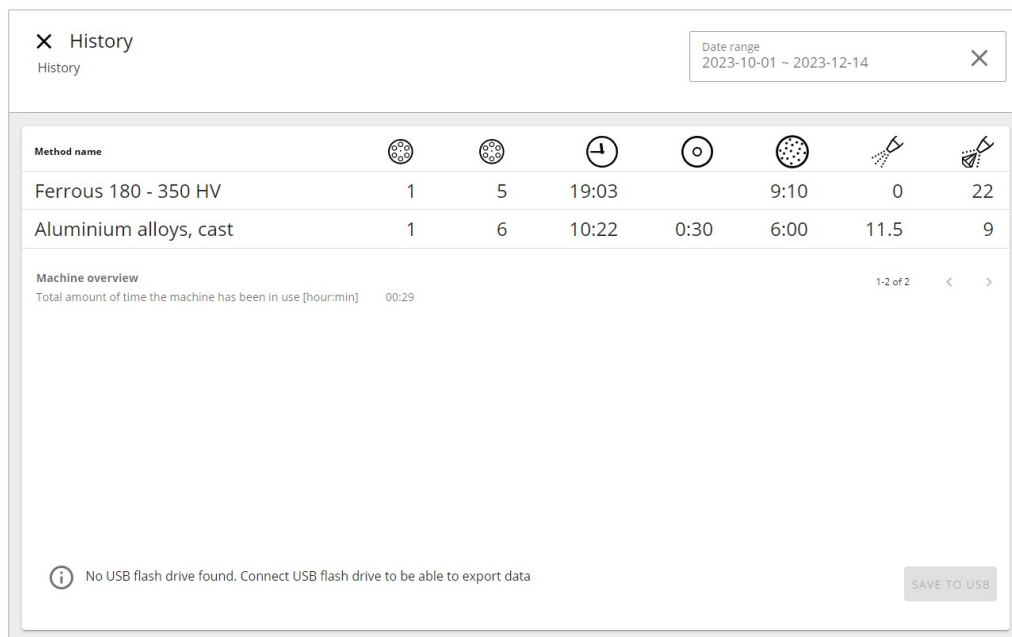

- To export the data, connect a USB flash drive, and tap **Save to USB**.

## 8 Configuration




### Note

Only users with administrator rights can configure the machine.


With administrator rights, you can adjust various machine settings on the display.

### Procedure

- Select and log in as an **Administrator**. ([Log in as an Administrator ► 44](#)).
- Tap the **Main menu** button ([Overview of the display ► 21](#)).
- Select **Configuration**.

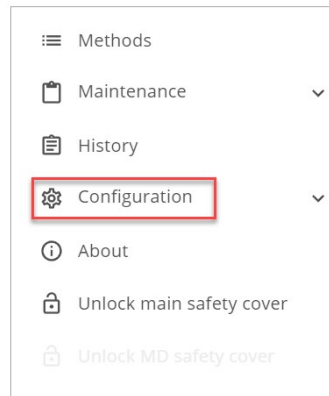

4. You can now access the following sub menus that will be described in this chapter:

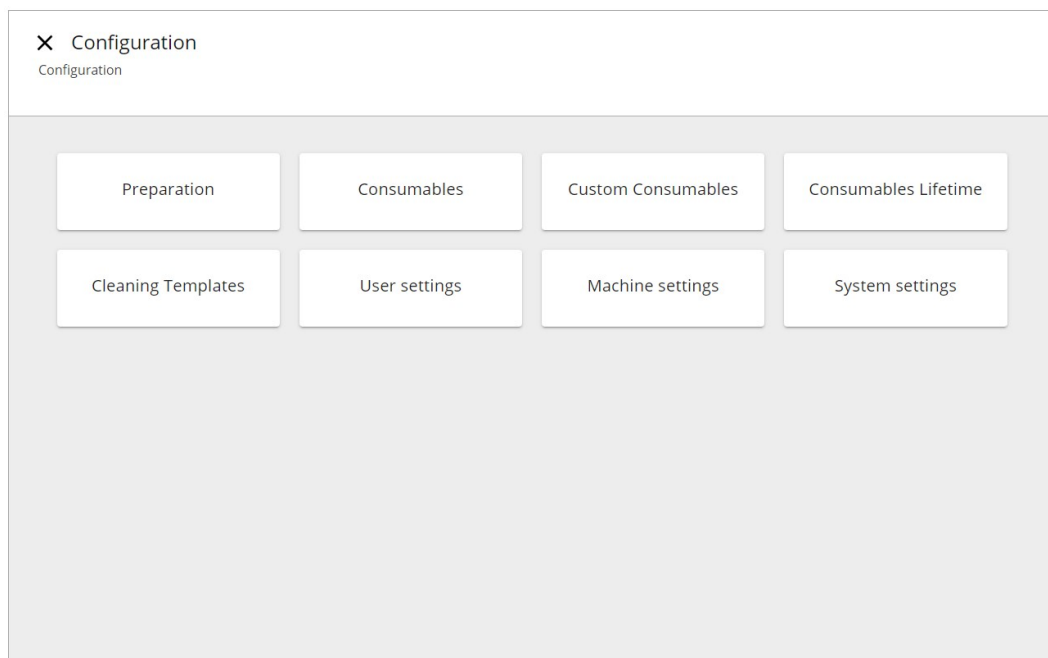

## 8.1 Preparation

### 8.1.1 Configure the MD grinding surface

1. Log in to the machine as an **Administrator**.
2. From the **Main menu**, select **Configuration**.

3. Then select **Preparation** and the **MD tab**.
4. Now choose the desired settings.

X Preparation  
 Configuration > Preparation

MD

**Dressing**

Dress MD Alto after process: Yes  
 Dress diamond disc after process: Yes

**Cleaning**

Clean surface after process: Yes  
 Clean disc after process: Yes

### Dressing

To ensure the removal rate of the surface, you can dress the MD-Alto and the diamond-grinding surfaces, e.g. the MD-Piano.

### Cleaning

You can set the machine to automatically clean the surface (MD-Alto, MD-Allegro and MD-Largo and MD diamond grinding surface) after the process.

We recommend that you also clean the MD-Disc before you apply a new surface.

It is not possible to clean the MD polishing surfaces.

## 8.2 Consumables



#### Note


The machine is designed to be used only with Struers consumables specifically designed for this purpose and this type of machine.

The machine automatically detects the contents of the Struers consumables bottles and the MD surfaces when you place them in the machine.


### Configure consumables

1. Log in to the machine as an **Administrator**.
2. From the **Main menu**, select **Configuration** and **Consumables**.
3. Select the type of consumable you want to configure, that is MDs (MD surfaces) in the MD elevator or bottles in the Bottle rack.

### Configure MDs

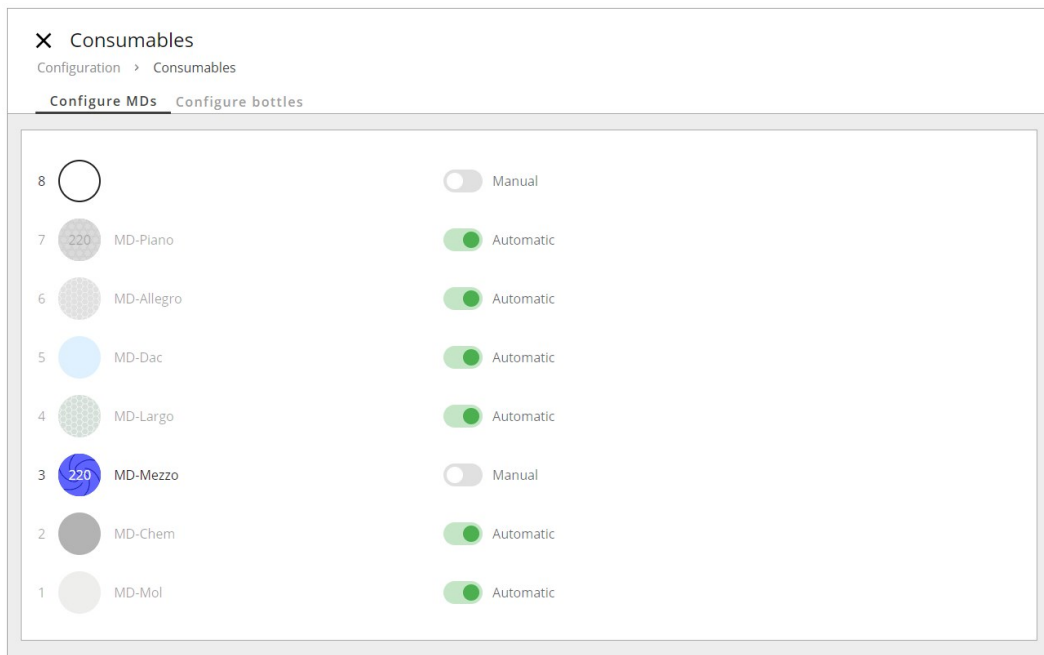

### Configure bottles

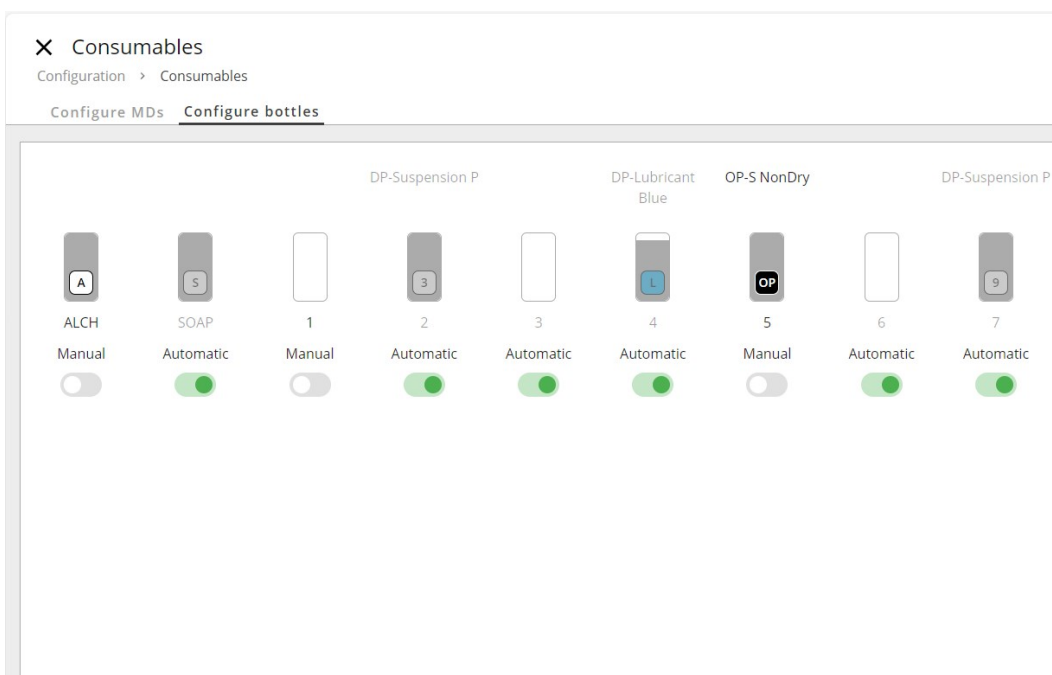

4. Select **Automatic** or **Manual**.


#### Automatic

The machine reads the data matrix code that is on all consumables.


## Manual

The machine does not look for a code to read.

1. Select the surface, suspension or lubricant on the position in question.

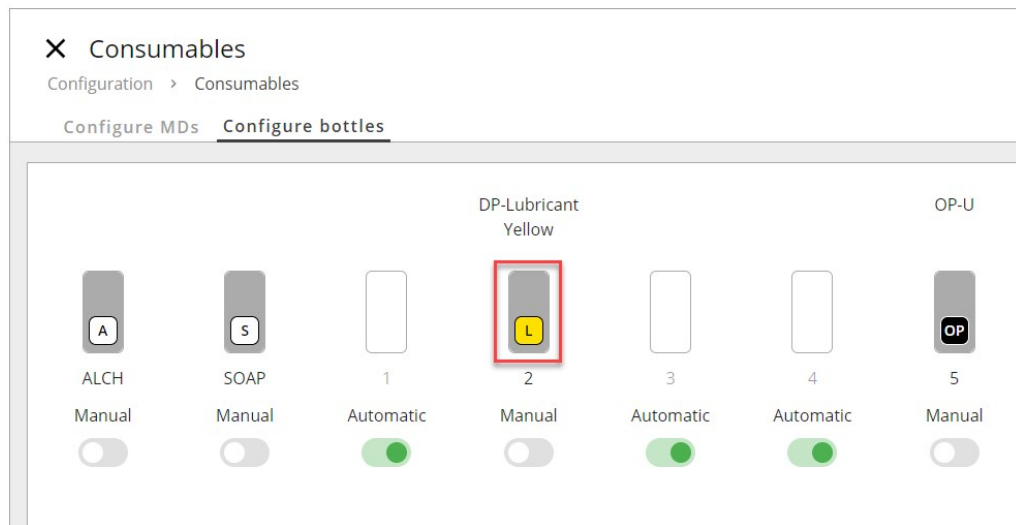

2. When you click on the button for a bottle set manually, you get a list of Struers consumables and your custom consumables:

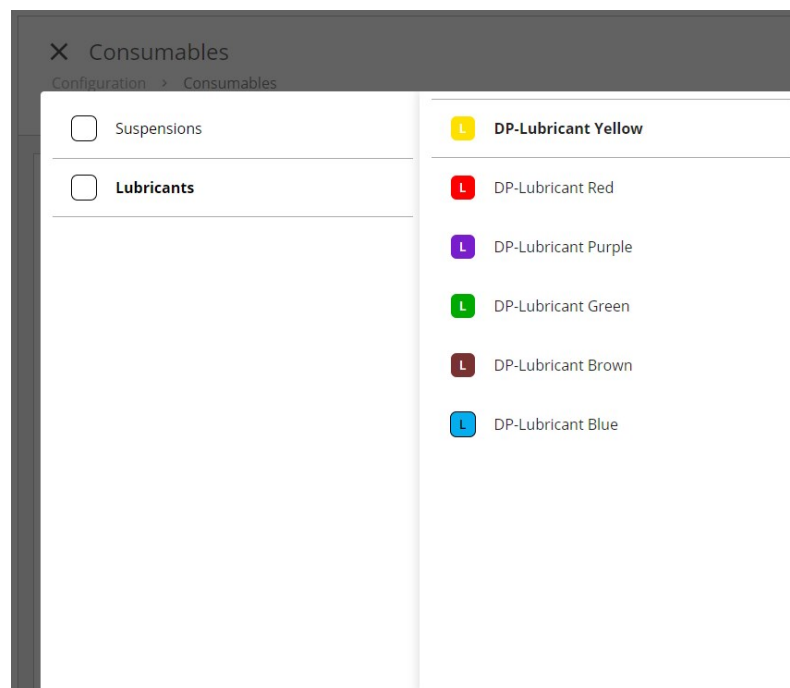


3. Select a consumable from the list, and this will have this position until you change this or select automatic, and the data matrix code is read.

See [Custom consumables ▶ 78](#) on how to add consumables.

## 8.3 Custom consumables

### Configure custom consumables

1. Log in to the machine as an **Administrator**.
2. From the **Main menu**, select **Configuration** and **Custom consumables**.
3. In the view, select the type of consumable you want to rename, delete or add, such as **MD surface**, **Suspension** or **Lubricant** , either in the menu or on the green buttons.

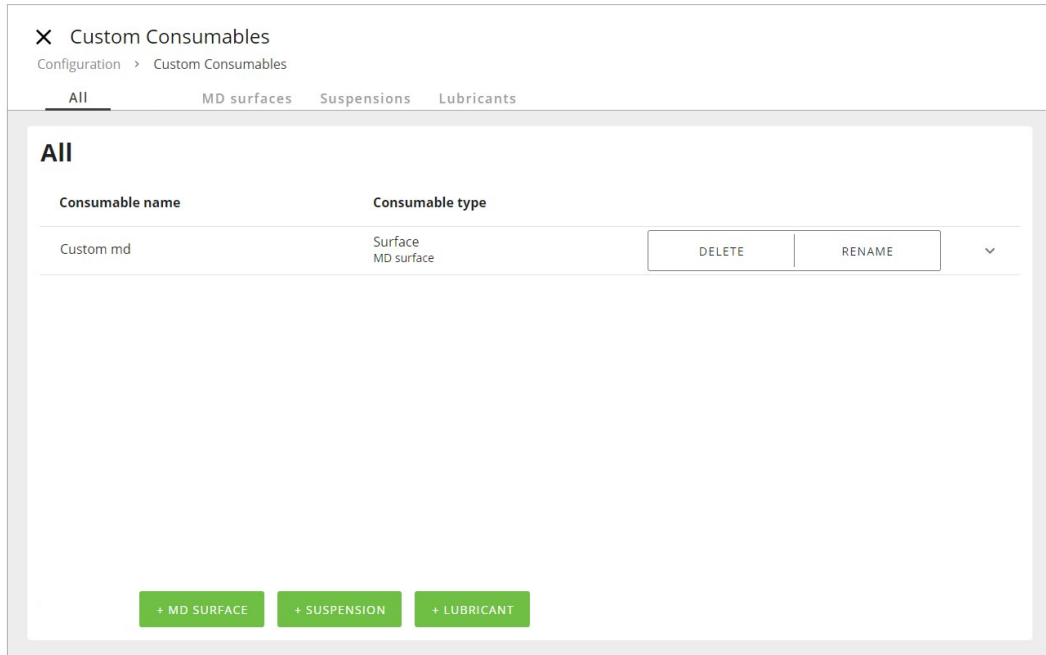


4. To add a new custom consumable, click on the green button for the consumable in question, e.g. MD surface.

5. Give the custom consumable a name. When you click on the **Consumable name** text field, a keyboard pops up.
6. Type the new name and save.


7. Choose dressing, abrasive rule, abrasive or lubricant type, dependent on the custom consumable in question.

### Dressing of MD surfaces

1. Click on the **Dressable** field in the middle.

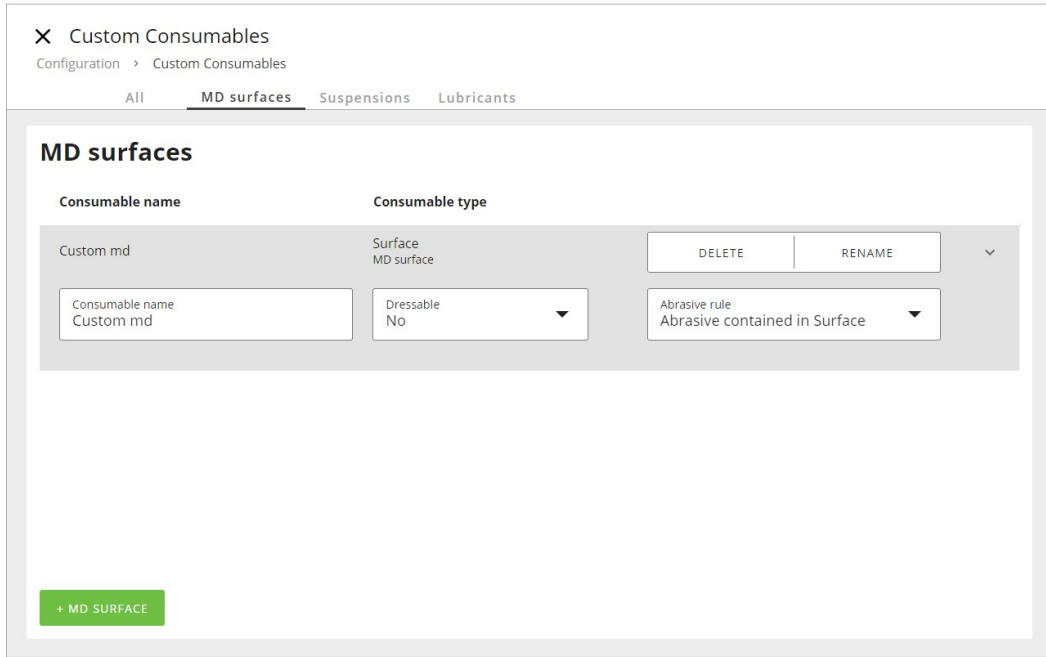


2. Select dressing.

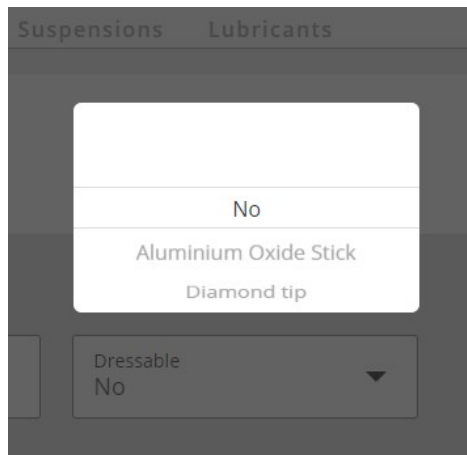

Dressing	
No:	If the custom consumable should not be dressed after process as a polishing cloth
Aluminum oxide stick:	If the custom grinding surface is a diamond grinding surface such as the MD-Piano, MD-Mezzo, and MD-Molto.
Diamond tip:	If the custom grinding surface is a resin-bonded aluminum oxide surface such as the MD-Alto.

3. Choose an abrasive rule.




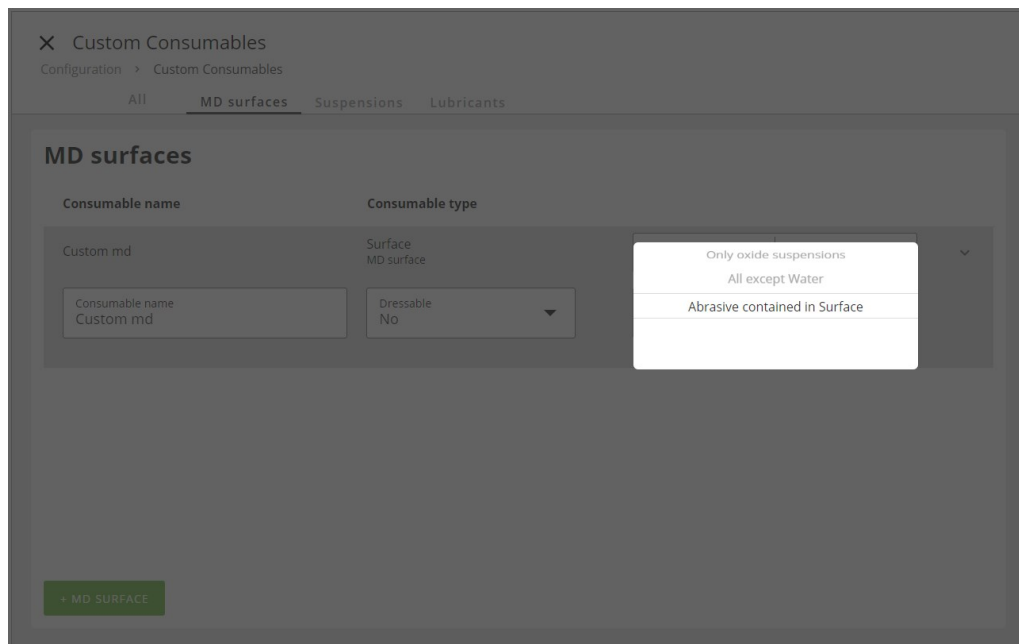


Abrasive rule	
Only diamond suspension:	If the surface is used with only diamond suspension.
Only oxide suspension:	If the surface is used only with oxide polishing products. A process step set up with an oxide polishing product will have the surface cleaned with water as the last part of the process step.
All except water:	All types of coolant or suspension can be used except water.
Abrasive contained in a surface:	The consumable has abrasives in the surface and water is used as a coolant.

### Abrasive type for the suspensions

1. Click on the **Abrasive type** field in the middle.

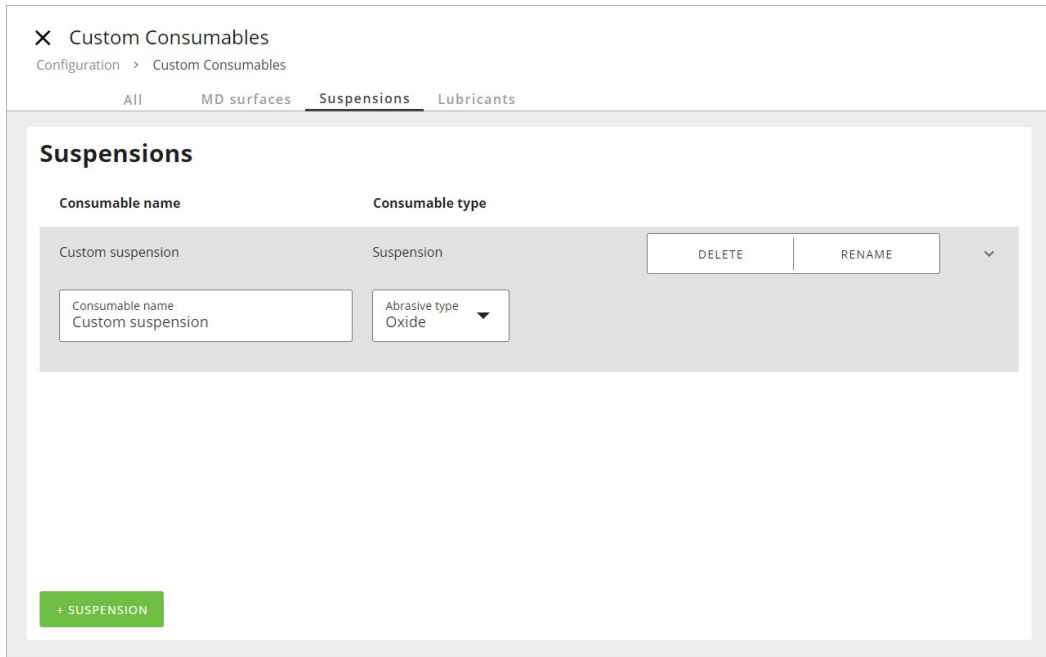

2. Choose the abrasive type.

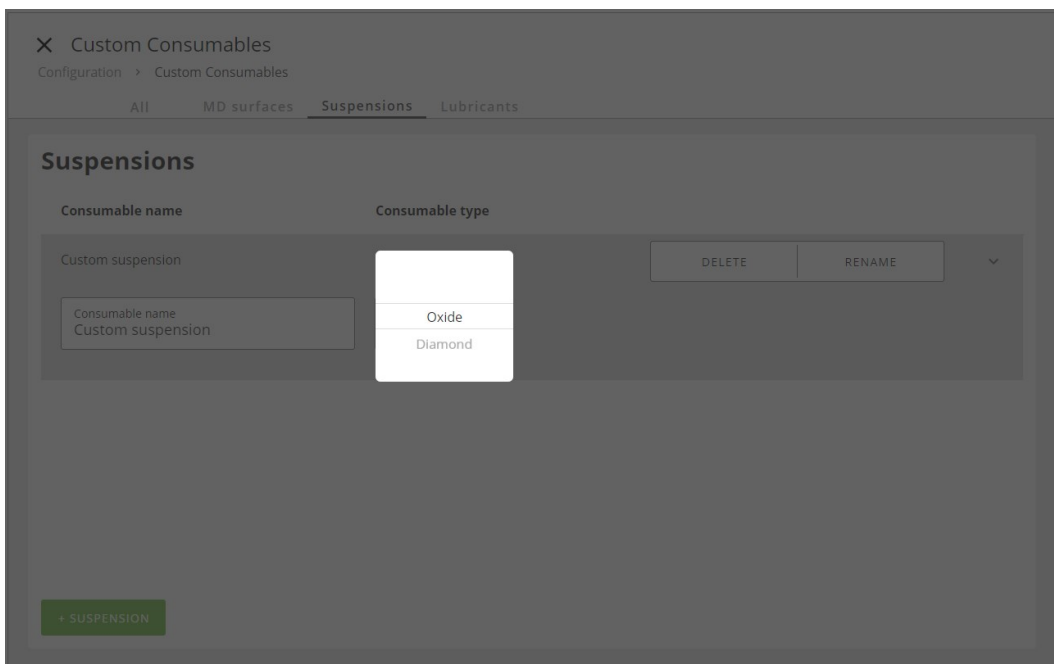

Abrasive type	
Oxide	If the custom consumable is an Oxide Polishing type of suspension
Diamond	If the custom consumable is a Diamond Suspension

**Lubricant types for the lubricants**

1. Click on the **Lubricant type** field in the middle.

Custom Consumables  
Configuration > Custom Consumables

All MD surfaces Suspensions **Lubricants**

### Lubricants

Consumable name	Consumable type	
Custom lubricant	Lubricant	DELETE   RENAME

Consumable name: Custom lubricant

Lubricant type: Water based

+ LUBRICANT

2. Choose the lubricant type.

Custom Consumables  
Configuration > Custom Consumables

All MD surfaces Suspensions **Lubricants**

### Lubricants

Consumable name	Consumable type	
Custom lubricant	Lubricant	DELETE   RENAME

Consumable name: Custom lubricant

Lubricant type: Water based

+ LUBRICANT


Lubricant type	
Water	If the custom lubricant is water-based
Alcohol	If the custom lubricant is alcohol-based

## 8.4 Consumables Lifetime


### Configure the custom lifetime of the MD surface

All Struers MD surfaces have a defined lifetime which depends on for instance the material that is prepared. If a different lifetime is relevant, you can configure this.


1. Log in to the machine as an **Administrator**.
2. From the **Main menu**, select **Configuration** and then **Consumables Lifetime**.
3. To select consumables, click on **+ Surface**.

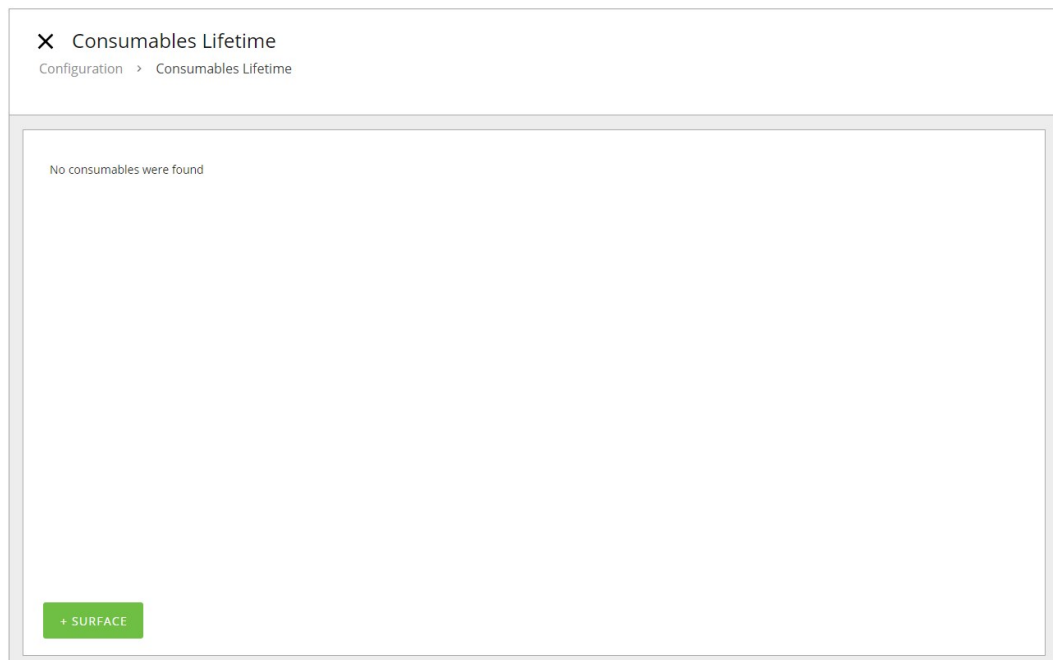

4. Click on the specific consumable you wish to change the lifetime of, for example MD-Dac.

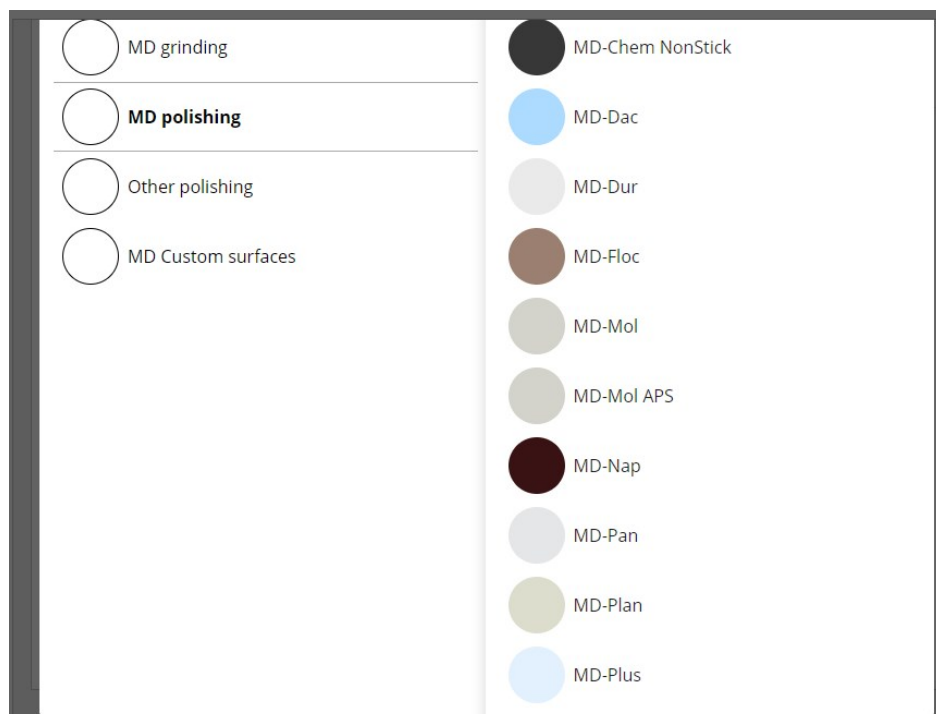

5. Now change the lifetime of the chosen consumable.

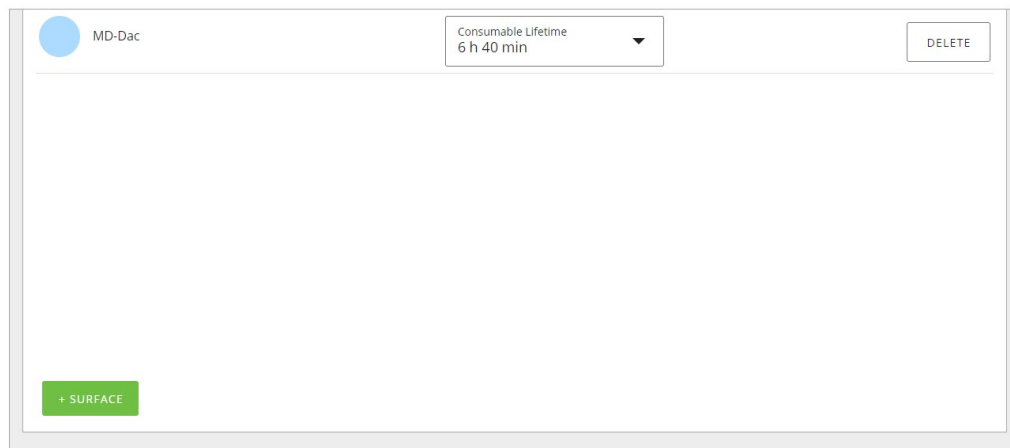

## 8.5 Cleaning Templates

The Struers methods that are already predefined and available in the **Method library** (see [Struers methods ▶ 53](#)), have built-in cleaning templates, that you cannot change.


You can; however, add a new template, or copy an existing template and configure the parameters under a different name.

### 8.5.1 Configure a new cleaning template from a copy


You can copy a cleaning template and use it to create your own cleaning template.

1. Log in to the machine as an **Administrator**.
2. From the **Main menu**, select **Configuration** and **Cleaning Templates**.


The **Cleaning Templates** menu is shown.

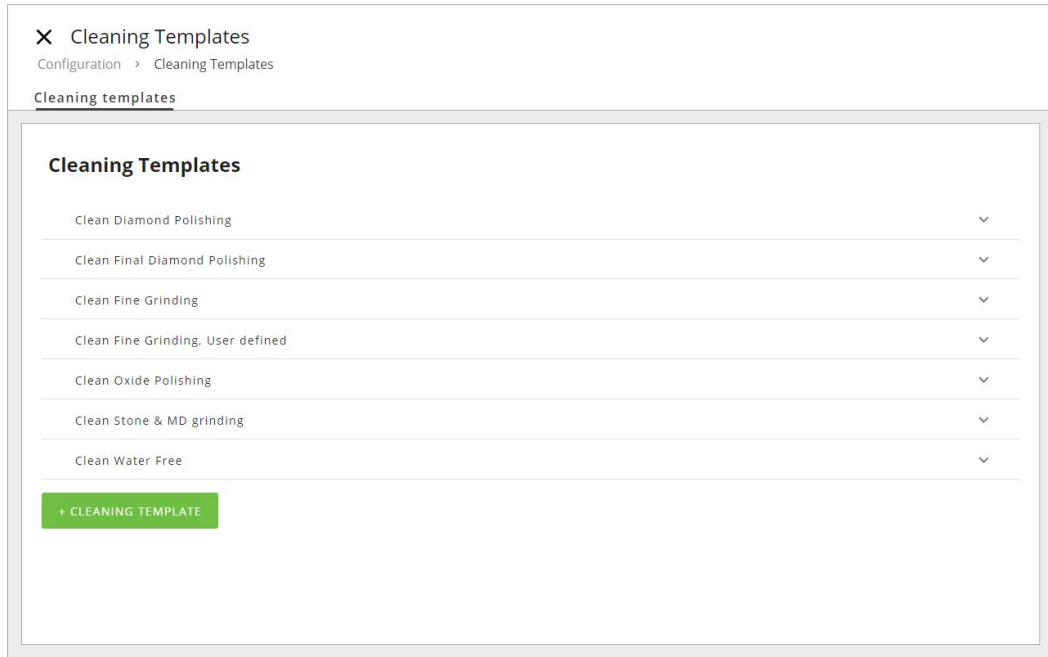

3. Select the desired cleaning template you wish to copy, and tab **Copy**.

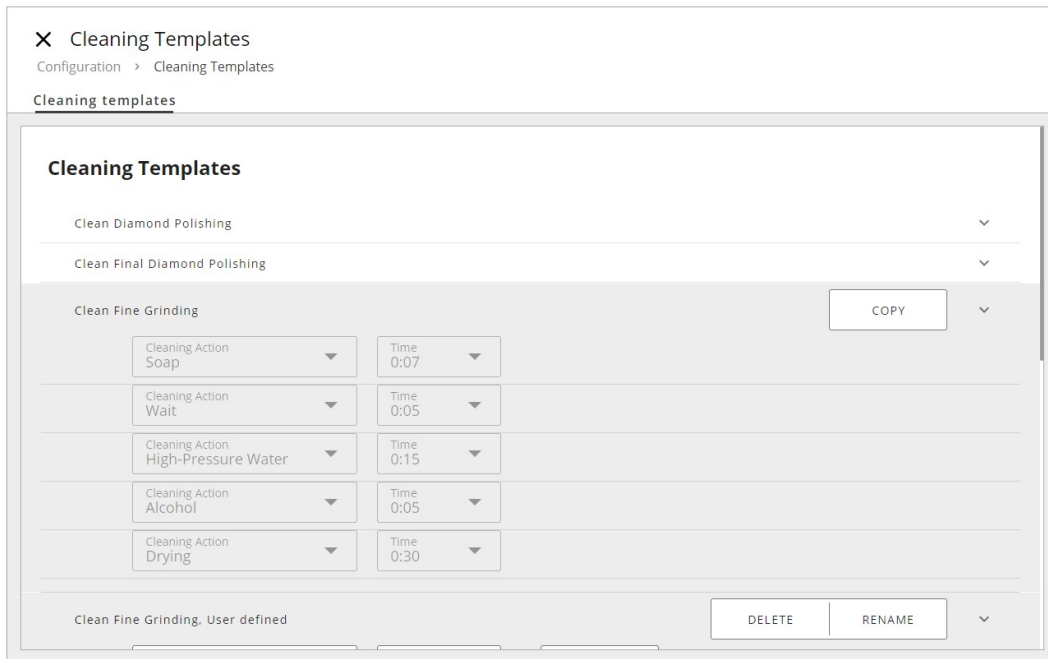

4. Now a new **User template** appears.

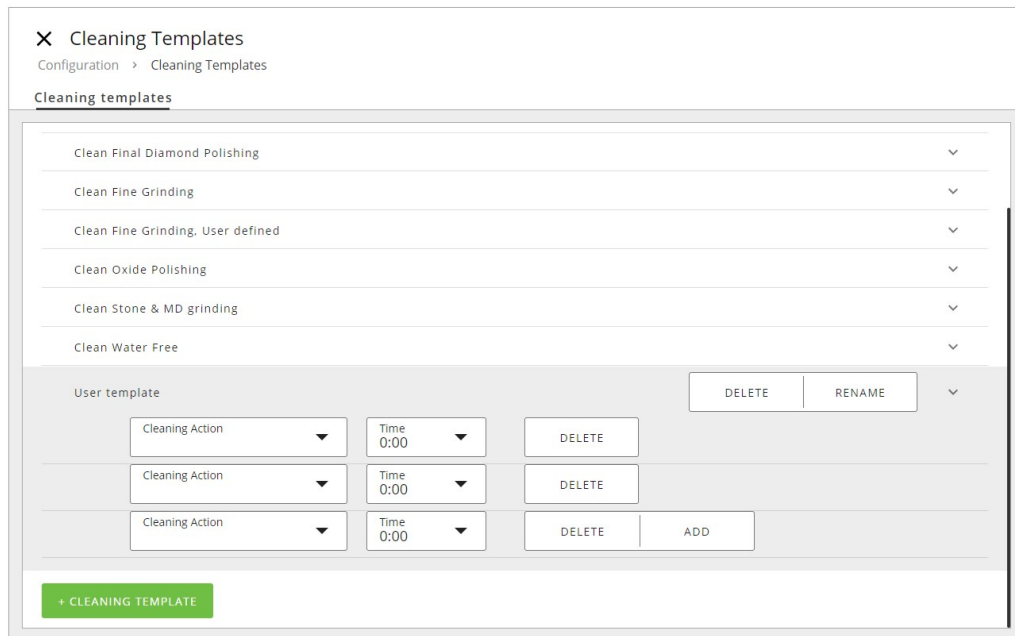


5. Adjust the different parameters as desired, and save as a different template by renaming it.



### 8.5.2 Add a new cleaning template


1. Tab the green button **+ Cleaning Template**.
2. Fill in the parameters for the new template.
3. Tab on **Rename** and write a name for the template before you save this.

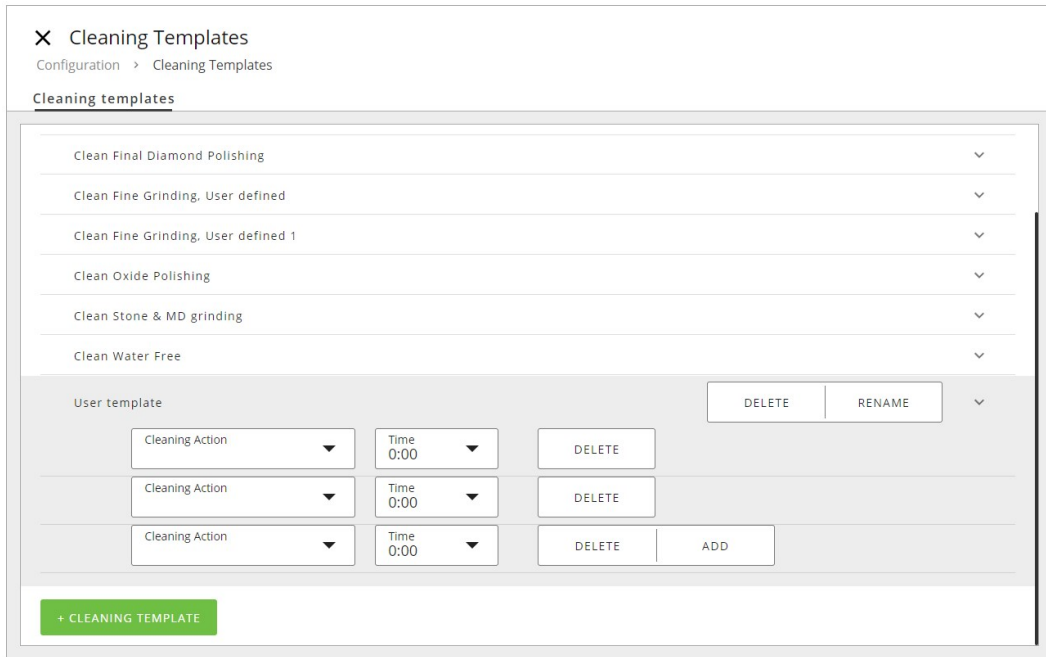

### 8.5.3 Pre-cleaning steps

A pre-cleaning step can be added for specimens prepared with e.g. oil-based suspension/lubricants using a dedicated MD-Nap cloth adding soap and water.

The standard setting includes the following parameters:

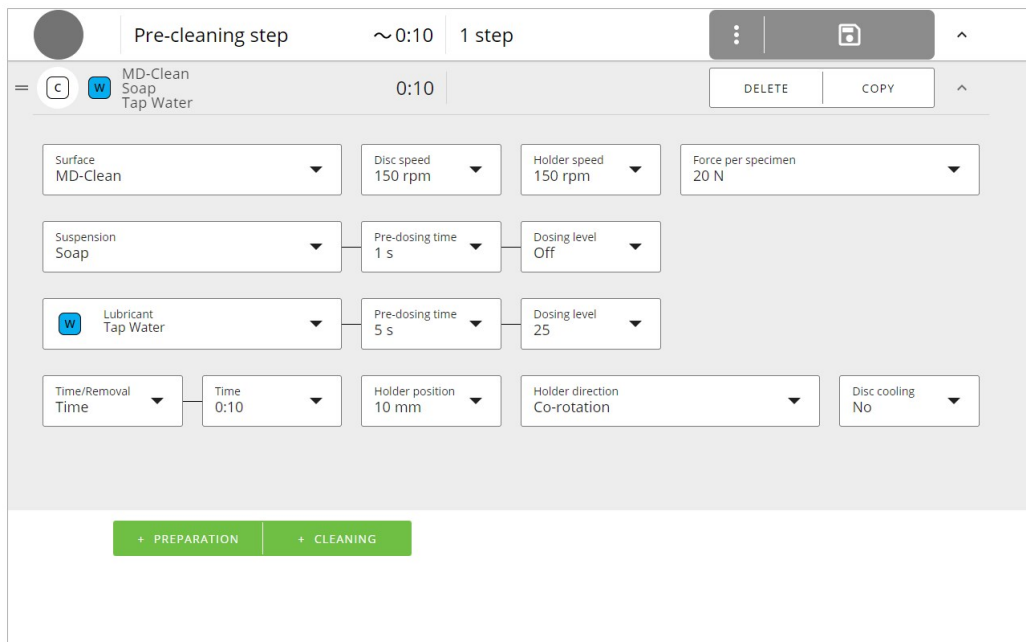




## 8.6 User settings

### Default user settings and administrator password

1. Log in as an **Administrator** ([Log in as an Administrator ▶ 44](#)).
2. Select **Configuration** and **User settings**.
3. In **Configure**, select your default user setting to be either **Operator** or **Administrator**.

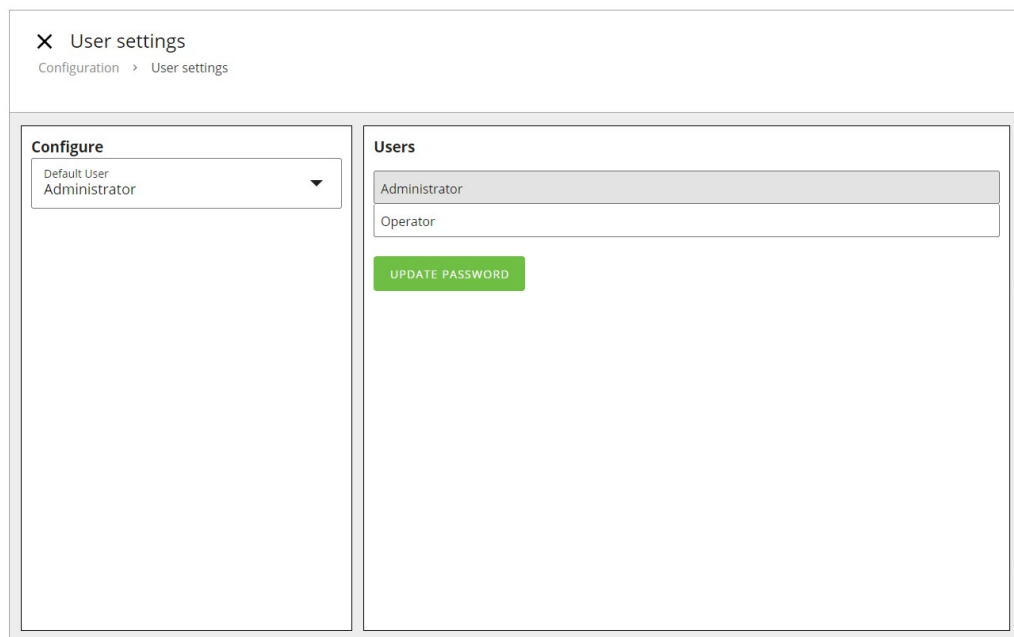

4. In **Users**, you can set a new password for the administrator setting. Per default this is '1234'.


## 8.7 Machine settings for Xmatic Compact with conveyor

Note that the following settings are not available for Xmatic Compact without conveyor.

### Configure Machine settings

1. Log in to the machine as an **Administrator**.


- From the **Main menu**, select **Configuration** and **Machine settings**.

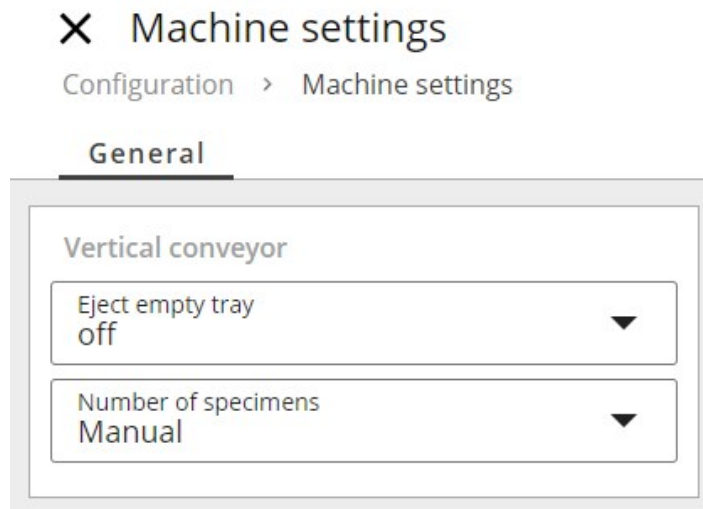

- Adjust the settings as desired in either **Eject empty tray** or **Number of specimens**. All changes are automatically saved.


### 8.7.1 Eject empty tray

- Select whether the drawer should be ejected automatically if you close it without any specimen holder present in the drawer.

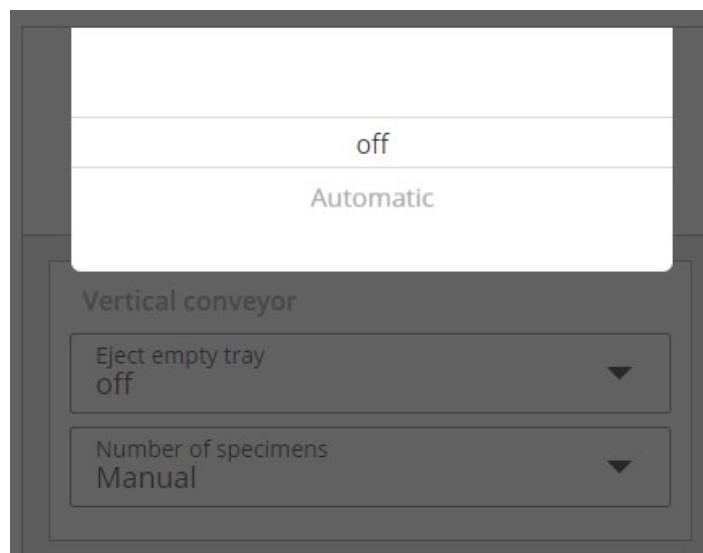

### 8.7.2 Number of specimens


- Select if you would like the machine to automatically detect the number of specimens in each holder, or if you wish to manually select the correct number of specimens.

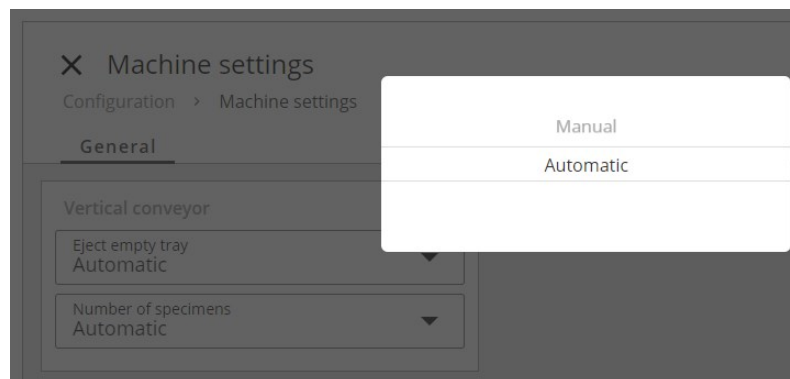

In both cases, the force is adjusted accordingly by the machine itself.

#### Automatic option (configuration)

1. Choose automatic detecting of the number of specimens in **Machine settings**.

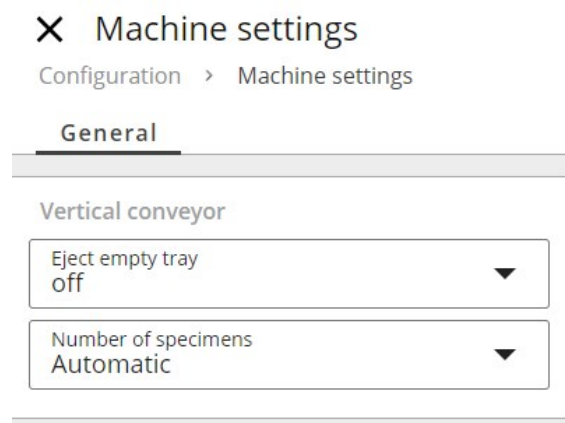


2. Tap on the "x" to close the window.

On operation, see [Detect the number of specimens ▶ 51](#).

#### Manual option (configuration)

1. Choose manual detecting in **Machine settings**.

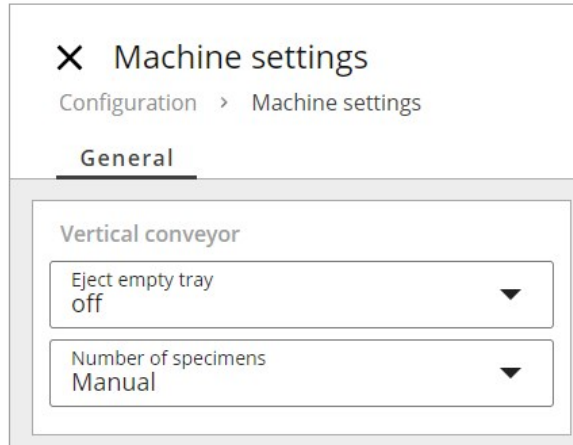

2. Tap on the "x" to close the window.


On operation, see [Detect the number of specimens ▶ 51](#).

## 8.8 System settings

In this menu, you can change the default language from English to another language, or the default setting from the metric to the imperial system.

### Procedure

1. Tap the **Main menu** button, and select **Configuration** and **System settings**.
2. Tap the drop-down arrow to select the language you want to use.
3. Tap the circle before the preferred choice to select whether you want to use Metric or Imperial units when you work with the machine.

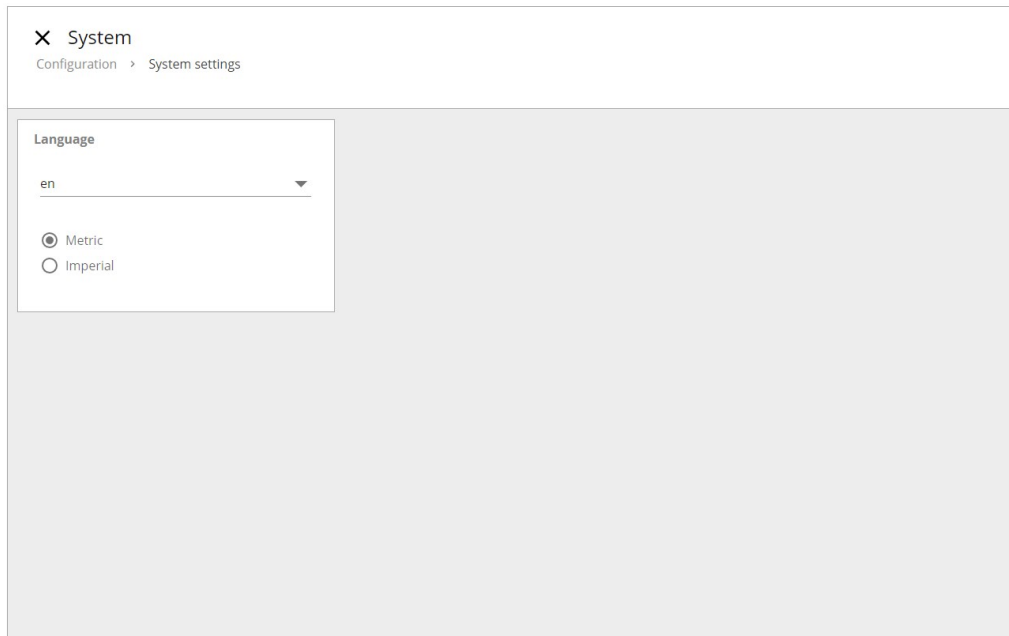

## 9 Maintenance and service - Xmatic Compact

Proper maintenance is required to achieve the maximum up-time and operating lifetime of the machine. Maintenance is important in ensuring continued safe operation of your machine.

The maintenance procedures described in this section must be carried out by skilled or trained personnel.

### **Safety Related Parts of the Control System (SRP/CS)**

For specific safety related parts, see the section "Safety Related Parts of the Control System (SRP/CS)" in the section "Technical data" in this manual.

### **Technical questions and spare parts**

If you have technical questions or when you order spare parts, state serial number and voltage/frequency. The serial number and the voltage are stated on the type plate of the machine.

## 9.1 General cleaning

To ensure a longer lifetime for your machine, we strongly recommend regular cleaning.



### **Note**

Do not use a dry cloth as the surfaces are not scratch resistant.



**Note**

Do not use acetone, benzol or similar solvents.  
Do not use any abrasive agents when cleaning the machine.

**If the machine is not to be used for a longer period of time**


- Clean the machine and all accessories thoroughly.

## 9.2 When necessary

The frequency with which some maintenance and cleaning procedures should be carried out depend on how often and how you use the machine.

### 9.2.1 Air filter

Clean the air filter carefully using a soft brush.

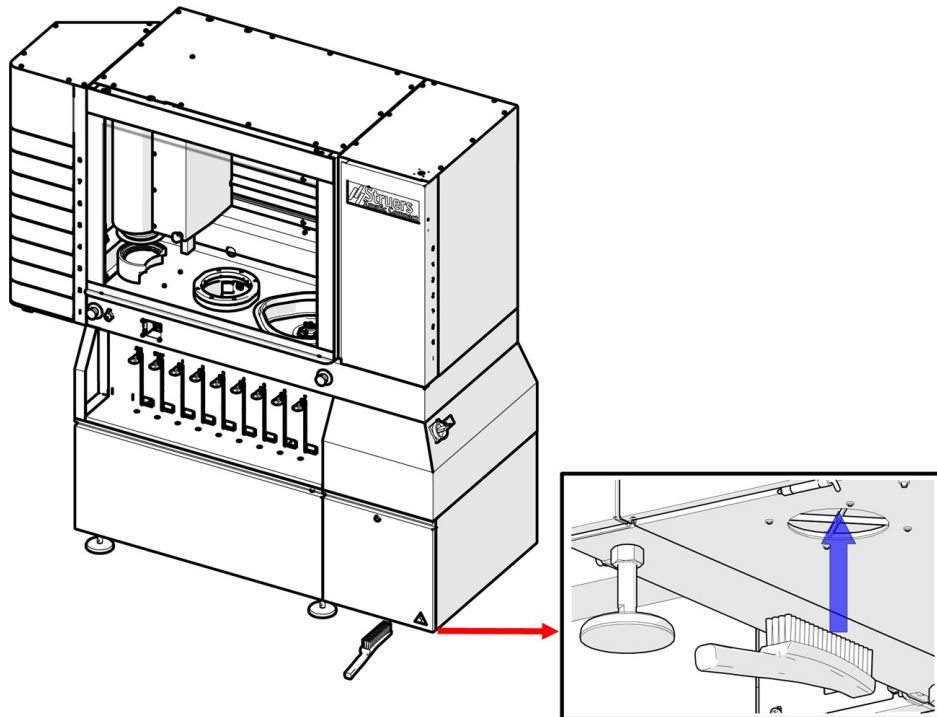

### 9.2.2 Clean the touch screen



**Note**

Do not use a dry cloth as the surfaces are not scratch resistant.  
Do not use acetone, benzol or similar solvents.


- Clean the touch screen with an LCD cleaning agent.

### 9.2.3 The bottles and bottle rack

When you replace a bottle, make sure that the bottle and the bottle rack are clean. Some consumables can damage the painting on the machine if they are not cleaned regularly.

### 9.2.4 Clean the tubes


If you change the type of liquid, the machine will tell you to clean the tube.

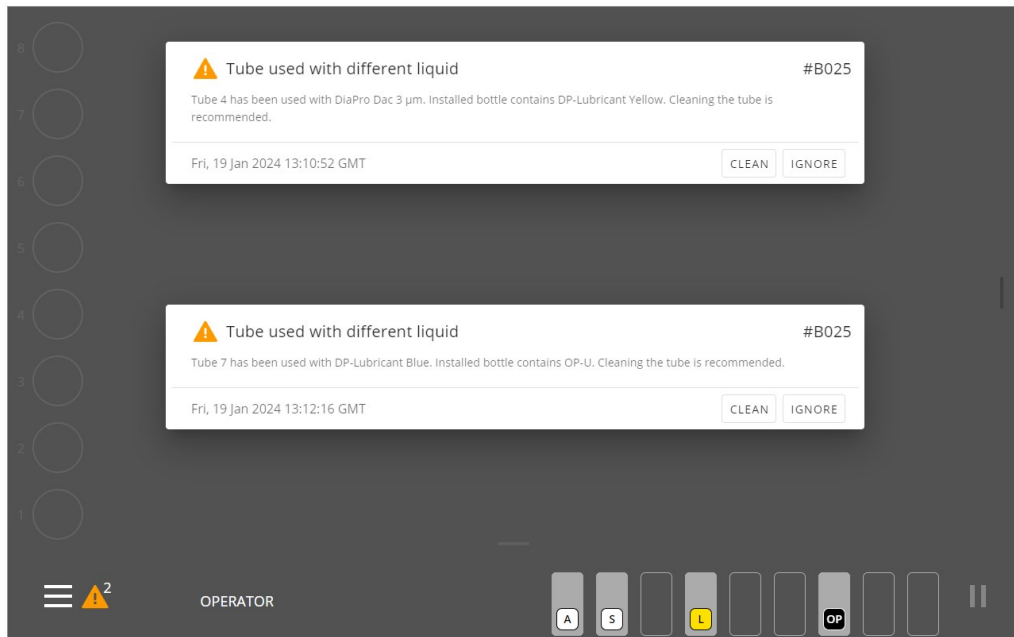


You can also initiate cleaning yourself when you find this necessary, or if the machine is not going to be used for a period of time. You can select functions to clean one or all tubes from the bottles to the dosing nozzles, either from the main menu or during the process.

#### Clean the tubes - from the main menu

1. Log in to the machine as an **Operator**, or **Administrator**.
2. Tap the **Main menu**, and select **Maintenance** and **Clean tubes**.

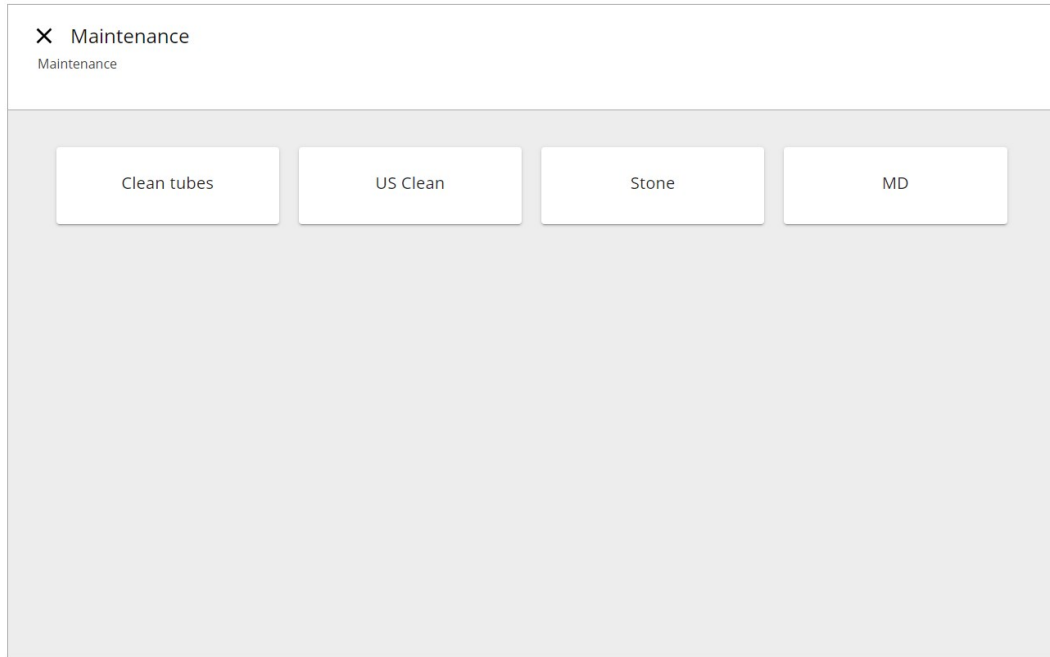


3. Select the tubes you want to clean. A green check mark above the frames indicates the tubes to be cleaned.

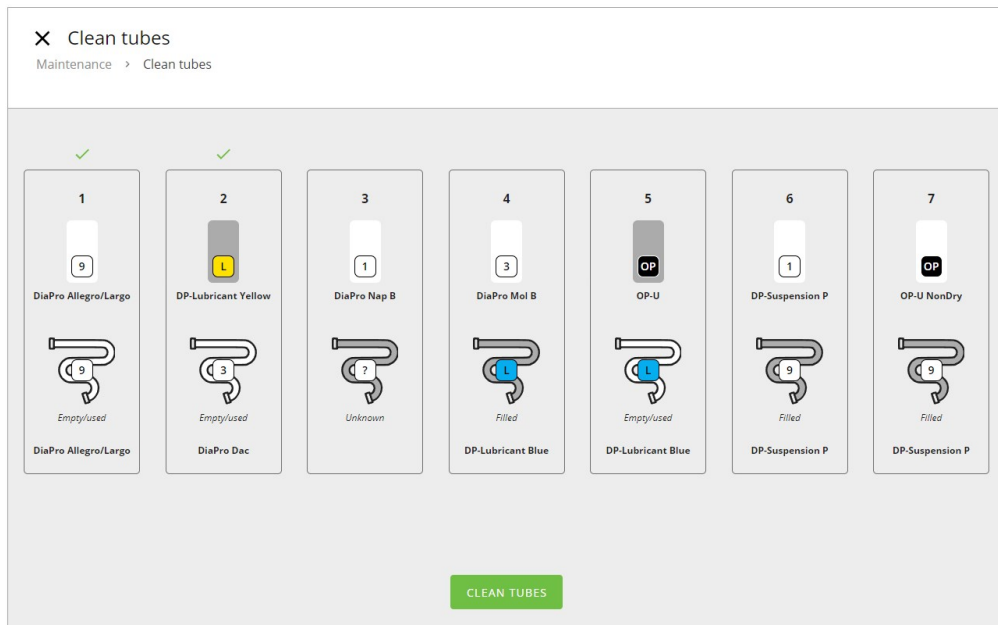

4. Tap **Clean tubes**, and follow the directions on the screen:



5. Wait while the liquid is pumped back to the bottle.
6. Remove the bottle and place the Easy Connector in the inlet on the bottle rack.


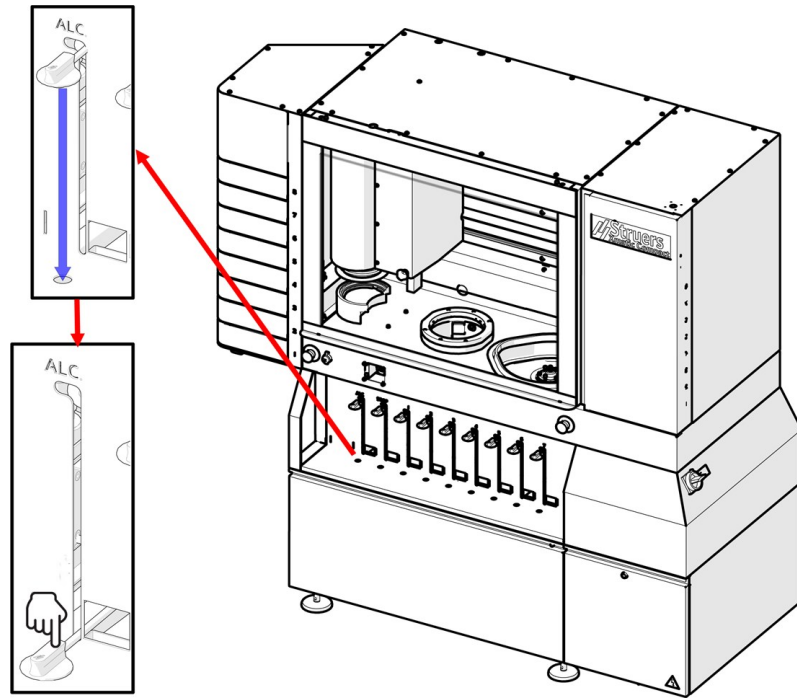


7. The tubes are flushed.
8. Place the Easy Connector on the consumable bottle again when the cleaning process is finished. Make sure that it is pushed into place.


Repeat this procedure for other tubes if necessary.

### **Clean the tubes - during preparation**

1. On the display, tap the bottle position for which you want to clean the tube.

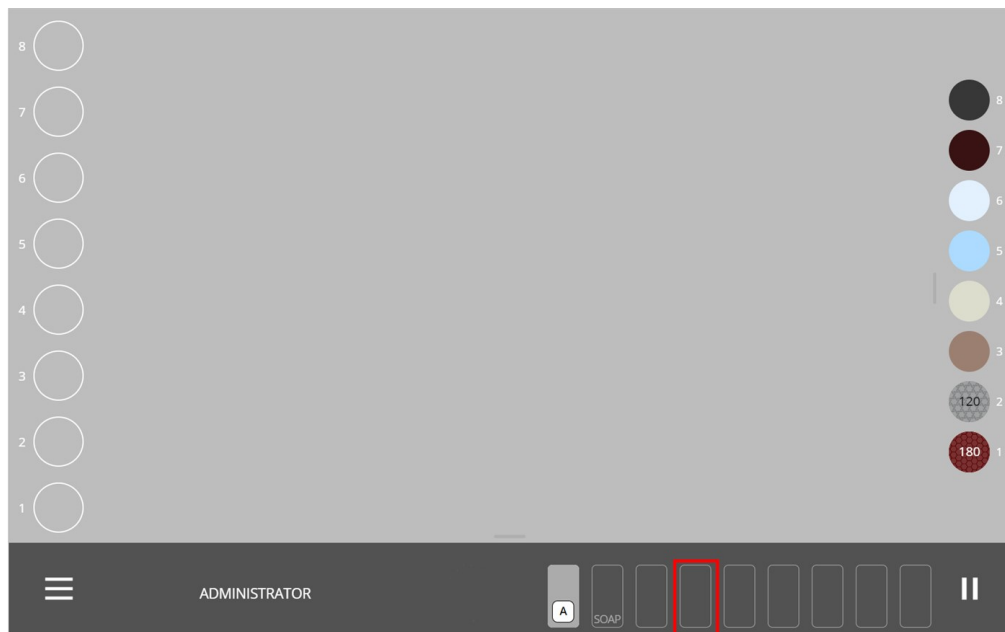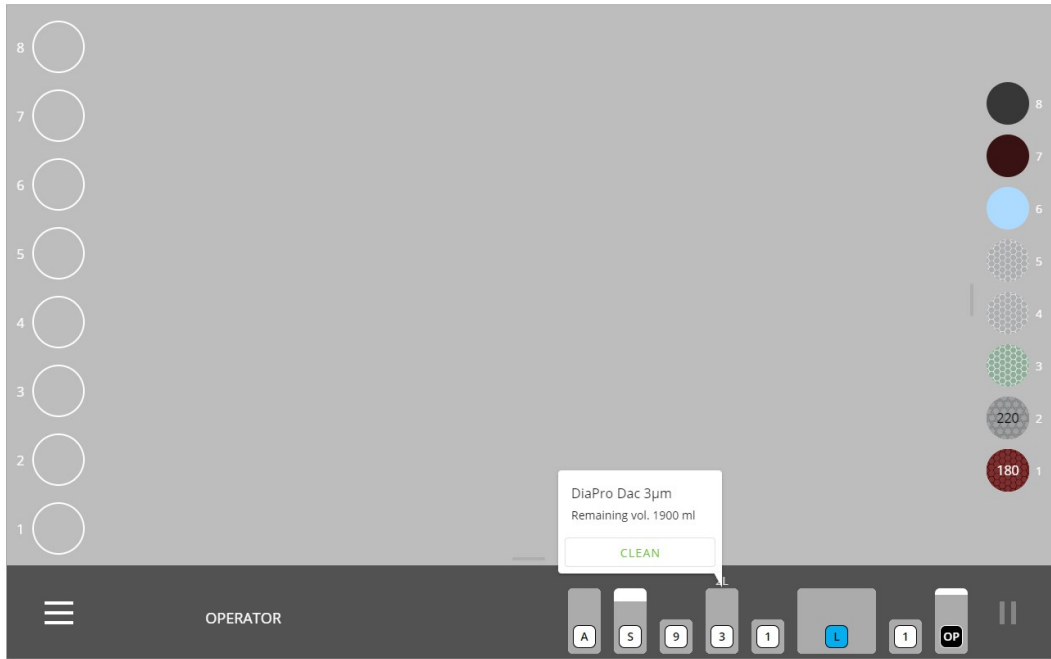


2. In the pop-up message, select **Clean**.

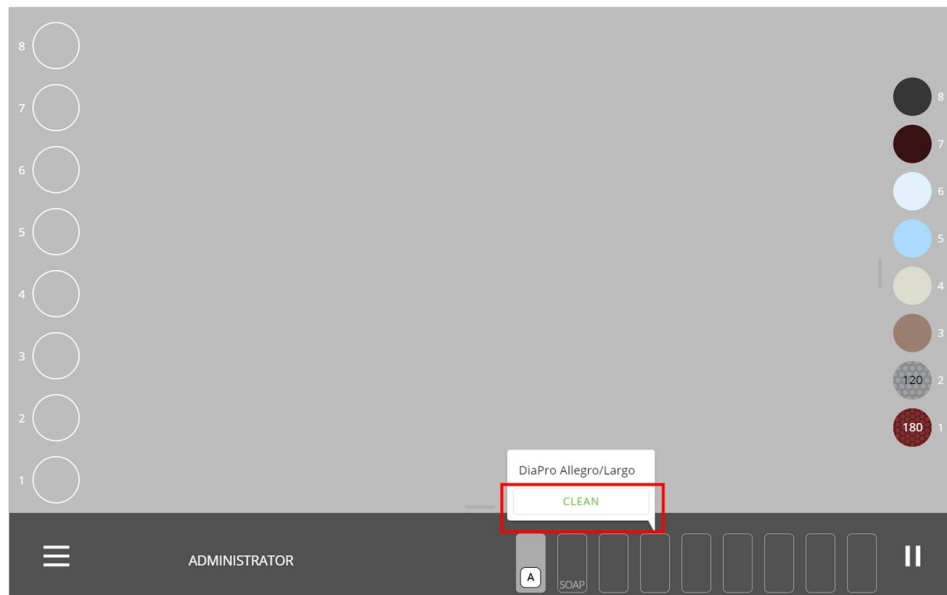

3. Follow the instruction on the display to remove the current consumable from the machine, and place the Easy Connector on the drain.
4. The tube is flushed.
5. When the cleaning process is finished, tap **Continue**.

### 9.2.5 Replace and clean the aluminum oxide stick and the dresser tip

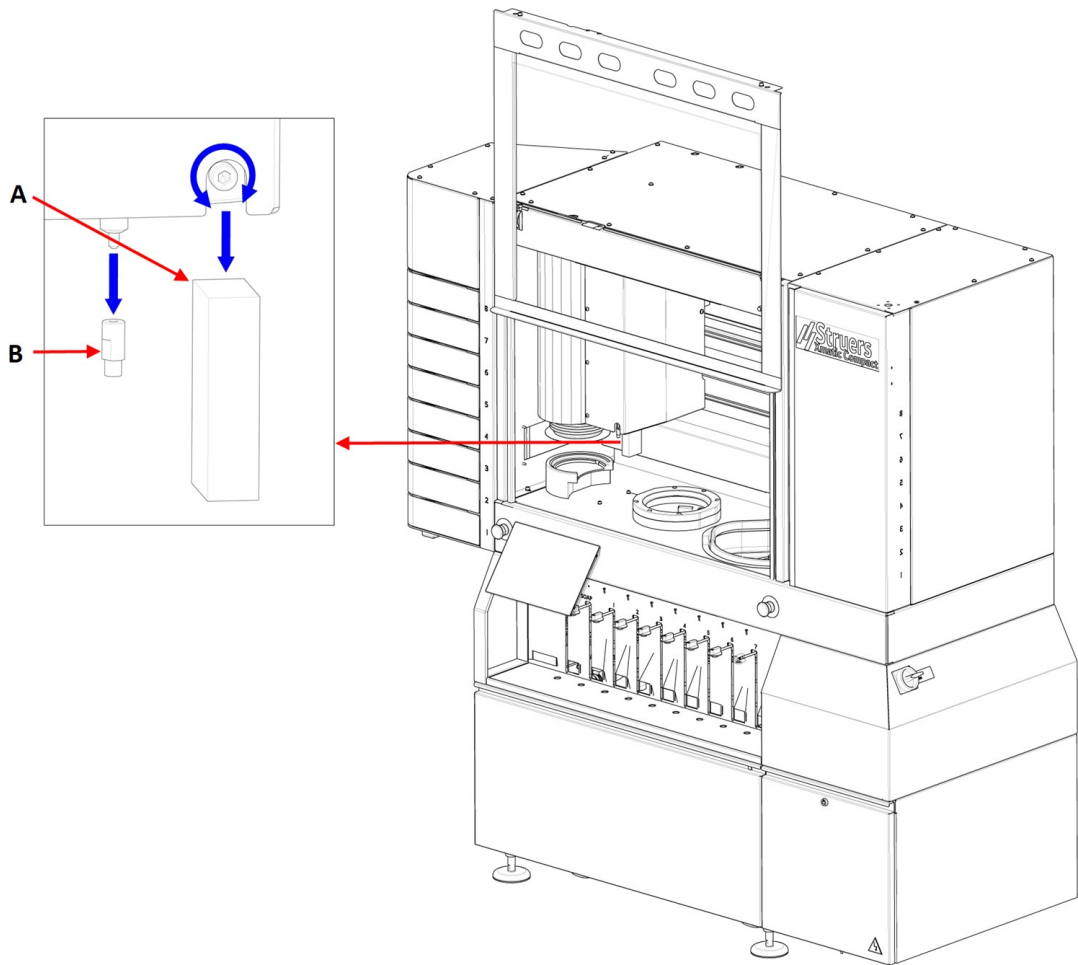

#### Aluminum oxide stick (A)


1. Untighten the fixation screw with a 6-mm Allen key by rotating it counterclockwise.
2. Dismount the aluminum oxide stick.
3. Wipe all surfaces carefully and make sure that there is no debris or dirt left.
4. Mount a new aluminum oxide stick in the holder.
5. Tighten the fixation screw again.

#### Dresser tip (B)

Use a 9-mm spanner.

1. Unscrew the old dresser tip.
2. Wipe all surfaces carefully, and make sure that there is no debris or dirt left.
3. Mount the new dresser tip in the dresser.


### 9.2.6 Clean the MD arm

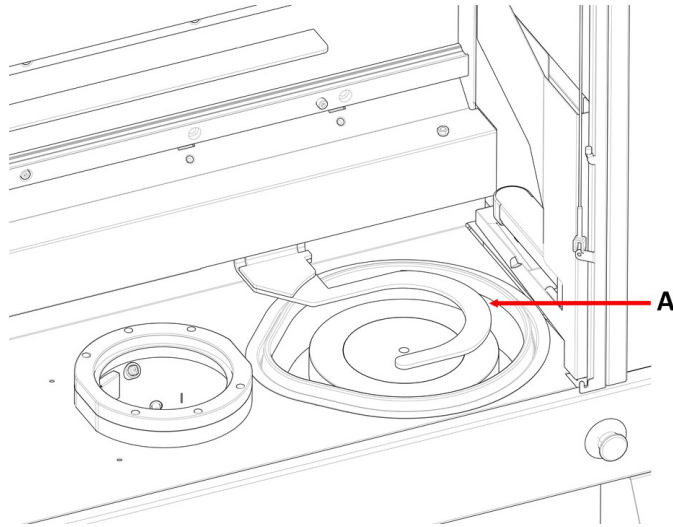

A MD arm

#### Procedure

1. In **Maintenance**, select **MD**.
2. Select the action you need, and follow the instructions on the display.

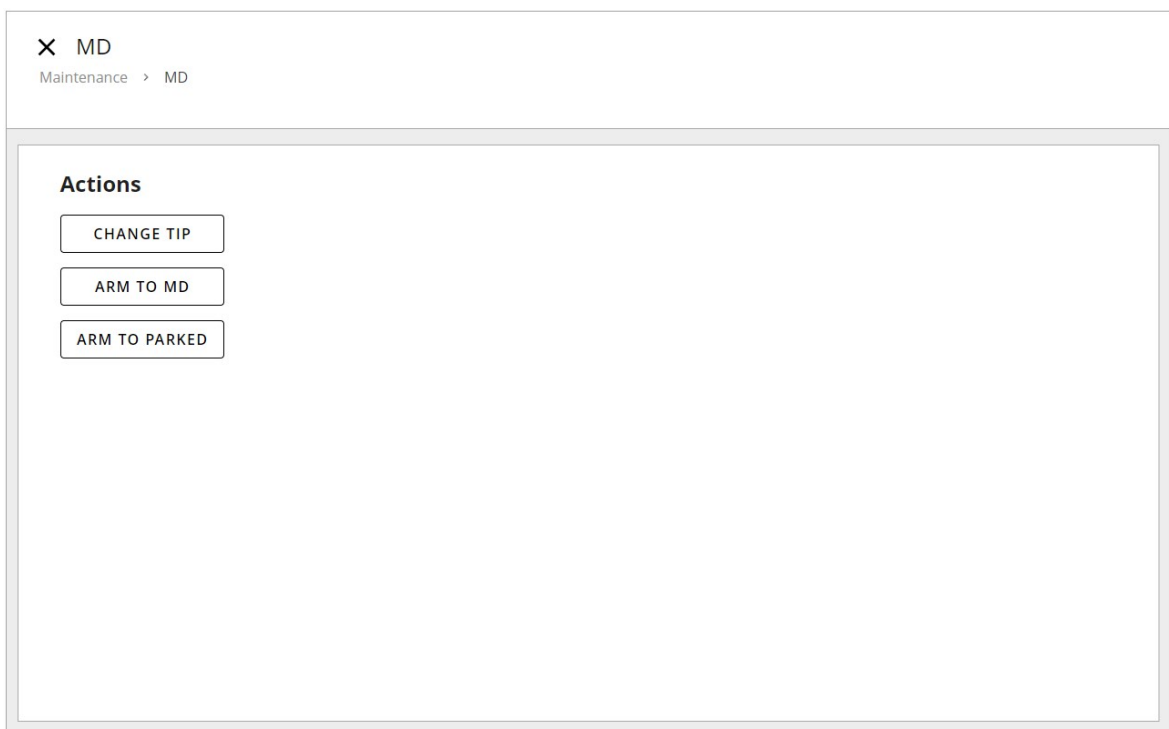

#### Action: Change tip

Use this function when you change the MD dresser tip.

**Action: Arm to MD**

The MD arm moves from the MD elevator to the MD station. You can now wipe and clean the MD arm.

**Action: Arm to parked**

The MD arm returns to the parking slot in the MD elevator.

**Diamond tip dresser**


The diamond tip dresser must be checked regularly by a Struers service technician.

**Procedure**

1. Dismount the diamond tip dresser. (B)
2. Wipe all surfaces carefully and make sure that there is no debris or dirt left.
3. Mount the diamond tip in the dresser.


**9.2.7 The bowl liner**

**Clean the upper part of the bowl liner**

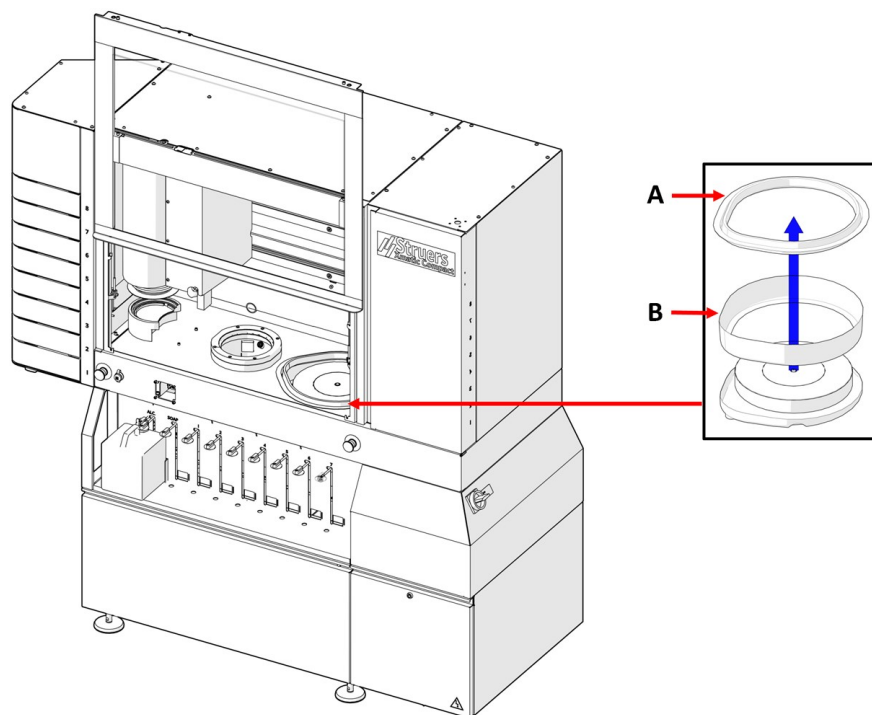

**A** Splash guard

**B** Upper part of the bowl liner

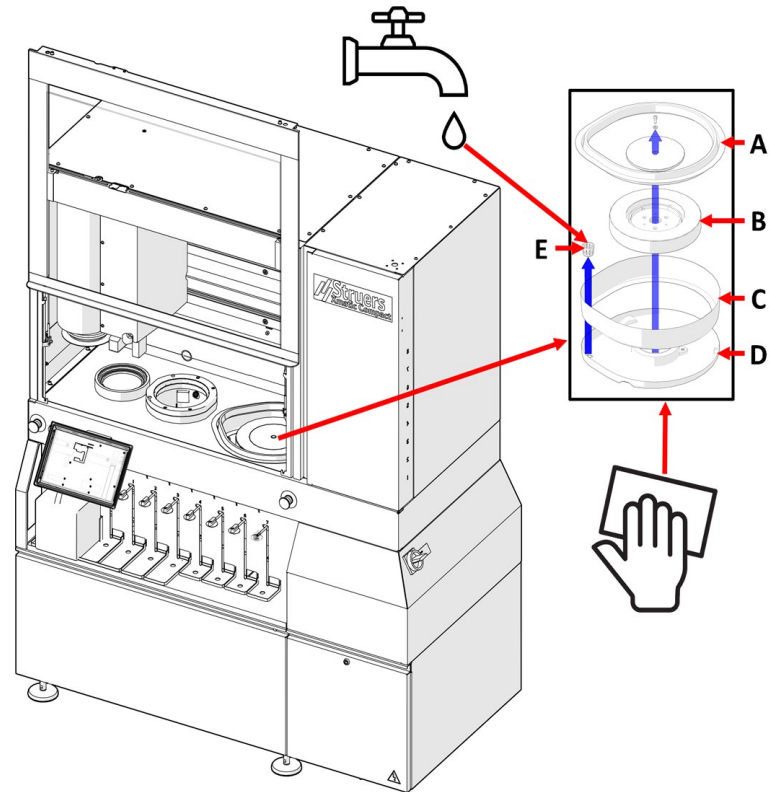


### Procedure

1. Remove the splash guard (A) from the MD grinding and polishing station.
2. Remove the upper part of the bowl liner (B) and wash it.
3. Remount the upper part of the bowl liner.
4. Remount the splash guard.

### Replace the bowl liner

If the bowl liner is damaged, replace it with a new one.

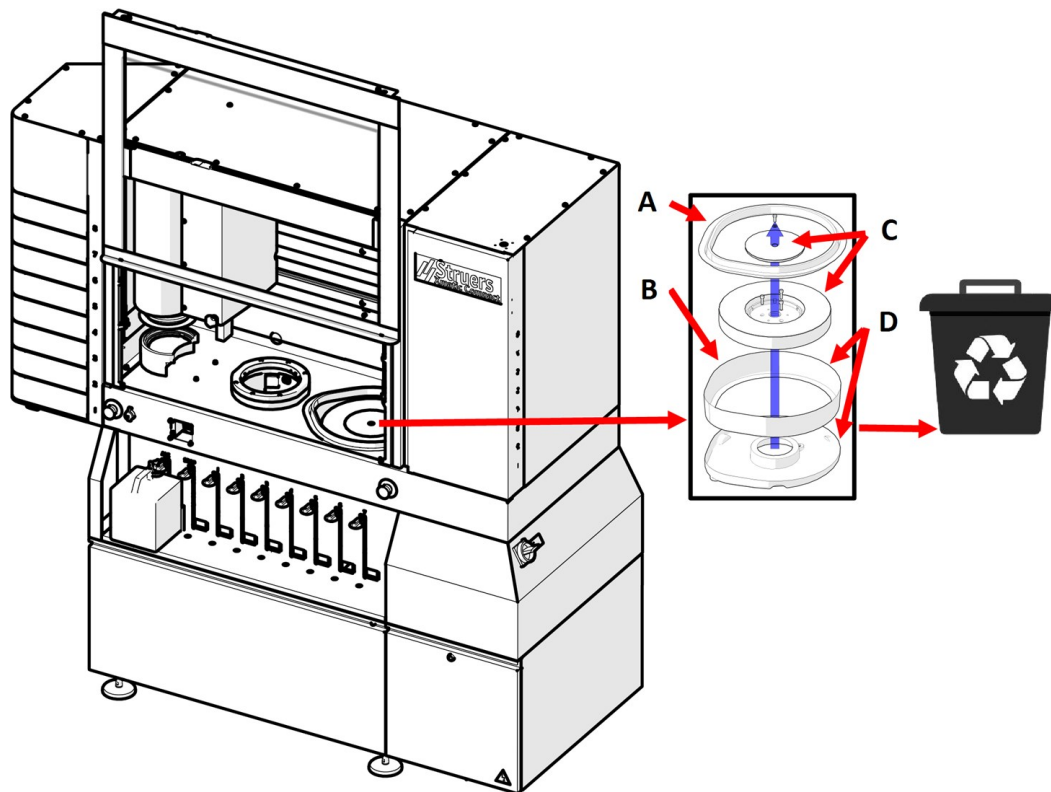

### Procedure

1. Remove the splash guard (A).
2. Remove the upper part of the bowl liner (B).
3. Remove the MD-Disc (C) (see [Maintenance of the MD-Disc ▶ 104](#)).
4. Remove the used bowl liner (D), and mount the new one.
5. Remount the MD-Disc, the upper part of the bowl liner and the splash guard.
6. Dispose of the used bowl liner according to local regulations.

## 9.2.8 Maintenance of the MD-Disc

### Remove the MD-Disc

1. Remove the protective cap.
2. Unscrew the bolt and washer from the upper part of the MD-Disc and remove this.
3. Unscrew the three screws from the lower part of the MD-Disc and lift this from the bowl.


### Replace the MD-Disc



#### Note

We recommend that the MD-Disc is mounted by a service technician.



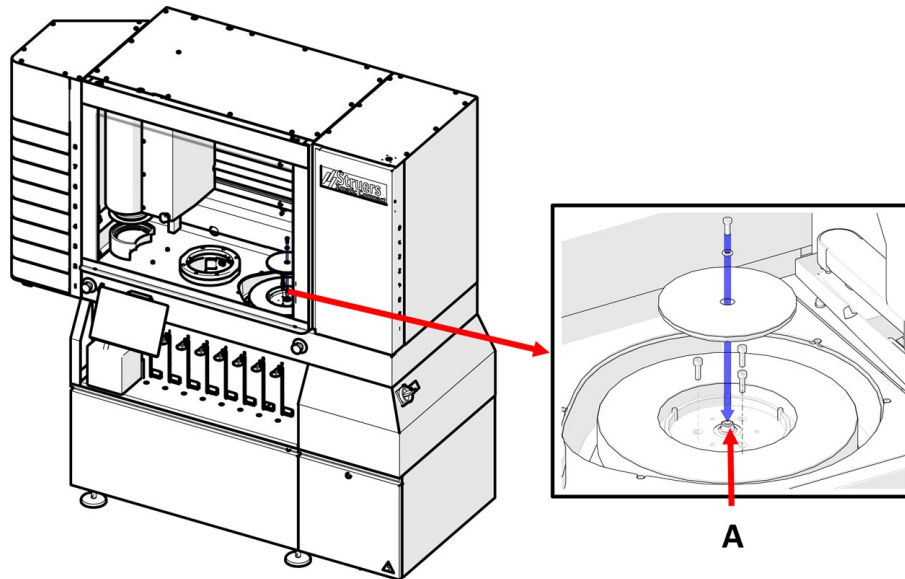

### Procedure

1. Unscrew the three screws on the rear side of the MD-Disc
2. Remove the bolt and washer from the shaft (A).
3. Place the lower part of the MD-Disc in the bowl, and fasten it using the three screws you removed from the rear side of the MD-Disc
4. Place the upper part of the MD-Disc on top of the lower part, and fasten it using the bolt and washer you removed from the shaft
5. Mount the protective cap.



#### Hint

For more information about this unit, see the specific Instruction Manual or User Guide.

### Clean the MD-Disc



#### Note

Do not use a dry cloth as the surfaces are not scratch resistant.




#### Note

Do not use acetone, benzol or similar solvents.

- Wipe the MD-Disc clean using a damp cloth.

### 9.2.9 Clean the MD elevator mirrors

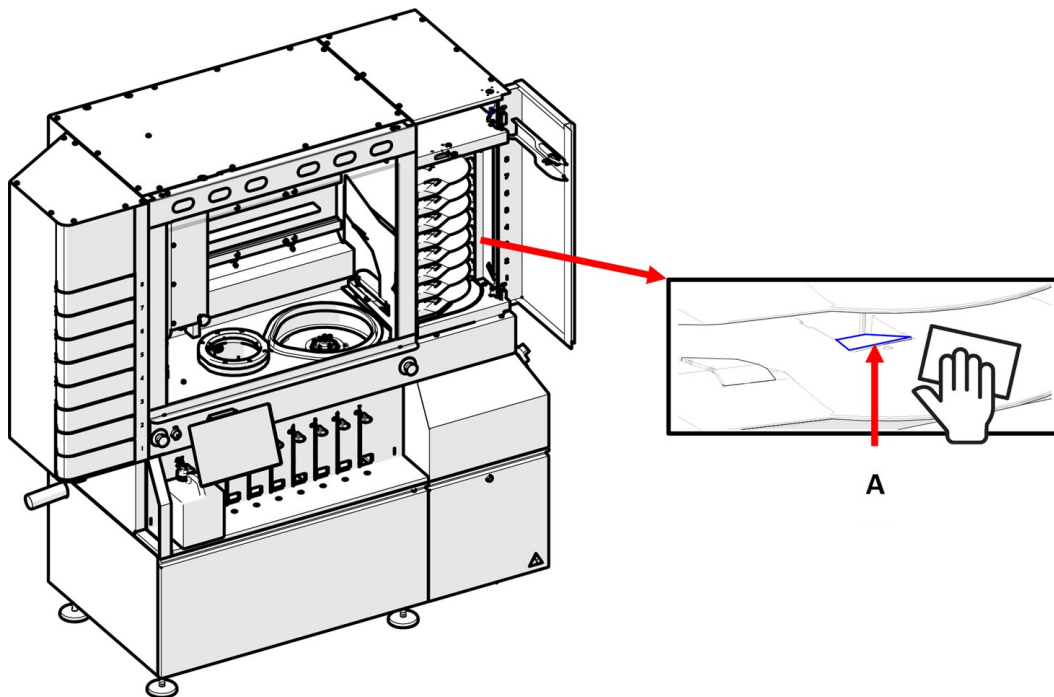

- Clean the mirrors (A) inside the 8 drawers in the MD surface elevator with a damp cloth.



**Note**

Do not use a dry cloth when cleaning the mirrors, as the surface is not scratch-resistant.

### 9.2.10 MD surface

Check the MD grinding and polishing surfaces every day to make sure that they are clean and undamaged.

**Procedure**

1. Open the MD elevator door and check each MD surface.
2. Replace damaged MD surfaces.
3. Clean the MD surfaces.
4. Close the MD elevator door. The elevator moves into its parked position.



**Hint**

See also the user guide for the MD surface you are using.

**Automatic cleaning**

In the main menu you can also choose to have the MD surfaces cleaned automatically after preparation.

✕ Preparation  
Configuration > Preparation

MD

**Dressing**

Dress MD Alto after process  
 Dress diamond disc after process

**Cleaning**

Clean surface after process  
 Clean disc after process


## 9.3 Weekly



### Note

Do not use a dry cloth as the surfaces are not scratch resistant.  
Do not use acetone, benzol or similar solvents.  
If needed, use ethanol or isopropanol to remove grease and oil.


### 9.3.1 The work zone

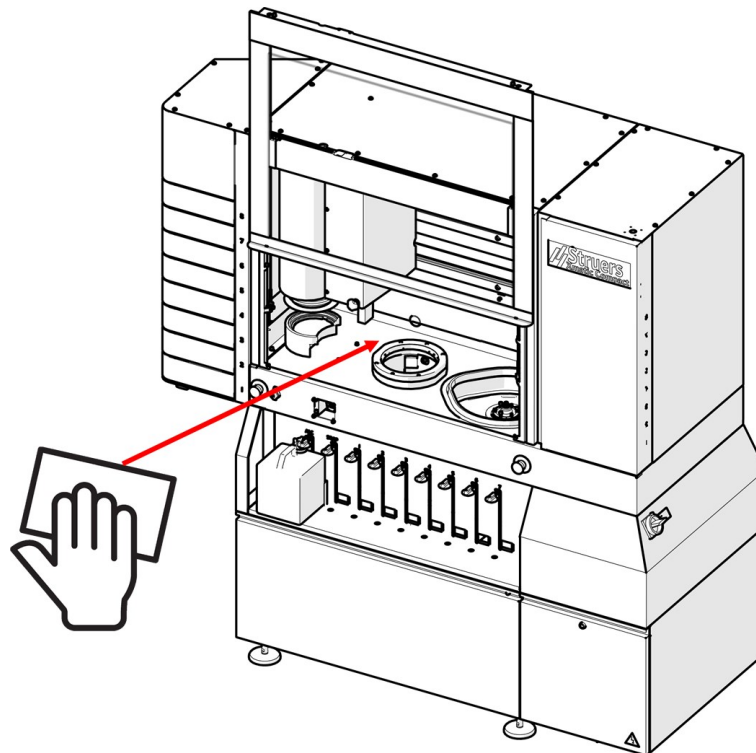

- Clean all painted surfaces inside the machine with a soft damp cloth and common household detergents.

### 9.3.2 The specimen mover head and rails

Clean the specimen mover head and rails regularly using a damp cloth. See also: [Overview of the machine ► 17](#).

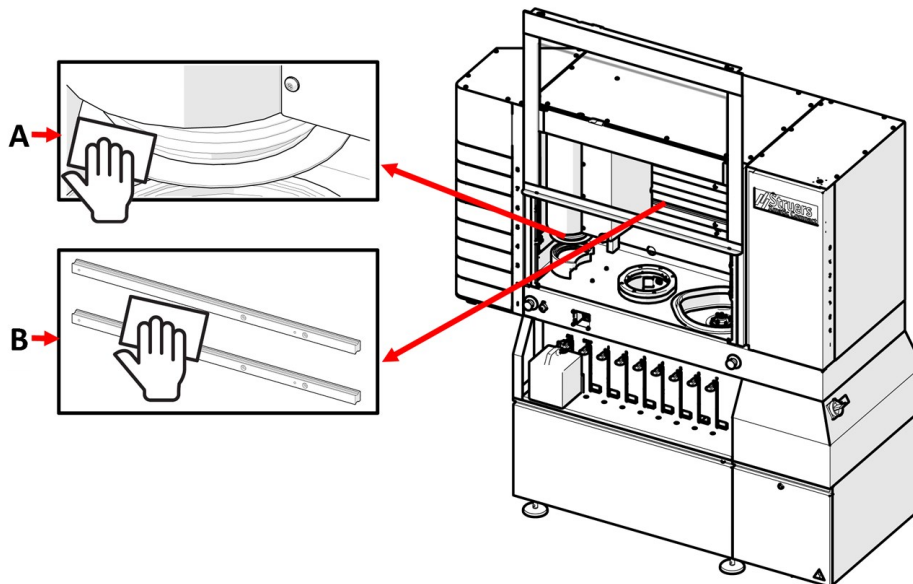

#### Procedure

1. Clean the upper and lower part of the specimen mover head (A) thoroughly using a damp cloth.
2. Clean any buildup of contaminants on the rails (B) inside the work zone using a dry cloth.



#### Note


It is important that you keep the upper and lower surfaces of the specimen mover head clean, otherwise you risk contaminating the specimens.



#### Note

You can use a dry cloth when cleaning the rails inside the work zone, as these are coated with an oil film.

### 9.3.3 The main safety cover

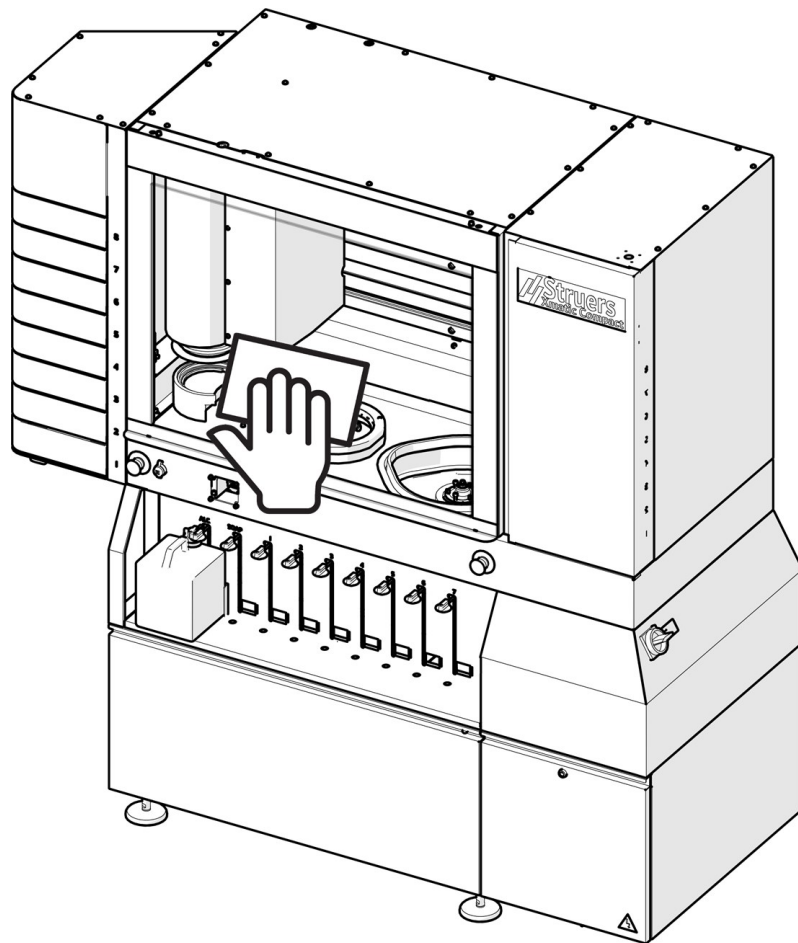

#### Procedure

1. Clean the main safety cover regularly with a damp cloth or a regular household window cleaning solution.
2. Let the window cleaning solution work for a few seconds before wiping it away with a cloth.



#### Note

Be careful not to apply pressure when cleaning the surface of the main safety cover, as you risk scratching it.

### 9.3.4 Ultrasonic cleaning station - (option)




#### Note


Do not use a dry cloth as the surfaces are not scratch resistant.  
Do not use acetone, benzol or similar solvents.  
If needed, use ethanol or isopropanol to remove grease and oil.

#### Procedure

1. In **Maintenance**, select **US Clean** for **Ultrasonic Cleaning**.

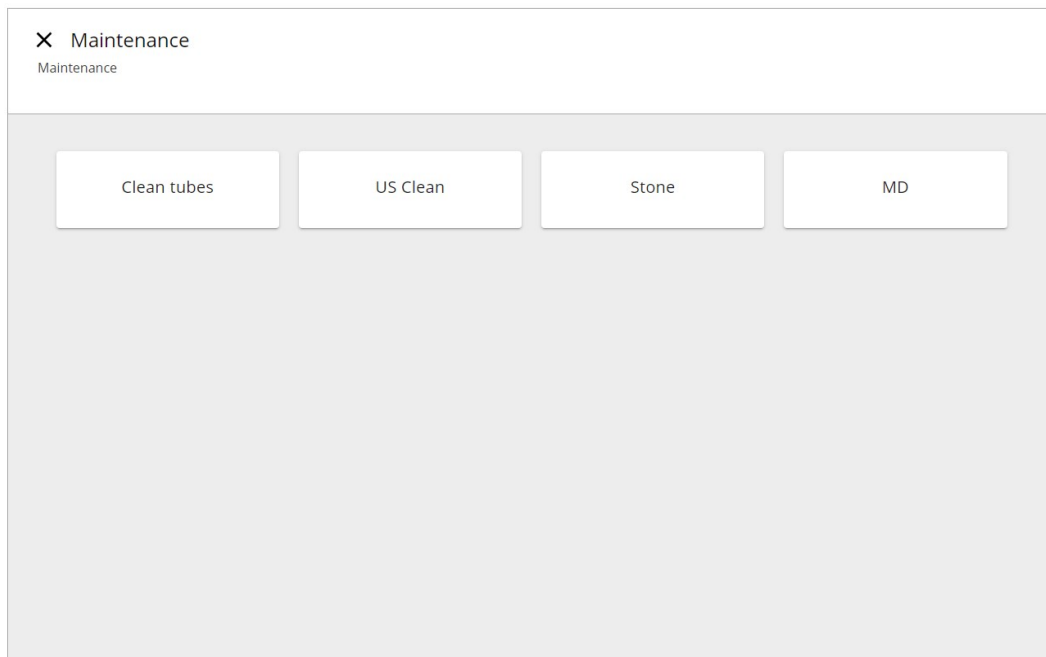

2. Empty the ultrasonic tub on **Empty tub**.
3. Use a brush and soap to clean the inner wall of the ultrasonic tub.
4. Fill the tub on **Fill tub**, and empty again on **Empty tub** to rinse.

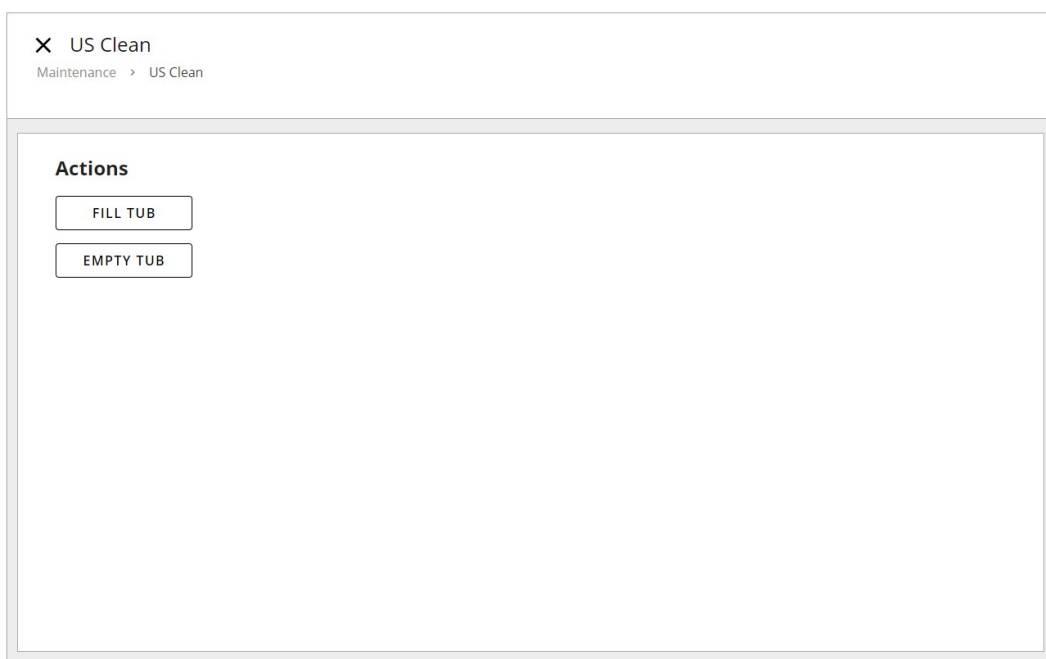

### 9.3.5 High pressure cleaning station




**Note**

Do not use a dry cloth as the surfaces are not scratch resistant.  
Do not use acetone, benzol or similar solvents.  
If needed, use ethanol or isopropanol to remove grease and oil.

- Use a damp cloth to clean the rubber seals.

#### Clean the nozzles

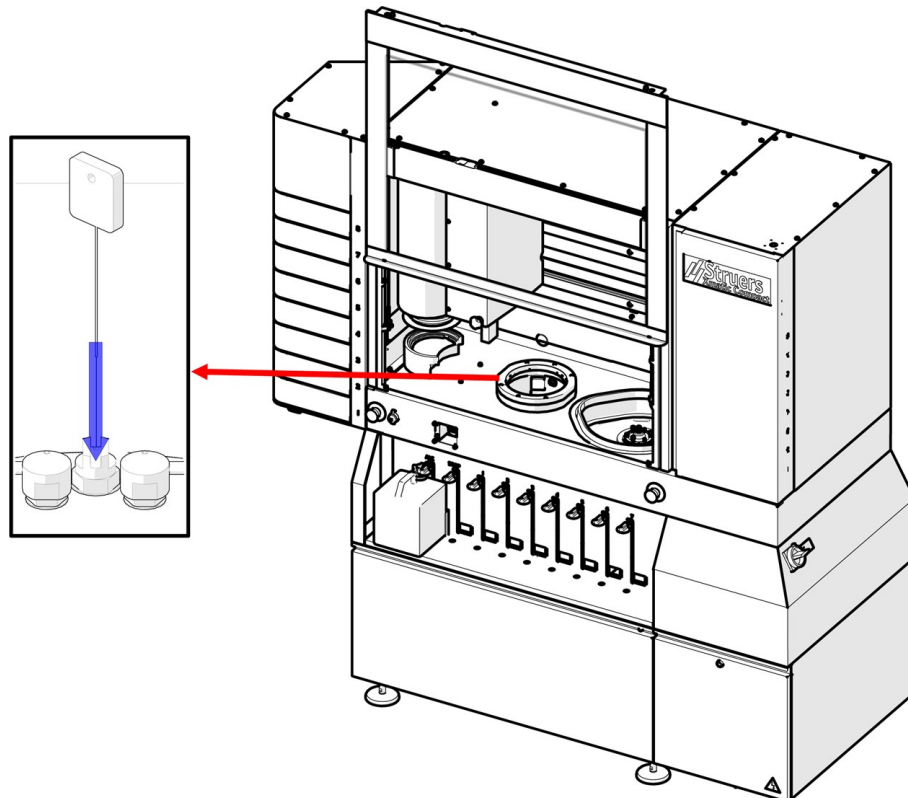

- Use the nozzle cleaner to clean the nozzles in the high pressure cleaning station.



### 9.3.6 Empty the alcohol separator bottle (option)



**WARNING**

Always wear protective gloves and safety goggles while you empty the alcohol bottle.

If you connect an alcohol separator bottle to your cleaning station, you must monitor and empty the bottle weekly or when necessary.

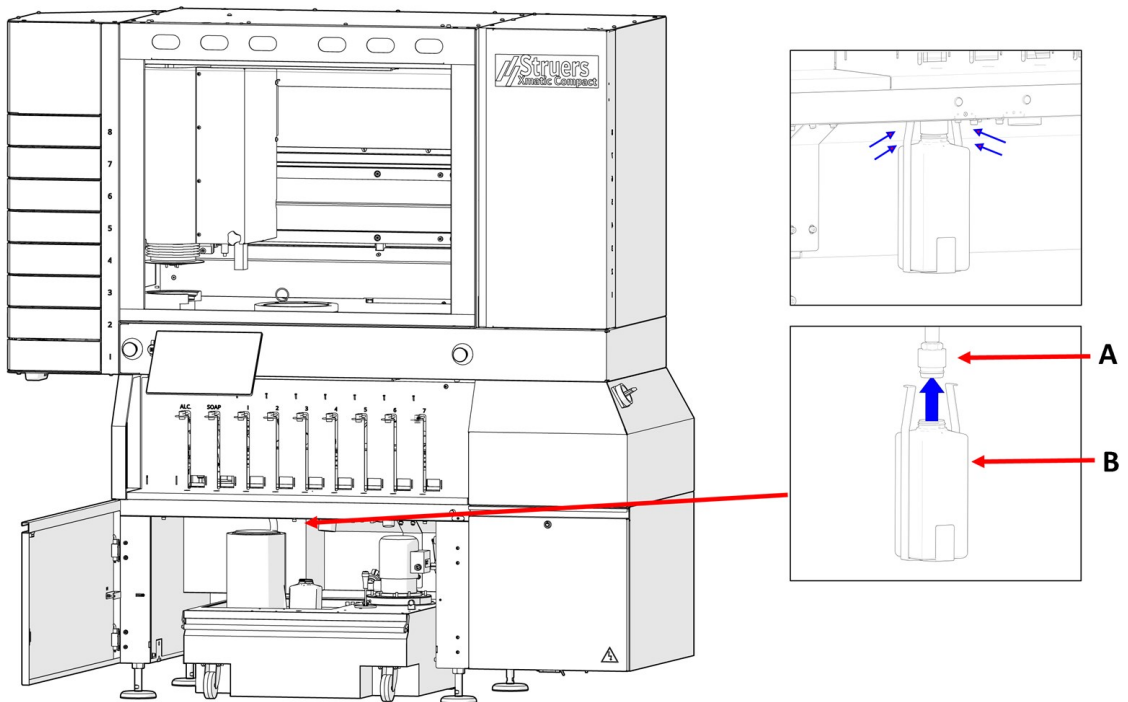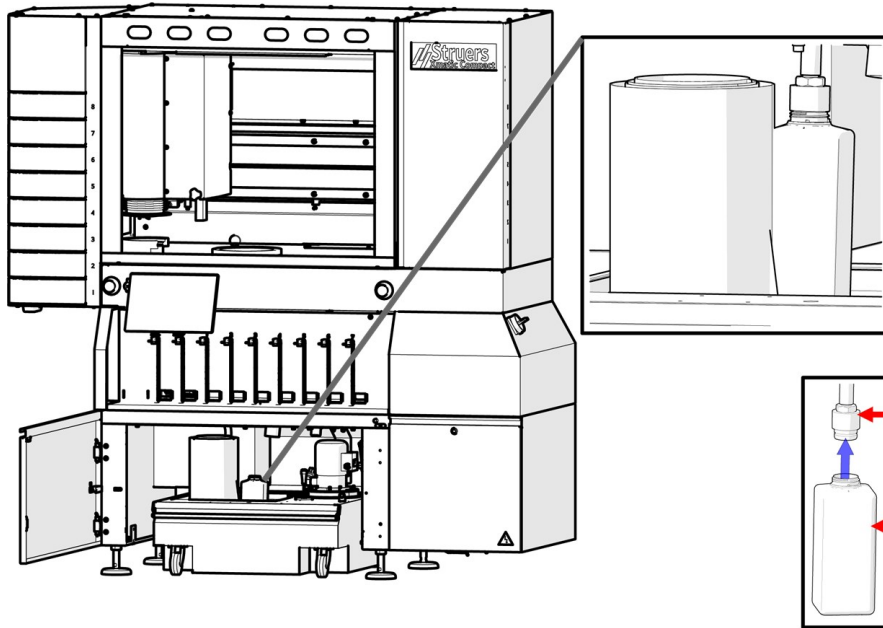

**A** Connector for alcohol separator bottle

**B** Alcohol separator bottle

**Procedure**

1. Pull the recirculation unit out so you can reach the alcohol bottle.
2. Remove the bottle from the connector for the alcohol bottle.



3. Empty the contents of the bottle.
4. Remount the bottle.

**Hint**

For more information about this unit, see the specific Instruction Manual or User Guide.

## 9.4 Monthly

**Note**

Do not use a dry cloth as the surfaces are not scratch resistant.

**Note**

Do not use acetone, benzol or similar solvents.

**Hint**

If needed, use ethanol or isopropanol to remove grease and oil.

### 9.4.1 Recirculation unit - Optional

**CAUTION**

Avoid skin contact with the coolant additive.

**CAUTION**

The recirculation tank is very heavy when it is full.

#### Clean and refill the recirculation tank

##### Procedure

1. Disconnect the water hose from the machine.
2. Pull out the recirculation unit.
3. Use an external pump or manually empty the tank.
4. Remove the plastic liner and clean out all water and debris from the tank.
5. Clean the recirculation tank and the connected tubes thoroughly.
6. If the cooling water has been infected with bacteria or algae, clean the tank and tubes with a suitable antibacterial disinfectant.
7. Fill up with water. To prevent corrosion, use a Struers additive in the coolant. For more information, see the additive container.



**Note**

If the coolant is contaminated by algae or bacteria, replace the coolant immediately.



**Note**

The recirculation water contains additive and grinding residue and you must not dispose of it into the waste water drain.  
Recirculation water must be disposed of in compliance with local safety regulations.

## 9.5 Annually



**WARNING**

Do not use the machine with defective safety devices.  
Contact Struers Service.



**WARNING**

Safety critical components must be replaced after a maximum lifetime of 20 years.  
Contact Struers Service.



**CAUTION**

The safety devices must be tested at least once a year.



**CAUTION**

Testing should always be performed by a qualified technician (electromechanical, electronic, mechanical, pneumatic, etc.).



**CAUTION**

Do not use Xmatic Compact if it is damaged.



**Note**

Replacement of safety critical components must only be performed by a Struers engineer or a qualified technician (electromechanical, electronic, mechanical, pneumatic, etc.).  
Safety critical components must only be replaced by components with at least the same safety level.  
Contact Struers Service.

### 9.5.1 Main safety cover

#### Inspect the main safety cover



**Hint**

If the machine is used for more than one 7-hour shift per day, carry out inspection more often.

- Visually inspect the main safety cover for signs of wear or damage such as cracks, dents, or damage.

### Replace the main safety cover



#### WARNING

If there are visible signs of deterioration or damage to the main safety cover, it must be replaced immediately. Contact Struers Service.

## 9.5.2 Test the safety devices

The safety devices must be tested at least once a year.



#### WARNING

Do not use the machine with defective safety devices. Contact Struers Service.



#### CAUTION

Testing should always be performed by a qualified technician (electromechanical, electronic, mechanical, pneumatic, etc.).

### Emergency stop

1. Start a polishing process. Wait until the specimen is being grinded/polished.
2. Press one of the Emergency stops. See also: [Overview of the machine ▶ 17](#).
3. All movements should stop and a pop-up message should be shown in the display.
4. If the machine does not stop moving, select **Pause** on the display.



5. Contact Struers Service.

### Vertical conveyor

1. Make sure that at least one of the drawers on the vertical conveyor is empty.
2. Start a preparation process
3. Try to open the empty drawer completely while the machine is picking up and moving the specimen holder.
4. If the machine does not stop moving, select Stop on the display.
5. Contact Struers Service.

### Main safety cover

#### Test the main safety cover interlock

1. Open the main safety cover.
2. Start a preparation process.

3. If the machine starts the preparation process, press one of the Emergency stops. See also: [Overview of the machine ▶ 17](#).
4. Contact Struers Service.

#### **Test the main safety cover locking function**

1. Start a preparation process.
2. Try to open the main safety cover.
3. If you can open the main safety cover, press one of the Emergency stops. See also: [Overview of the machine ▶ 17](#).
4. Contact Struers Service.

#### **MD elevator**

1. Open the MD elevator door.
2. Close the door and listen to the movements that occur inside the MD elevator.
3. Try to open the MD elevator door.
4. If you can open the MD elevator door, press one of the Emergency stops. See also: [Overview of the machine ▶ 17](#).
5. Contact Struers Service.

#### **Recirculation unit compartment - (option)**

1. Start a grinding process.
2. Open the recirculation unit compartment.
3. The recirculation unit pump should stop immediately. If this is not the case, press one of the Emergency stops. See also: [Overview of the machine ▶ 17](#).
4. Contact Struers Service.

## **9.6 Service and repair**

We recommend that a regular service check be carried out yearly or after every 1500 hours of use.

When the machine is started up, the display shows information about total operation time and the machines service information.

After 1000 hours of operation time, the display will show a message reminding the user that a service check should be scheduled.



#### **Note**


Service must only be performed by a qualified technician (electromechanical, electronic, mechanical, pneumatic, etc.).  
Contact Struers Service.

#### **Service check**

We offer a range of comprehensive maintenance plans to suit the requirements of our customers. This range of services is called ServiceGuard.

The maintenance plans include equipment inspection, replacement of wear parts, adjustments/calibration for optimal operation, and a final functional test.

## 9.7 Disposal

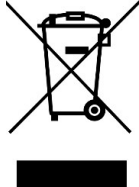

Equipment marked with a WEEE symbol contains electrical and electronic components and must not be disposed of as general waste.

Contact your local authorities for information on the correct method of disposal in accordance with national legislation.

For disposal of consumables and recirculation fluid, follow local regulations.

### 9.7.1 Environmental considerations



#### **WARNING**

In case of fire, alert bystanders, the fire brigade and cut power. Use a powder fire extinguisher. Do not use water.



#### **Note**

Swarf must be disposed of according to the current safety regulations for handling and disposal of swarf/ additive in the recirculation water.



#### **Note**

The recirculation water contains additive and swarf and may NOT be disposed of into a main drain.

Cooling fluid must be disposed of in compliance with local safety regulations.

# 10 Spare parts

## Technical questions and spare parts

If you have technical questions or when you order spare parts, state the year of production. The year of production is engraved on the cylinder frame.

For further information, or to check the availability of spare parts, contact Struers Service. Contact information is available on [Struers.com](https://www.struers.com).

# 11 Troubleshooting

Error	Cause	Action
Continuous, irregular wear on a grinding/polishing surface.	Coupling on the specimen holder or the specimen mover head is worn.	Replace the coupling. Contact Struers Service.
The MD surface is not read correctly.	The QR code is damaged or missing.	Either replace the MD surface or disable the automatic consumable detection by selecting <b>Configuration &gt; Consumables &gt; Configure MDs</b> . Then change the affected consumable position from <b>Automatic</b> to <b>Manual</b> .
	The MD surface is misplaced.	Try to reposition the MD surface. The MD surface should be placed flat against the MD changer with the QR facing downwards.
	The MD elevator mirror is dirty	If the mirror is dirty, it will affect the reading of the QR code. Clean the mirror according to the instructions in the maintenance section ( <a href="#">Clean the MD elevator mirrors ▶ 106</a> ).
The suspension or lubricant level is not read correctly.	The QR code is damaged or missing.	Replace the bottle or disable the automatic consumable detection by selecting <b>Configuration &gt; Consumables &gt; Configure bottles</b> . Then change the affected consumable position from <b>Automatic</b> to <b>Manual</b> .
	The bottle is misplaced.	Reposition the bottle. The bottle should be placed flat against the doser compartment with the QR facing the machine. Use the bottle placement guides for easier positioning.
	The Easy Connector is not correctly connected.	If the Easy Connector is not correctly pushed into place on the bottle, the hose might be interfering with the level reading.
Warning on low water pressure	The water supply is insufficient or disconnected/disabled.	Check that the external water supply is connected/enabled.

Error	Cause	Action
Warning on low air pressure	The air supply is insufficient or disconnected/disabled.	Check that the external air supply is connected/enabled.
The specimen holder is not detected.	The specimen holder is missing RFID.	If the RFID is missing, contact Struers Service.
	The RFID is damaged.	If the RFID is damaged, contact Struers Service.
	The drawer is not closed correctly.	Try to open and close the drawer again. If the door is closed, it can be opened by tapping the empty specimen holder icon.
An error mentions <b>STO</b> or <b>safe torque off</b> .	The safety system is not ready to run; a cover or door is open.	Check for open doors, drawers etc., and start the process again.

## 11.1 Access the work zone in case of power failure


**Note**

Only follow this procedure if you experience power failure.

If a holder is stuck in the machine due to power failure, the main safety cover and the MD-elevator cover can be manually unlocked.

**Procedure**

1. Make sure that the main switch is in the off position. See: [Overview of the machine ▶ 17](#)
2. Use the triangular key supplied with the machine to unblock the main safety cover and the MD elevator. See: [Check the packing list ▶ 28](#).

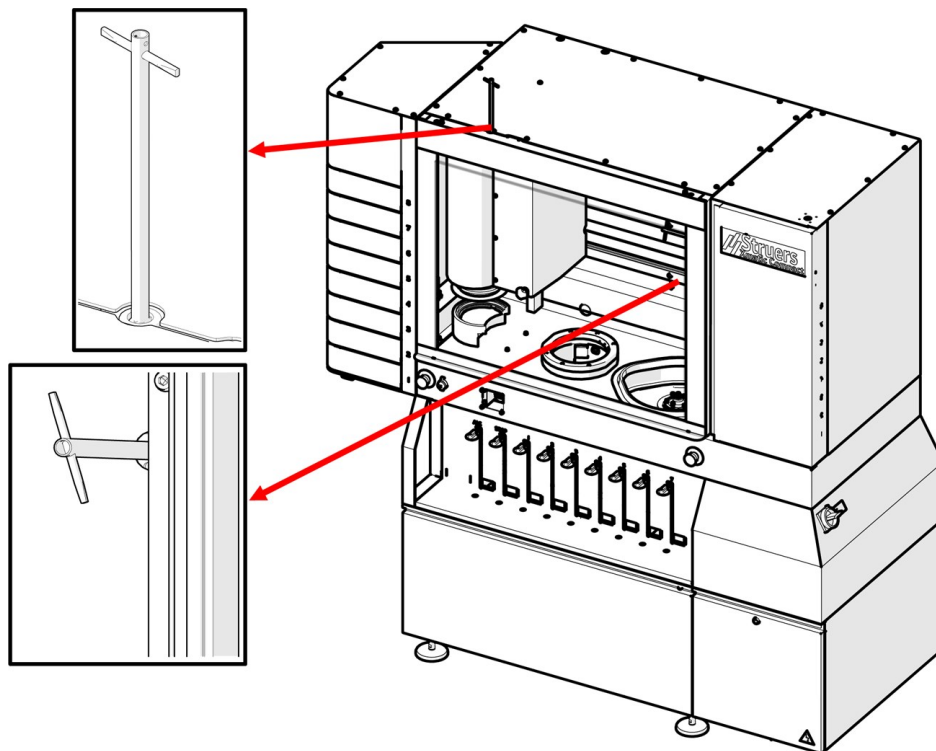


3. Turn the key clockwise to open the main safety cover and the MD elevator.

**CAUTION**

In case of power failure, do not use excessive force when you turn the triangular key to access the work zone. The lock could be damaged.



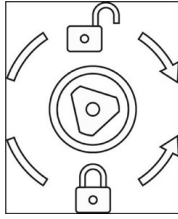

4. Before processing again, close the main safety cover and MD elevator and turn the key counter-clockwise.

# 12 Technical data

## 12.1 Technical data sheet - Xmatic Compact with vertical conveyor

<b>Capacity</b>	Individual specimens	No
	Specimen holder	Diameter: 140 mm for 250 mm MD disc Diameter: 160 mm for 300 mm MD disc
<b>MD grinding and polishing station</b>	Diameter	250 mm or 300 mm
	Rotational speed	50 - 600 rpm (1000 rpm when spin-drying the disc)
	Rotational direction	Clockwise
<b>Motor power</b>		
	Continuous (s1)	1.5 kW

<b>Specimen mover</b>	<b>Specimen holder</b>	Only applicable with RFID-tag holders
	Max. weight	4 kg (8.8 lbs) incl. specimens
	Max. specimen height	40 mm (1.6")
	Max. specimen protrusion under holder	6 mm (0.2")
	Force	50 - 500 N in steps of 10 N
	Force accuracy	+/-10% up to 100N, +/-10N on higher values
	<b>Rotational speed</b>	
	in process	50 - 300 rpm, variable in steps of 10
	when drying	1200 rpm
	Rotational direction	Counter-clockwise, Clockwise
	Motor	1.1 kW
	Torque	7.3 Nm @ 150 rpm
<b>Vertical conveyor</b>	Number of specimen holders	8
<b>MD elevator</b>	Number of MD surfaces	8
<b>Cleaning station</b>	High pressure water	40 bar (580 psi)
	Alcohol and soap	Yes

<b>Features</b>	Material removal	0.05 mm - 6 mm (0.002 - 0.2") on MD grinding and polishing station
	Dressing of MD surfaces	Automatic (diamond tip/aluminum oxide stick)
	Automatic dosing	7 pumps for OP or DP suspension
		1 alcohol ejector for cleaning station
1 soap ejector for cleaning station		
	Automatic clean of dosing tubes	
<b>Options</b>	Ultrasonic cleaning	Yes
	Recirculation for MD grinding/polishing station	Yes
<b>Software and electronics</b>	Touchscreen	Capacitive
	Display	LCD, 12.1" (1280 x 800)
<b>Safety standards/directives/legislation</b>	See the Declaration of Conformity/Instruction manual.	
<b>REACH</b>	For information about REACH, contact your local Struers office.	
<b>Operating environment</b>	<b>Surrounding temperature</b>	
	During operation	5 - 40°C (41 - 104°F)
	During transport	-25°C - 55°C (transport)
		-25°C - 70°C (max. 24 hours during transport)
Humidity	35 - 85 % RH non-condensing	
<b>Water supply (tap water)</b>	Flow	Min. 10 l/m (2.6 gmp)
	Water inlet, connection	3/4"
	Pressure	2 - 4 bar (29 - 58 psi)

<b>Waste water outlet</b>	Diameter	50 mm (1.97")
	Outlet height	50 cm (19.7") above the floor
	Max. distance to drain	600 cm (20")
	Slope	Min. 8%
<b>Compressed air supply</b>	Pressure	6 - 9.9 bar (87 - 143 psi)
	Flow	Min. 200 l/m (53 gpm)
	Recommended quality	Class-3, as specified in ISO 8573-1
<b>Power supply</b>	Voltage/frequency	220 V/430 V +/-10% (50/60 Hz)
	Power inlet min.	15 A
	<b>Power</b>	
	Max load	2.4 kW
	Nominal load	1.5 kW
	Idle	250 W
	<b>Current</b>	
	Nominal 220V	6 A
	Nominal 430 V	4 A
	Max. 220 V	15 A
	Max. 430 V	8 A
	Current, largest load	6.5 A (1 ph.)
	SCCR	25 kA
	Ik min	180 A
	<b>Residual Current Circuit Breaker (RCCB)</b>	The machine has no more than 6mA residual current. RCCB type A can be used.
	<b>Power supply connection terminals</b>	Max. conductor size 10 mm <sup>2</sup> /AWG 6
<b>Exhaust</b>	Diameter	100 mm (4")
	Minimum capacity	250 m <sup>3</sup> /h (8830 ft <sup>3</sup> /h)

<b>Dimensions and weight</b>	Width	182 cm (71.7")
	Depth	75 cm (29.5")
	Height	189 cm (74.4")
	Height (with open cover)	244 cm (96.0")
	Weight	760 kg (1676 lbs)
<b>Safety Circuit Categories/Performance Level</b>	SF-1 Emergency stop	PL c, Category 1 Stop category 0
	SF-4 Limited speed function, mover head	PL d, Category 3 Stop category 0
	SF-5 Main safety cover interlock, hazardous movements	PL d, Category 3 Stop category 0
	SF-5A Main safety cover interlock, water and ethanol	PL c, Category 1 Stop category 0
	SF-6 Main safety cover interlock with locking device	PL a, Category b Stop category 0
	SF-7 MD-elevator door locking device	PL d, Category 3 Stop category 0
	SF-8 MD-elevator door locking device	PL c, Category 1 Stop category 0
	SF-9 Vertical conveyor doors interlock	PL d, Category 3 Stop category 0
	SF-10 Recirculation unit doors interlock, MD station	PL b, Category 1 Stop category 0
	SF-12 Alcohol exhaust timer	PL b, Category 1 Stop category 0
<b>Noise level</b>	A-weighted sound emission pressure level at workstations	LpA = 64.4 dB(A) (measured value). Uncertainty K = 4 dB

<b>Ultrasonic noise level</b>	Equivalent ultrasound sound pressure level (equivalent level of ultrasound)	L <sub>teq</sub> , T=95.2 dB (measured value). Uncertainty K = 2 dB
<b>Noise emission level</b>	<p>The figures quoted are emission levels and are not necessarily safe working levels. While there is a correlation between the emission and exposure levels, this cannot be used reliably to determine whether or not further precautions are required. Factors that influence the actual level of exposure of the workforce include characteristics of the work room, the other sources of noise, etc., i.e. the number of machines and other adjacent processes.</p> <p>Also, the permissible exposure level can vary from country to country. This information, however, will enable the user of the machine to make a better evaluation of the hazard and risk.</p>	

## 12.2 Technical data sheet - Xmatic Compact without vertical conveyor

<b>Capacity</b>	Individual specimens	No
	Specimen holder	Diameter: 140 mm for 250 mm MD disc Diameter: 160 mm for 300 mm MD disc
<b>MD grinding and polishing station</b>	Diameter	250 (10") mm or 300 mm (12")
	Rotational speed	50 - 600 rpm (1000 rpm when spin-drying the disc)
	Rotational direction	Clockwise
<b>Motor power</b>		
	Continuous (s1)	1.5 kW

<b>Specimen mover</b>	<b>Specimen holder</b>	Only applicable with RFID-tag holders
	Max. weight	4 kg (8.8 lbs) incl. specimens
	Max. specimen height	40 mm (1.6")
	Max. specimen protrusion under holder	6 mm (0.2")
	Force	50 - 500 N in steps of 10 N
	Force accuracy	+/-10% up to 100N, +/- 10N on higher values
	<b>Rotational speed</b>	
	in process	50 - 300 rpm, variable in steps of 10
	when drying	1200 rpm
	Rotational direction	Counter-clockwise, Clockwise
	Motor	1.1 kW
	Torque	7.3 Nm @ 150 rpm
<b>MD elevator</b>	Number of MD surfaces	8
<b>Cleaning station</b>	High pressure water	40 bar (580 psi)
	Alcohol and soap	Yes
<b>Features</b>	Material removal	0.05 mm - 6 mm (0.002 - 0.2") on MD grindig and polishing station
	Dressing of MD surfaces	Automatic (diamond tip/aluminum oxide stick)
	Automatic dosing	7 pumps for OP or DP suspension
		1 alcohol ejector for cleaning station
		1 soap ejector for cleaning station
		Automatic cleaning of dosing tubes



<b>Options</b>	Ultrasonic cleaning	Yes
	Recirculation for MD grinding/polishing station	Yes
<b>Software and electronics</b>	Touchscreen	Capacitive
	Display	LCD, 12.1" (1280 x 800)
<b>Safety standards/directives/legislation</b>	See the Declaration of Conformity/Instruction manual.	
<b>REACH</b>	For information about REACH, contact your local Struers office.	
<b>Operating environment</b>	<b>Surrounding temperature</b>	
	During operation	5 - 40°C (41 - 104°F)
	During transport	-25°C - 55°C (transport) -25°C - 70°C (max. 24 hours during transport)
	Humidity	35 - 85 % RH non-condensing
<b>Water supply (tap water)</b>	Flow	Min. 10 l/m (2.6 gpm)
	Water inlet, connection	3/4"
	Pressure	2 - 4 bar (29 - 58 psi)
<b>Waste water outlet</b>	Diameter	50 mm (1.97")
	Outlet height	50 cm (19.7") above the floor
	Max. distance to drain	600 cm (20')
	Slope	Min. 8%
<b>Compressed air supply</b>	Pressure	6 - 9.9 bar (87 - 143 psi)
	Flow	Min. 200 l/m (53 gpm)
	Recommended quality	Class-3, as specified in ISO 8573-1

<b>Power supply</b>	Voltage/frequency	220 V/430 V +/-15% (50/60 Hz)
	Power inlet	15 A
	<b>Power</b>	
	Max load	2.4 kW
	- Nominal load	1.5 kW
	- Idle	250 W
	<b>Current</b>	
	Nominal 220 V	6 A
	Nominal 430 V	4 A
	Max. 220 V	15 A
	Max. 430 V	8 A
	Current, largest load	6.5 A (1 ph.)
	SCCR	25 kA
	Ik min	180 A
	<b>Residual Current Circuit Breaker (RCCB)</b>	The machine has no more than 6mA residual current. RCCB type A can be used.
<b>Power supply connection terminals</b>	Max. conductor size 10 mm <sup>2</sup> /AWG 6	
<b>Exhaust</b>	Diameter	100 mm (4")
	Minimum capacity	250 m <sup>3</sup> /h (8830 ft <sup>3</sup> /h)
<b>Dimensions and weight</b>	Width	149 cm (586.6")
	Depth	75.0 cm (29.5")
	Height	189.0 cm (74.4")
	Height (with open cover)	244.0 cm (96.0")
	Weight	690 kg (1522 lbs)

<b>Safety Circuit Categories/Performance Level</b>	SF-1 Emergency stop	PL c, Category 1 Stop category 0
	SF-4 Limited speed function, mover head	PL d, Category 3 Stop category 0
	SF-5 Main safety cover interlock, hazardous movements	PL c, Category 3 Stop category 0
	SF-5A Main safety cover interlock, water and ethanol	PL d, Category 1 Stop category 0
	SF-6 Main safety cover interlock with locking device	PL a, Category b Stop category 0
	SF-7 MD-elevator door locking device	PL d, Category 3 Stop category 0
	SF-8 MD-elevator door locking device	PL c, Category 1 Stop category 0
	SF-10 Recirculation unit doors interlock, MD station	PL b, Category 1 Stop category 0
	SF-12 Alcohol exhaust timer	PL b, Category 1 Stop category 0
	<b>Noise level</b>	A-weighted sound emission pressure level at workstations

<b>Ultrasonic noise level</b>	Equivalent ultrasound sound pressure level (equivalent level of ultrasound)	L <sub>teq</sub> , T=95.2 dB (measured value). Uncertainty K = 2 dB
<b>Noise emission level</b>	<p>The figures quoted are emission levels and are not necessarily safe working levels. While there is a correlation between the emission and exposure levels, this cannot be used reliably to determine whether or not further precautions are required. Factors that influence the</p> <p>actual level of exposure of the workforce include characteristics of the work room, the other sources of noise, etc., i.e. the number of machines and other adjacent processes. Also, the permissible exposure level can vary from country to country. This information, however, will</p> <p>enable the user of the machine to make a better evaluation of the hazard and risk.</p>	

### 12.3 Volatile memory

Volatile memory						
Target data	Type	Size	Battery backup	User accessible	System accessible	Clearing procedure
Sytem on module Compulab SOM-AM57x	RAM	2 GB	No	No	Yes	Cycle power
GUI computer UDOO BOLT V3	RAM	8 GB	No	No	Yes	Cycle power
RFID controller FEIG ISC.LRM1002-E	RAM	128 GB	No	No	No	Cycle power
Safety system Beckhoff EP1957-0022	N/A	N/A	No	No	No	Cycle power
Ext. IO system Beckhoff CX8190	RAM	512 GB	No	No	No	Cycle power

<b>Non-volatile memory</b>						
<b>Target data</b>	<b>Type</b>	<b>Size</b>	<b>Battery backup</b>	<b>User accessible</b>	<b>System accessible</b>	<b>Clearing procedure</b>
System on Module Compulab SOM-AM57x	Flash	32 GB	No			
Methods	Default User			No Yes	Yes Yes	No Factory reset
Consumables	User Default			No Yes	No No	No Factory reset
Statistics Authentication Configuration data Calibration data				Yes Yes No No	No No No No	Factory reset Factory reset No No
Cryptographic controller Maxim MAXQ1065	Flash	8 KB	No	No	Yes	No
GUI computer UDOO BOLT V3	Flash	32 GB	No	No	Yes	No
RFID controller FEIG ISC.LRM1002-E	Flash	512 GB	No	No	No	No
Safety system Beckhoff EP1957-0022	N/A	N/A	No	No	No	No
Ext. IO system Beckhoff CX8190	Flash	512 GB	No	No	No	No

## 12.4 Terms and definitions - volatility

### Cycle power

The process of interrupting the power supply to the machine and its components and allowing for adequate discharge. This process includes a complete shutdown of any built-in computer.

### Volatile memory

Volatile memory requires power to keep the stored information. When power is interrupted, the contents of the volatile memory are lost.

This type of type of memory usually contains application-specific data, such as working parameters for processes, measured values, and temporary SW runtime data.

### Non-volatile memory

Non-volatile memory does not require power to keep the stored information. When power is interrupted, the contents of the non-volatile memory are preserved.

This type of memory usually contains information necessary to boot the machine, machine-specific application configuration and methods data.

### User-accessible memory

The user can access the memory of a component and store random information using the user interface on the machine.

### System-accessible memory

The memory can be accessed from the host and information can be stored without having to physically alter the machine.

### Clearing

Clearing is a logical approach used to sanitize data in all user-accessible storage locations to protect data against simple non-invasive data recovery methods that use the user interface on the machine.

### Factory reset

A factory reset clears all data stored in the user-accessible storage locations. The machine is set to default values.

## 12.5 Safety Related Parts of the Control System (SRP/CS)



### WARNING

The machine and its parts have been designed to operate 16 hours daily/220 days annually. If used as indicated, the safety critical components must be replaced after a maximum lifetime of 20 years.

If you use the machine for longer periods of time than indicated, the safety critical Contact Struers Service.

**Note**

SRP/CS (safety-related parts of a control system) are parts that have an influence on safe operation of the machine.

**Note**

Replacement of safety critical components must only be performed by a Struers engineer or a qualified technician (electromechanical, electronic, mechanical, pneumatic, etc.).  
Safety critical components must only be replaced by components with at least the same safety level.  
Contact Struers Service.

**Parts**

Safety related part	Manufacturer	Manufacturer catalog no.	Electrical ref.	Struers catalog no.
PLC output	Beckhoff	EL2904	F15, F16, F17	2KS02904
PLC input	Beckhoff	EL1904	F18, F19	2KS01904
PLC input	Beckhoff	EP1918-0002	F20	2KS01918
PLC safety controller input/output	Beckhoff	EP1957-0022	F21	2KS01957
Emergency stop	Omron	A22NE-M-N	S01, S02	2SA10500
		Latching mushroom head		
Emergency stop	Omron	A22NZ-H-02	S01, S02	2SA41700
		Mounting Latching mushroom head		
Emergency stop	Omron	A22NZ-S-P1BN	S01, S02	2SB10111
		Switch block 1NC		
Magnetic safety sensor	SICK	IME2S12-04B4DW2	B38, B42, B43, B44	2SS00812
Motor inverter w. STO and SLS	Schneider Electric	ATV320U15N4B	Q02, Q03	PU23415
Motor inverter w. STO	Schneider Electric	ATV320U04N4B	Q05	PU23404
Stepper motor w. STO	JVL	MIS232S1P6H4S6	M06, M07, M08, M09, M12, M13	2MI10231
Door lock	Schmersal	AZM 161SK-1212RKED024	F30, F31	2SS00124
Safety contactor light emitter	SICK	L41S-11MA1A	B40	2HQ00110
Safety contactor light receiver	SICK	L41E-11MA1A	B41	2HQ00120
Water valve	SMC	V114A	K06, K07	2YM10126
Water valve	Sirai	D132V23Z130A13 24V DC	K30	2YM10132
Safety Air Valve	SMC	EVT307-5D-01F-Q	K01	2YM10030
High pressure pump contactor	Omron	J7KNA-09-01R 24D	K43	2KM70909

## 12.6 Diagrams


**Note**

If you want to view specific information in detail, see the online version of this manual.

Title	No.
Pneumatic circuit diagram	<a href="#">16881001</a> ▶ <a href="#">137</a>
Water diagram	<a href="#">16881000</a> ▶ <a href="#">138</a>
Block diagram	<a href="#">16893050</a> ▶ <a href="#">139</a>
Circuit diagram	See the diagram number on the type plate of the equipment, and contact Struers Service via <a href="https://www.struers.com">Struers.com</a> .




16881001

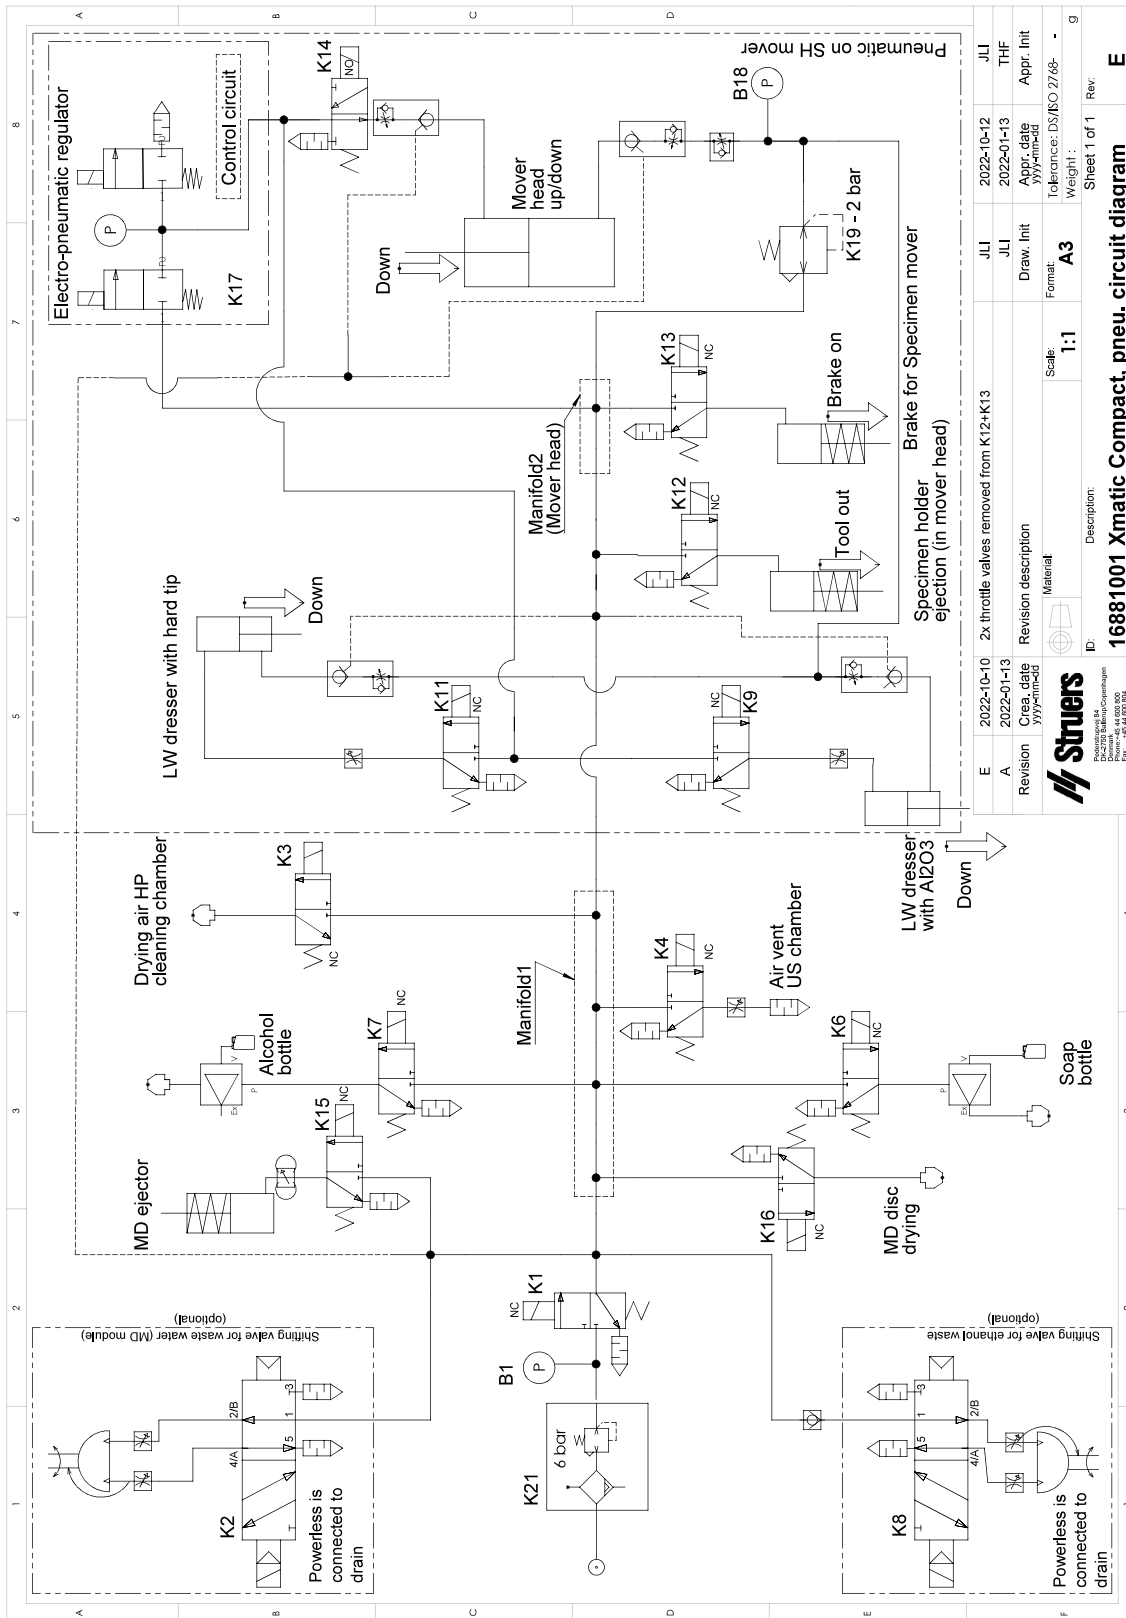

E	2022-10-10	2x throttle valves removed from K12+K13	JLI	2022-10-12	JLI
A	2022-01-13	Revision description	JLI	2022-01-13	THF
Revision	Cre. date yyyy-mm-dd	Material	Draw. Init	Appr. date yyyy-mm-dd	Appr. Init
			Format: A3	Tolerance: DS/ISO 2768-	
			Scale: 1:1	Weight:	
			ID:	Description:	Sheet 1 of 1 Rev:
<b>16881001 Xmatic Compact, pneu. circuit diagram</b>					



16881000

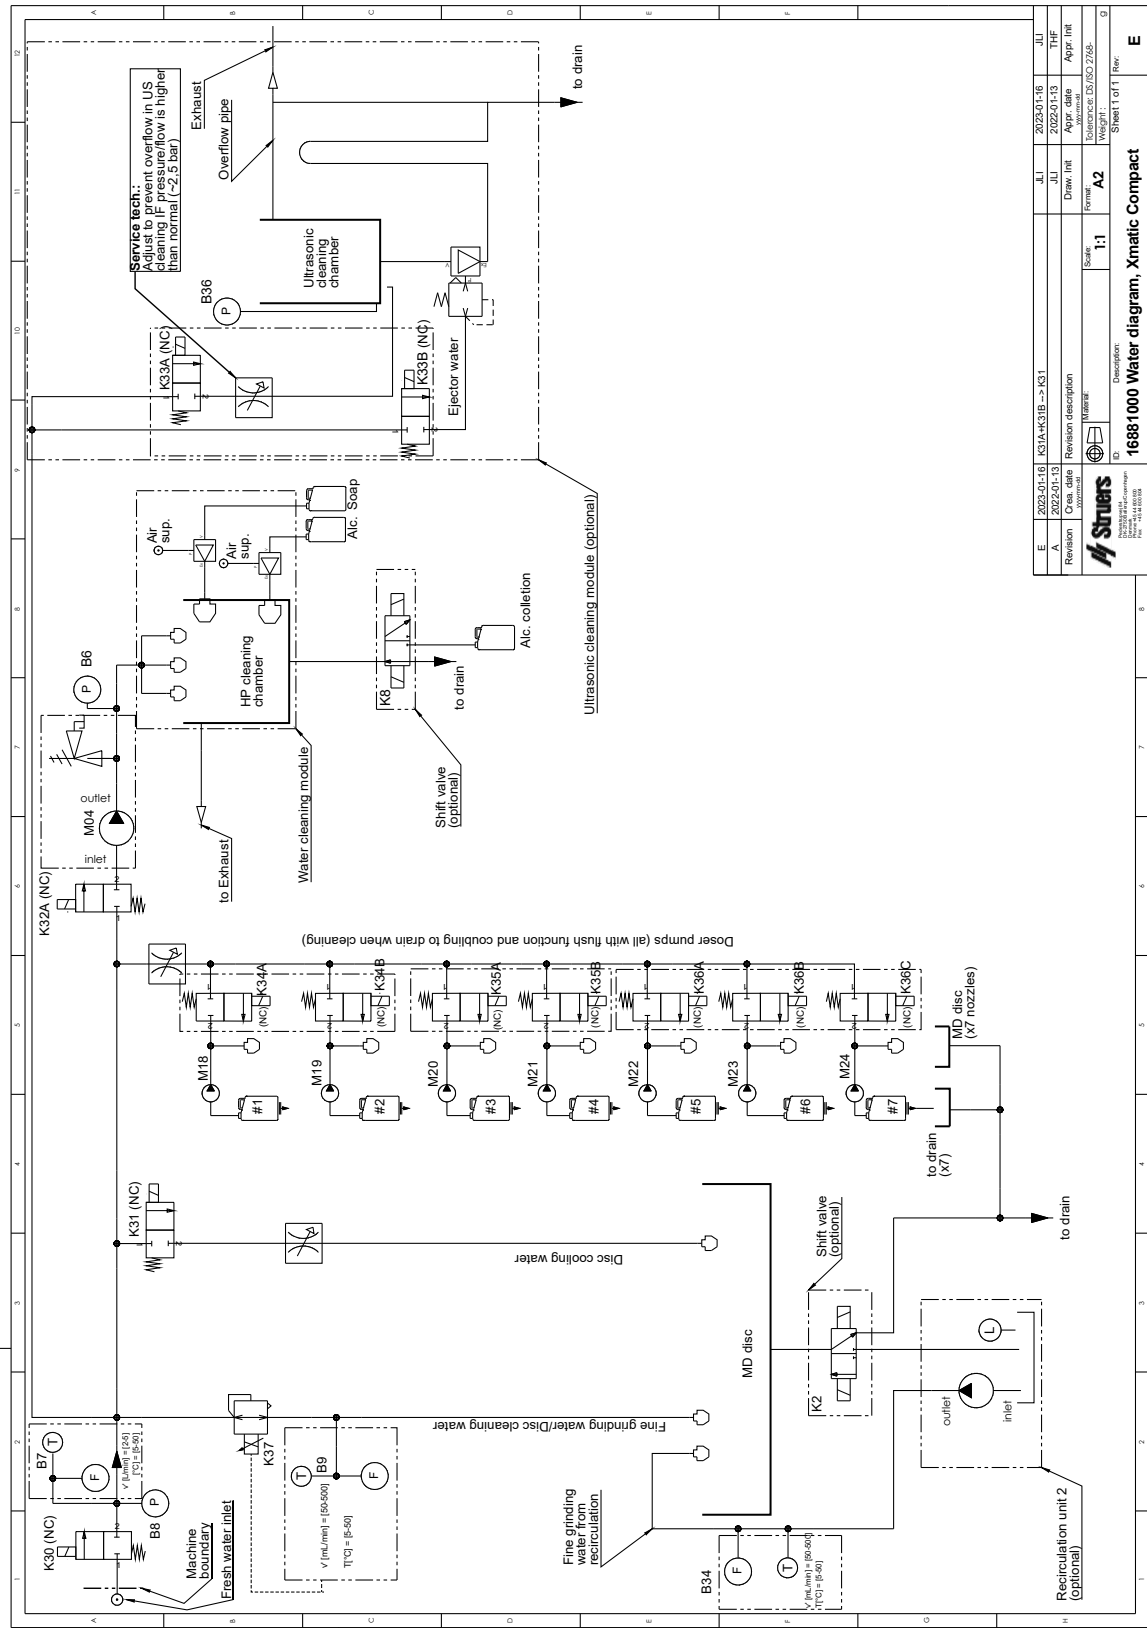


Revision	2023-01-16	K31A+K31B → K31	JULI	2023-01-16	JULI
Revision	2022-01-13	Revision description	2022-01-13	2022-01-13	JULI
Drawn	2022-01-13	AP/ST/ST/ST	2022-01-13	2022-01-13	JULI
Formal	1:1	Scale	1:1	1:1	A2
Source		Source		Source	ES/ES/2768-
Weight		Weight		Weight	
Sheet 1 of 1		Sheet 1 of 1		Sheet 1 of 1	

**16881000 Water diagram, Xmatic Compact**

**Siemens**  
 Energy Efficiency  
 Power Line & Distribution  
 90000 Siemens AG  
 Postfach 10 15 63  
 90020 Erlangen, Germany

16893050

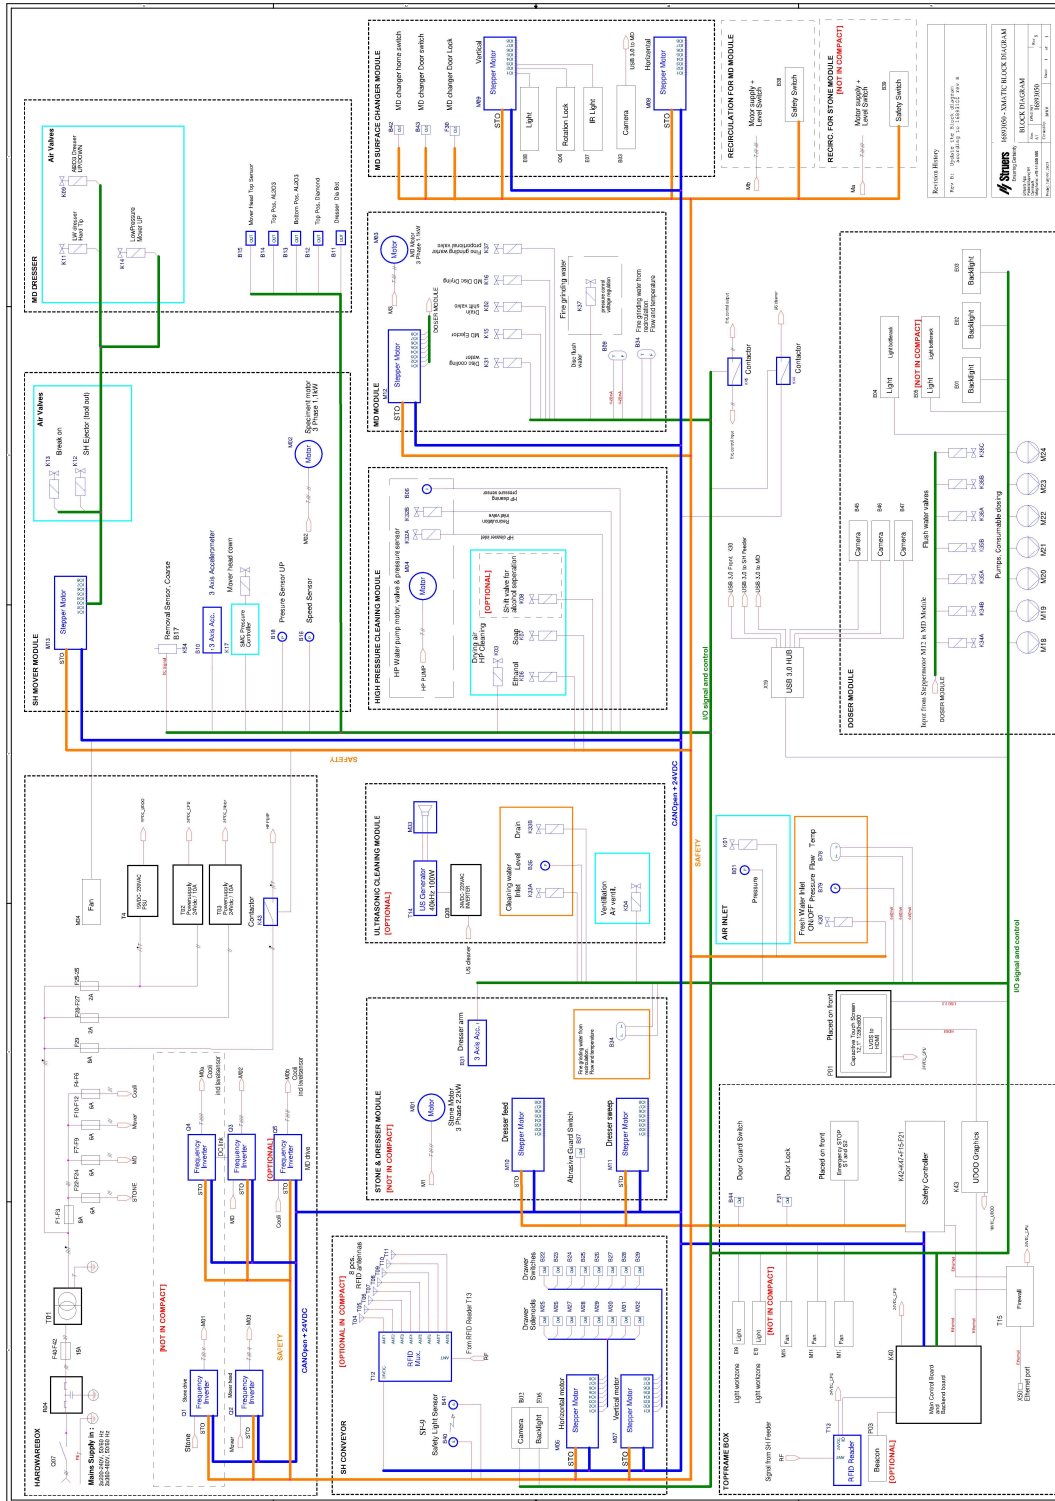

## 12.7 Legal and regulatory information

### FCC notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

# 13 Manufacturer

Struers ApS  
Pederstrupvej 84  
DK-2750 Ballerup, Denmark  
Telephone: +45 44 600 800  
Fax: +45 44 600 801  
[www.struers.com](http://www.struers.com)

### Responsibility of the manufacturer

The following restrictions should be observed, as violation of the restrictions may cause cancellation of Struers legal obligations.

The manufacturer assumes no responsibility for errors in the text and/or illustrations in this manual. The information in this manual is subject to change without notice. The manual may mention accessories or parts not included in the supplied version of the equipment.

The manufacturer is to be considered responsible for effects on safety, reliability, and performance of the equipment only if the equipment is used, serviced, and maintained in accordance with the instructions for use.

# Declaration of Conformity

Manufacturer	Struers ApS • Pederstrupvej 84 • DK-2750 Ballerup • Denmark		
Name	Xmatic Compact		
Function	Grinding/polishing equipment		
Type	Grinding/Polishing equipment with MD surfaces (MD-Primo, MD-Piano, MD-Molto, MD-Mezzo, MD-Alto)		
Cat. no.	3 x 200-240 V, 50-60 Hz:	06886129	
		06886229, with ultrasonic cleaning	
		06886329, with vertical conveyor	
		06886429, with ultrasonic cleaning and vertical conveyor	
	3 x 380-480 V, 50-60 Hz:	06886146	
		06886246, with ultrasonic cleaning	
		06886346, with vertical conveyor	
		06886446, with ultrasonic cleaning and vertical conveyor	
Serial no.			



Module H, according to global approach



We declare that the product mentioned is in conformity with the following legislation, directives and standards:

<b>2006/42/EC</b>	EN ISO 12100:2010, EN ISO 13849-1:2015, EN ISO 13849-2:2012, EN ISO 13850:2015, EN 14118:2018, EN 60204-1:2018
<b>2009/125/EC</b>	
<b>2011/65/EU + 2015/863/EU</b>	EN 63000:2018
<b>2014/30/EU</b>	EN 61000-3-2:2014, EN 61000-3-3:2013, EN 61000-6-2:2005, EN 61000-6-3:2007, EN 61000-3-11:2001, EN 61000-3-12:2012
<b>2014/53/EU</b>	EN 300330:2017
<b>Additional standards</b>	NFPA 70, NFPA 79, FCC 47 CFR Part 15 Subpart B

Authorized to compile technical file/  
Authorized signatory

Date: [Release date]

en For translations see  
bg За преводи вижте  
cs Překlady viz  
da Se oversættelser på  
de Übersetzungen finden Sie unter  
el Για μεταφράσεις, ανατρέξτε στη διεύθυνση  
es Para ver las traducciones consulte  
et Tõlked leiate aadressilt  
fi Katso käännökset osoitteesta  
fr Pour les traductions, voir  
hr Za prijevode idite na  
hu A fordítások itt érhetők el  
it Per le traduzioni consultare  
ja 翻訳については、  
lt Vertimai patalpinti  
lv Tulkojumus skatīt  
nl Voor vertalingen zie  
no For oversettelser se  
pl Aby znaleźć tłumaczenia, sprawdź  
pt Consulte as traduções disponíveis em  
ro Pentru traduceri, consultați  
se För översättningar besök  
sk Preklady sú dostupné na stránke  
sl Za prevode si oglejte  
tr Çeviriler için bkz  
zh 翻译见

[www.struers.com/Library](http://www.struers.com/Library)